

Prestige 314 PLUS

*Broadband Sharing Gateway
with 4-Port Switch*

User's Guide

Version 3.60
October 2002

ZyXEL

TOTAL INTERNET ACCESS SOLUTION

Copyright

Copyright © 2002 by ZyXEL Communications Corporation.

The contents of this publication may not be reproduced in any part or as a whole, transcribed, stored in a retrieval system, translated into any language, or transmitted in any form or by any means, electronic, mechanical, magnetic, optical, chemical, photocopying, manual, or otherwise, without the prior written permission of ZyXEL Communications Corporation.

Published by ZyXEL Communications Corporation. All rights reserved.

Disclaimer

ZyXEL does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent rights nor the patent rights of others. ZyXEL further reserves the right to make changes in any products described herein without notice. This publication is subject to change without notice.

Trademarks

ZyNOS (ZyXEL Network Operating System) is a registered trademark of ZyXEL Communications, Inc. Other trademarks mentioned in this publication are used for identification purposes only and may be properties of their respective owners.

Federal Communications Commission (FCC) Interference Statement

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operations.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

If this equipment does cause harmful interference to radio/television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and the receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Notice

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information for Canadian Users

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective operation and safety requirements. The Industry Canada label does not guarantee that the equipment will operate to a user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

For their own protection, users should ensure that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution

Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

Note

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the radio interference regulations of Industry Canada.

Declaration of Conformity

We, the Manufacturer/Importer,

ZyXEL Communications Corp.

No. 6, Innovation Rd. II,

Science-Based Industrial Park,

Hsinchu, Taiwan, 300 R.O.C

declare that the product

Prestige 314 PLUS

is in conformity with:

STANDARD	STANDARD ITEM	VERSION
EN 55022	Radio disturbance characteristics – Limits and method of measurement.	1998
EN 61000-3-2	Disturbance in supply system caused by household appliances and similar electrical equipment “Harmonics”.	1995
EN 61000-3-3	Disturbance in supply system caused by household appliances and similar electrical equipment “Voltage fluctuations”.	1995
EN 61000-4-2	Electrostatic discharge immunity test – Basic EMC Publication	1995
EN 61000-4-3	Radiated, radio-frequency, electromagnetic field immunity test	1996
EN 61000-4-4	Electrical fast transient / burst immunity test - Basic EMC Publication	1995
EN 61000-4-5	Surge immunity test	1995
EN 61000-4-6	Immunity to conducted disturbances, induced by radio-frequency fields	1996
EN 61000-4-8		1993
EN61000-4-11	Voltage dips, short interruptions and voltage variations immunity tests	1994

ZyXEL Limited Warranty

ZyXEL warrants to the original end user (purchaser) that this product is free from any defects in materials or workmanship for a period of up to two years from the date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, ZyXEL will, at its discretion, repair or replace the defective products or components without charge for either parts or labor, and to whatever extent it shall deem necessary to restore the product or components to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal value, and will be solely at the discretion of ZyXEL. This warranty shall not apply if the product is modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions.

Note

Repair or replacement, as provided under this warranty, is the exclusive remedy of the purchaser. This warranty is in lieu of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular use or purpose. ZyXEL shall in no event be held liable for indirect or consequential damages of any kind of character to the purchaser.

To obtain the services of this warranty, contact ZyXEL's Service Center for your Return Material Authorization number (RMA). Products must be returned Postage Prepaid. It is recommended that the unit be insured when shipped. Any returned products without proof of purchase or those with an out-dated warranty will be repaired or replaced (at the discretion of ZyXEL) and the customer will be billed for parts and labor. All repaired or replaced products will be shipped by ZyXEL to the corresponding return address, Postage Paid. This warranty gives you specific legal rights, and you may also have other rights that vary from country to country.



Online Registration

Don't forget to register your ZyXEL product (fast, easy online registration at www.zyxel.com) for free future product updates and information.

Customer Support

Please have the following information ready when you contact customer support.

- Product model and serial number.
- Information in **Menu 24.2.1 –System Information**.
- Warranty Information.
- Date that you received your device.
- Brief description of the problem and the steps you took to solve it.

METHOD LOCATION	E-MAIL SUPPORT/SALES	TELEPHONE/FAX	WEB SITE/ FTP SITE	REGULAR MAIL
WORLDWIDE	Support@zyxel.com.tw Support@europe.zyxel.com Sales@zyxel.com.tw	+886-3-578-3942 +886-3-578-2439	www.zyxel.com www.europe.zyxel.com ftp.europe.zyxel.com	ZyXEL Communications Corp., 6 Innovation Road II, Science- Based Industrial Park, Hsinchu, 300, Taiwan
NORTH AMERICA	Support@zyxel.com Sales@zyxel.com	+1-714-632-0882 800-255-4101 +1-714-632-0858	www.zyxel.com ftp.zyxel.com	ZyXEL Communications Inc., 1650 Miraloma Avenue, Placentia, CA 92870, U.S.A.
SCANDINAVIA	Support@zyxel.dk Sales@zyxel.dk	+45-3955-0700 +45-3955-0707	www.zyxel.dk ftp.zyxel.dk	ZyXEL Communications A/S, Columbusvej 5, 2860 Soeborg, Denmark
GERMANY	Support@zyxel.de Sales@zyxel.de Sales@zyxel.com.my	+49-2405-6909-0 +49-2405-6909-99 +603-795-34-407	www.zyxel.de	ZyXEL Deutschland GmbH. Adenauerstr. 20/A4 D-52146 Wuerselen, Germany

Table of Contents

Copyright.....	ii
Federal Communications Commission (FCC) Interference Statement.....	iii
Information for Canadian Users.....	iv
ZyXEL Limited Warranty.....	vi
Customer Support.....	vii
List of Figures.....	xii
List of Diagrams.....	xvi
List of Charts.....	xvi
List of Tables.....	xvii
Preface.....	xix
Chapter 1 Getting to Know Your Prestige 314 PLUS.....	1-1
1.1 The Prestige Broadband Sharing Gateway With 4-Port Switch.....	1-1
1.2 Features of the Prestige 314 PLUS.....	1-1
1.3 Broadband Internet Access via Cable or DSL Modem.....	1-4
1.4 Internet Access Configuration Checklist.....	1-4
Chapter 2 Hardware Installation & Initial Setup.....	2-1
2.1 Front Panel LEDs.....	2-1
2.2 Prestige Rear Panel and Connections.....	2-2
2.3 Connecting Your Prestige.....	2-3
2.4 Additional Installation Requirements.....	2-4
2.5 Turning on Your Prestige.....	2-5
2.6 Navigating the SMT Interface.....	2-6
2.7 Changing the System Password.....	2-8
2.8 General Setup.....	2-9
2.9 WAN Setup.....	2-14
2.10 LAN Setup.....	2-15
Chapter 3 Internet Access.....	3-1
3.1 TCP/IP and DHCP for LAN.....	3-1
3.2 TCP/IP and DHCP Ethernet Setup.....	3-6

3.3	Internet Access Setup	3-10
3.4	Internet Test Setup.....	3-14
3.5	Basic Setup Complete	3-15
Chapter 4	Network Address Translation (NAT).....	4-1
4.1	Introduction	4-1
4.2	Using NAT	4-6
4.3	NAT Setup.....	4-8
4.4	General NAT Examples.....	4-18
Chapter 5	Remote Node Setup.....	5-1
5.1	Remote Node Profile.....	5-1
5.2	Editing TCP/IP Options (with Ethernet Encapsulation).....	5-7
5.3	Remote Node Filter	5-11
Chapter 6	IP Static Route Setup.....	6-1
6.1	IP Static Route Setup.....	6-2
Chapter 7	Filter Configuration.....	7-1
7.1	About Filtering.....	7-1
7.2	Configuring a Filter Set.....	7-4
7.3	Example Filter.....	7-14
7.4	Filter Types and NAT	7-17
7.5	Applying a Filter and Factory Defaults.....	7-18
Chapter 8	UPnP	8-1
8.1	Introducing Universal Plug and Play.....	8-1
8.2	UPnP and ZyXEL.....	8-2
8.3	Installing UPnP in Windows Example	8-4
8.4	Using UPnP in Windows XP Example.....	8-6
Chapter 9	SNMP Configuration	9-1
9.1	About SNMP.....	9-1
9.2	Supported MIBs	9-3
9.3	SNMP Configuration.....	9-3
9.4	SNMP Traps.....	9-4
Chapter 10	Traffic Redirect.....	10-1
10.1	Traffic Redirect.....	10-1

Chapter 11 System Information & Diagnosis	11-1
11.1 System Status.....	11-1
11.2 System Information and Console Port Speed.....	11-3
11.3 Log and Trace	11-6
11.4 Diagnostic	11-11
Chapter 12 Firmware and Configuration File Maintenance	12-1
12.1 Filename Conventions	12-1
12.2 Backup Configuration.....	12-2
12.3 Restore Configuration.....	12-8
12.4 Uploading Firmware and Configuration Files	12-11
Chapter 13 System Maintenance & Information	13-1
13.1 Command Interpreter Mode	13-1
13.2 Call Control Support.....	13-2
13.3 Time and Date Setting	13-5
Chapter 14 Remote Management	14-1
14.1 Telnet	14-1
14.2 FTP	14-1
14.3 Web.....	14-1
14.4 DNS (Domain Name System).....	14-2
14.5 SNMP (Simple Network Management Protocol)	14-2
14.6 Remote Management Setup	14-2
14.7 Remote Management and NAT.....	14-4
14.8 System Timeout	14-4
Chapter 15 Call Scheduling	15-1
15.1 Introduction	15-1
15.2 Schedule Setup	15-1
15.3 Schedule Set Setup	15-2
15.4 Applying Schedule Sets to Remote Nodes	15-4
Chapter 16 Troubleshooting	16-1
16.1 Problems Starting Up the Prestige	16-1
16.2 Problems with the LAN Interface.....	16-1
16.3 Problems with the WAN Interface	16-2

16.4 Problems with Internet Access 16-3
Appendix A PPPoE A
Appendix B PPTP D
Appendix D Boot Commands G
Appendix E NetBIOS Filter Commands I
Appendix F Power Adapter Specifications P
Appendix F Hardware Specifications Q
Index S

List of Figures

Figure 1-1 Internet Access Application	1-4
Figure 2-1 Front Panel	2-1
Figure 2-2 Prestige Rear Panel Connections	2-2
Figure 2-3 Initial Screen	2-5
Figure 2-4 Password Screen	2-5
Figure 2-5 Prestige Main Menu	2-7
Figure 2-6 Menu 23 — System Security	2-8
Figure 2-7 Menu 1 — General Setup	2-11
Figure 2-8 Configure Dynamic DNS	2-12
Figure 2-9 Menu 2 — WAN Setup	2-14
Figure 2-10 Menu 3 — LAN Setup	2-15
Figure 2-11 Menu 3.1 — LAN Port Filter Setup	2-16
Figure 3-1 Physical Network	3-5
Figure 3-2 Partitioned Logical Networks	3-5
Figure 3-3 Menu 3 — LAN Setup (10/100 Mbps Ethernet)	3-6
Figure 3-4 Menu 3.2 — TCP/IP and DHCP Ethernet Setup	3-6
Figure 3-5 Menu 3.2.1 — IP Alias Setup	3-9
Figure 3-6 Internet Access Setup (Ethernet)	3-10
Figure 3-7 Internet Access Setup (PPTP)	3-12
Figure 3-8 Internet Access (PPPoE)	3-14
Figure 3-9 Internet Setup Test Example	3-15
Figure 4-1 How NAT Works	4-3
Figure 4-2 NAT Application With IP Alias	4-4
Figure 4-3 Menu 4 — Applying NAT for Internet Access	4-6
Figure 4-4 Menu 11.3 — Applying NAT to the Remote Node	4-7
Figure 4-5 Menu 15 — NAT Setup	4-8
Figure 4-6 Menu 15.1 — Address Mapping Sets	4-8
Figure 4-7 Menu 15.1.255 — SUA Address Mapping Rules	4-9

Figure 4-8 Menu 15.1.1 — First Set	4-11
Figure 4-10 Menu 15.2 — NAT Server Setup	4-15
Figure 4-11 Multiple Servers Behind NAT Example	4-16
Figure 4-12 Trigger Port Forwarding Process: Example	4-16
Figure 4-13 Menu 15.3: Trigger Port Setup.....	4-17
Figure 4-14 NAT Example 1.....	4-19
Figure 4-15 Menu 4 — Internet Access & NAT Example.....	4-19
Figure 4-16 NAT Example 2.....	4-20
Figure 4-17 NAT Example 3.....	4-21
Figure 4-18 Example 3: Menu 11.3	4-22
Figure 4-19 Example 3: Menu 15.1.1.1	4-23
Figure 4-20 Example 3: Final Menu 15.1.1	4-23
Figure 4-21 Example 3: Menu 15.2	4-24
Figure 4-22 NAT Example 4.....	4-25
Figure 4-23 Example 4: Menu 15.1.1.1 — Address Mapping Rule.....	4-25
Figure 4-24 Example 4: Menu 15.1.1 — Address Mapping Rules	4-26
Figure 5-1 Menu 11.1 Remote Node Profile for Ethernet Encapsulation	5-2
Figure 5-2 Remote Node Profile for PPTP Encapsulation.....	5-4
Figure 5-3 Menu 11.1 Remote Node Profile for PPPoE Encapsulation.....	5-6
Figure 5-4 Remote Node Network Layer Options	5-7
Figure 5-5 Remote Node Network Layer Options	5-9
Figure 5-6 Remote Node Filter (Ethernet Encapsulation).....	5-12
Figure 5-7 Remote Node Filter (PPTP/PPPoE Encapsulation	5-12
Figure 6-1 Example of Static Routing Topology	6-1
Figure 6-2 Menu 12 — IP Static Route Setup.....	6-2
Figure 6-3 Menu 12. 1 — Edit IP Static Route.....	6-2
Figure 7-1 Outgoing Packet Filtering Process	7-2
Figure 7-2 Filter Rule Process.....	7-3
Figure 7-3 Menu 21 — Filter Set Configuration.....	7-4
Figure 7-4 NetBIOS_WAN Filter Rules Summary	7-5
Figure 7-5 NetBIOS_LAN Filter Rules Summary.....	7-5
Figure 7-6 TEL_FTP_WEB_WAN Filter Rules Summary	7-5

Figure 7-7 SNMP_WAN Filter Rules Summary	7-6
Figure 7-8 Menu 21.1.1 — TCP/IP Filter Rule	7-8
Figure 7-9 Executing an IP Filter.....	7-11
Figure 7-10 Menu 21.4.1 — Generic Filter Rule.....	7-12
Figure 7-11 Filter Example.....	7-14
Figure 7-12 Example Filter — Menu 21.3.1.....	7-15
Figure 7-13 Example Filter Rules Summary — Menu 21.3	7-16
Figure 7-14 Example Filter Rules Summary	7-17
Figure 7-15 Protocol and Device Filter Sets.....	7-18
Figure 7-16 Filtering LAN Traffic.....	7-19
Figure 7-17 Filtering Remote Node Traffic.....	7-19
Figure 1-1 Configuring UPnP.....	8-3
Figure 8-1 SNMP Management Model.....	9-2
Figure 8-2 Menu 22 — SNMP Configuration	9-3
Figure 9-1 Traffic Redirect WAN Setup.....	10-2
Figure 9-2 Traffic Redirect LAN Setup.....	10-2
Figure 9-3 Menu 11.1 — Remote Node Profile.....	10-3
Figure 9-4 Menu 11.6 — Traffic Redirect Setup.....	10-4
Figure 10-1 Menu 24 — System Maintenance	11-1
Figure 10-2 Menu 24.1 — System Maintenance — Status	11-2
Figure 10-3 Menu 24.2 — System Information and Console Port Speed.....	11-4
Figure 10-4 Menu 24.2.1 System Maintenance — Information	11-4
Figure 10-5 Menu 24.2.2 — System Maintenance — Change Console Port Speed	11-5
Figure 10-6 Menu 23.3 System Maintenance — Log and Trace	11-6
Figure 10-7 Examples of Error and Information Messages	11-7
Figure 10-8 Menu 24.3.2 — System Maintenance — UNIX Syslog	11-7
Figure 10-9 Call-Triggering Packet Example.....	11-11
Figure 10-10 Menu 24.4 — System Maintenance — Diagnostic	11-12
Figure 10-11 WAN & LAN DHCP	11-13
Figure 11-1 Telnet in Menu 24.5	12-3
Figure 11-2 FTP Session Example	12-4
Figure 11-3 System Maintenance — Backup Configuration	12-7

Figure 11-4 System Maintenance — Starting Xmodem Download Screen	12-7
Figure 11-5 Backup Configuration Example	12-7
Figure 11-6 Successful Backup Confirmation Screen.....	12-8
Figure 11-7 Telnet into Menu 24.6	12-9
Figure 11-8 Restore Using FTP or TFTP Session Example.....	12-10
Figure 11-9 System Maintenance — Restore Configuration	12-10
Figure 11-10 System Maintenance — Starting Xmodem Download Screen.....	12-10
Figure 11-11 Restore Configuration Example	12-11
Figure 11-12 Successful Restoration Confirmation Screen	12-11
Figure 11-13 Telnet Into Menu 24.7.1 — Upload System Firmware	12-12
Figure 11-14 Telnet Into Menu 24.7.2 — System Maintenance.....	12-13
Figure 11-15 FTP Session Example of Firmware File Upload	12-14
Figure 11-16 Menu 24.7.1 as seen using the Console Port	12-16
Figure 11-17 Example Xmodem Upload	12-16
Figure 11-18 Menu 24.7.2 as seen using the Console Port	12-17
Figure 11-19 Example Xmodem Upload	12-18
Figure 12-1 Command Mode in Menu 24.....	13-1
Figure 12-2 Valid Commands.....	13-2
Figure 12-3 Call Control.....	13-2
Figure 12-4 Budget Management.....	13-3
Figure 12-5 Call History	13-4
Figure 12-6 Menu 24 — System Maintenance	13-5
Figure 12-7 Menu 24.10 System Maintenance — Time and Date Setting.....	13-6
Figure 13-1 Telnet Configuration on a TCP/IP Network.....	14-1
Figure 13-2 Menu 24.11 – Remote Management Control	14-3
Figure 14-1 Schedule Setup.....	15-1
Figure 14-2 Schedule Set Setup.....	15-2
Figure 14-3 Applying Schedule Sets to a Remote Node Example (PPPoE Encapsulation).....	15-4
Figure 14-4 Applying Schedule Sets to a Remote Node Example (PPTP Encapsulation).....	15-5

List of Diagrams

Diagram 1 Single-PC per Modem Hardware Configuration.....	B
Diagram 2 Prestige as a PPPoE Client.....	C
Diagram 3 Transport PPP frames over Ethernet.....	D
Diagram 4 PPTP Protocol Overview	E
Diagram 5 Example Message Exchange between PC and an ANT.....	F
Diagram 6 Option to Enter Debug Mode.....	G
Diagram 7 Boot Module Commands	H
Diagram 8 NetBIOS Display Filter Settings Command	I

List of Charts

Chart 1 System Error Logs	L
Chart 2 System Maintenance Logs	L
Chart 3 UPnP Logs	M
Chart 4 Content Filtering Logs	M
Chart 5 ICMP Type and Code Explanations.....	N
Chart 6 CONSOLE Port RS-232 (Female) DB-9F Pin Assignments	Q

List of Tables

Table 1-1 Internet Access Configuration Checklist	1-5
Table 2-1 LED Descriptions	2-1
Table 2-2 Prestige Rear Panel Connections	2-2
Table 2-3 Main Menu Commands	2-6
Table 2-4 Main Menu Summary	2-7
Table 2-5 General Setup Menu Field	2-11
Table 2-6 Configure Dynamic DNS Menu Fields	2-12
Table 2-7 Configure Dynamic DNS Menu Fields	2-12
Table 2-8 WAN Setup Menu Fields	2-14
Table 3-1 Example of Network Properties for LAN Servers with Fixed IP Addresses	3-2
Table 3-2 Private IP Address Ranges	3-3
Table 3-3 LAN DHCP Setup Menu Fields	3-7
Table 3-4 LAN TCP/IP Setup Menu Fields	3-7
Table 3-5 IP Alias Setup Menu Fields	3-9
Table 3-6 Internet Access Setup Menu Fields	3-11
Table 3-7 New Fields in Menu 4 (PPTP) screen	3-12
Table 3-8 New Fields in Menu 4 (PPPoE) screen	3-14
Table 4-1 NAT Definitions	4-1
Table 4-2 NAT Mapping Types	4-5
Table 4-3 Applying NAT in Menus 4 & 11.3	4-7
Table 4-4 SUA Address Mapping Rules	4-9
Table 4-5 Fields in Menu 15.1.1	4-11
Table 4-6 Menu 15.1.1.1 — Editing/Configuring an Individual Rule in a Set	4-13
Table 4-7 Services & Port Numbers	4-14
Table 4-8 Menu 15.3—Trigger Port Setup Description	4-18
Table 5-1 Fields in Menu 11.1 (Ethernet Encapsulation)	5-2
Table 5-2 Fields in Menu 11.1 (PPTP Encapsulation)	5-4
Table 5-3 Fields in Menu 11.1 (PPPoE Encapsulation Specific Only)	5-6
Table 5-4 Remote Node Network Layer Options Menu Fields	5-8

Table 5-5 Remote Node Network Layer Options Menu Fields	5-10
Table 6-1 IP Static Route Menu Fields.....	6-3
Table 7-1 Abbreviations Used in the Filter Rules Summary Menu.....	7-6
Table 7-2 Rule Abbreviations Used.....	7-7
Table 7-3 TCP/IP Filter Rule Menu Fields.....	7-8
Table 7-4 Generic Filter Rule Menu Fields	7-12
Table 1-1 Configuring UPnP	8-3
Table 8-1 SNMP Configuration Menu Fields.....	9-4
Table 8-2 SNMP Traps.....	9-4
Table 9-1 Menu 11.1 — Remote Node Profile (Traffic Redirect Field).....	10-3
Table 9-2 Traffic Redirect Setup	10-4
Table 10-1 System Maintenance — Status Menu Fields.....	11-2
Table 10-2 Fields in System Maintenance.....	11-5
Table 10-3 System Maintenance Menu Syslog Parameters	11-8
Table 10-4 System Maintenance Menu Diagnostic	11-13
Table 11-1 Filename Conventions.....	12-2
Table 11-2 General Commands for GUI Clients	12-4
Table 11-3 General Commands for TFTP GUI Clients	12-6
Table 12-1 Budget Management.....	13-3
Table 12-2 Call History Fields.....	13-4
Table 12-3 Time and Date Setting Fields	13-6
Table 13-1 Menu 24.11 – Remote Management Control	14-3
Table 14-1 Schedule Set Setup Fields	15-3
Table 15-1 Troubleshooting the Start-Up of your Prestige.....	16-1
Table 15-2 Troubleshooting the LAN Interface	16-1
Table 15-3 Troubleshooting the WAN interface	16-2
Table 15-4 Internet Access	16-3

Preface

Congratulations on your purchase of the Prestige 314 PLUS Broadband Sharing Gateway.

Don't forget to register your Prestige (fast, easy online registration at www.zyxel.com) for free future product updates and information.

The Prestige is a dual Ethernet broadband gateway integrated with network management features that allows access to the Internet via Cable/xDSL modem. It is designed for:

- ❑ Home offices and small businesses with Cable and xDSL modem via Ethernet port as Internet access media.
- ❑ Multiple office/department connections via access devices.

Your Prestige is easy to install and to configure. The embedded web configurator is a convenient platform-independent GUI (Graphical User Interface) that allows you to access the Prestige's management settings.

All functions of the Prestige are also software configurable via the SMT (System Management Terminal) interface. The SMT is a menu-driven interface that you can access from a terminal emulator through the console port or over a telnet connection.

About This User's Manual

This manual is designed to guide you through the SMT configuration of your Prestige for its various applications. There is also HTML help for the embedded web configurator.

Related Documentation

- Supporting Disk
More detailed information and examples can be found in the included disk (as well as on the zyxel.com web site).
- Read Me First
Our Read Me First is designed to help you get up and running right away. It contains a detailed easy-to-follow connection diagram, default settings, handy checklists and information on setting up your network and configuring for Internet access.
- Packing List Card
The Packing List Card lists all items that should have come in the package.
- ZyXEL Glossary and Web Site

Please refer to www.zyxel.com for an online glossary of networking terms and additional support documentation.

Syntax Conventions

- Mouse action sequences are denoted using a comma. For example, click **Start, Settings, Control Panel, Network** means first you click **Start**, move the mouse pointer over **Settings**, then move the mouse pointer over **Control Panel** and finally click **Network**
- “Enter” means for you to type one or more characters and press the carriage return. “Select” or “Choose” means for you to select one from the predefined choices.
- The SMT menu titles and labels are in **Bold Times New Roman** font. The choices of a menu item are in **Bold Arial** font. A single keystroke is in **Arial** font and enclosed in square brackets, for instance, [ENTER] means the Enter, or carriage return, key; [ESC] means the escape key and [SPACE BAR] means the space bar. [UP] and [DOWN] are the up and down arrow keys.
- For brevity’s sake, we will use “e.g.” as shorthand for “for instance” and “i.e.” for “that is” or “in other words” throughout this manual.
- The Prestige 314 PLUS may be referred to as the Prestige or the P314 PLUS in this manual. Occasionally, SMT screens may refer to the Prestige as a router.

Part I:

Getting Started

This section helps you connect, install and setup your Prestige to operate on your network and access the Internet.

Chapter 1

Getting to Know Your Prestige 314 PLUS

This chapter introduces the main features and applications of the Prestige as well as a checklist for fast Internet access.

1.1 The Prestige Broadband Sharing Gateway With 4-Port Switch

The Prestige is a dual Ethernet Broadband Sharing Gateway with an integrated 4-port switch and robust network management features for Internet access via external Cable/xDSL modem. Equipped with 10/100Mbps Ethernet port for WAN, an auto-negotiating 10/100Mbps Ethernet port for LAN and the Network Address Translation (NAT) feature, the Prestige is uniquely suited as a broadband Internet access sharing gateway for small offices and home offices.

The Prestige web configurator is a breeze to operate and totally independent of the operating system platform you use.

1.2 Features of the Prestige 314 PLUS

The following are the main features of the Prestige.

Broadband WAN Connection with Integrated 4-Port Switch

A combination of switch and router makes your Prestige a cost-effective and viable network solution. A 4-port bandwidth-sensitive 10/100Mbps switch provides greater network efficiency than traditional hubs because the bandwidth is dedicated and not shared. An unlimited number of computers may be connected to your Prestige by adding other hubs if your LAN consists of more than 4 computers.

10/100MB Auto-negotiation Ethernet/Fast Ethernet Interface

This auto-negotiation feature allows the Prestige to detect the speed of incoming transmissions and adjust appropriately without manual intervention. It allows data transfer of either 10 Mbps or 100 Mbps in either half-duplex or full-duplex mode depending on your Ethernet network.

Auto-Sensing Ethernet LAN Ports

The LAN ports on the Prestige automatically adjust for straight-through or crossover cabling. This automatic polarity correction helps find and fix common cabling problems and it simplifies the installation process as the can be either a straight-through or crossover cable. The Prestige automatically switches its transmit and receive circuitry to accommodate the link partner's polarity.

Universal Plug and Play (UPnP)

Using the standard TCP/IP protocol, the Prestige and other UPnP enabled devices can dynamically join a network, obtain an IP address and convey its capabilities to other devices on the network.

Traffic Redirect

Traffic Redirect is used to sustain the Internet connection. The Prestige detects if the connectivity has been lost and will forward the outgoing traffic to another specified gateway.

SNMP

SNMP (Simple Network Management Protocol) is a protocol used for exchanging management information between network devices. SNMP is a member of the TCP/IP protocol suite. Your Prestige supports SNMP agent functionality, which allows a manager station to manage and monitor the Prestige through the network. The Prestige supports SNMP version one (SNMPv1).

NAT (Network Address Translation)

NAT (Network Address Translation - NAT, RFC 1631) allows the translation of an Internet Protocol address used within one network to a different IP address known within another network. The Prestige can now map multiple global IP addresses to local IP addresses of clients or servers.

DHCP Support

DHCP (Dynamic Host Configuration Protocol) allows the individual clients (workstations) to obtain the TCP/IP configuration at start-up from a centralized DHCP server. The Prestige has built-in DHCP server capability, enabled by default, which means it can assign IP addresses, an IP default gateway and DNS servers to Windows 9x, Windows NT, Windows 2000 and other systems that support the DHCP client. The Prestige can now also act as a surrogate DHCP server (DHCP Relay) where it relays IP address assignment from the actual real DHCP server to the clients.

Dynamic DNS Support

With Dynamic DNS support, you can have a static hostname alias for a dynamic IP address, allowing the host to be more easily accessible from various locations on the Internet. You must register for this service with a Dynamic DNS service provider.

IP Multicast

Traditionally, IP packets are transmitted in two ways - unicast or broadcast. Multicast is a third way to deliver IP packets to a group of hosts. IGMP (Internet Group Management Protocol) is the protocol used to support multicast groups. The latest version is version 2 (see RFC 2236). The Prestige supports versions 1 and 2.

PPPoE Support

PPPoE facilitates the interaction of a host with a broadband modem to achieve access to high-speed data networks via a familiar "dial-up networking" user interface.

PPTP Support

Point-to-Point Tunneling Protocol (PPTP) is a network protocol that enables secure transfer of data from a remote client to a private server, creating a Virtual Private Network (VPN) using a TCP/IP-based network.

PPTP supports on-demand, multi-protocol and virtual private networking over public networks, such as the Internet.

IP Alias

IP alias allows you to partition a physical network into logical networks over the same Ethernet interface.

Call Scheduling

Configure call time periods to restrict and allow access for users on remote nodes.

Call Control

The Prestige provides budget management for outgoing calls and chronicles incoming and outgoing calls.

Full Network Management

Your Prestige offers you a variety of options for network management. It supports password protected local and remote network management via the console port or a telnet connection using SMT (System Management Interface). It also supports FTP (File Transfer Protocol) server for remote management, TFTP (Trivial FTP), SNMP (Simple Network Management Protocol) and CI (Command Interpreter) mode.

RoadRunner Support

In addition to standard cable modem services, the Prestige supports Time Warner's RoadRunner Service.

Time and Date Setting

This new feature (menu 24.10) allows you to get the current time and date from an external server when you power up your Prestige. The real time is then displayed in the Prestige **Menu 24.1- System Status** and error logs. If you do not choose a time service protocol that your timeserver will send when the Prestige powers up you can enter the time manually but each time the system is booted, the time & date will be reset to 1/1/2000 0:0:0.

Logging and Tracing

- ◆ Built-in message logging and packet tracing.
- ◆ Unix syslog facility support.

Embedded FTP and TFTP Services

The Prestige's embedded FTP and TFTP services enable the fast upgrade of firmware via standard file transfer protocols.

Port Forwarding

Use this feature to forward incoming service requests to a server on your local network. You may enter a single port number or a range of port numbers to be forwarded, and the local IP address of the desired server.

Packet Filtering

The Packet Filtering mechanism blocks unwanted traffic from entering/leaving your network.

1.3 Broadband Internet Access via Cable or DSL Modem

A cable modem or DSL modem can be connected to the Prestige 10M WAN Ethernet port and up to four computers can be connected to the four Prestige 10/100M LAN Ethernet ports for super-fast broadband Internet access. The Prestige provides not only the high speed Internet access but also a complete solution to efficiently manage data traffic on your network.

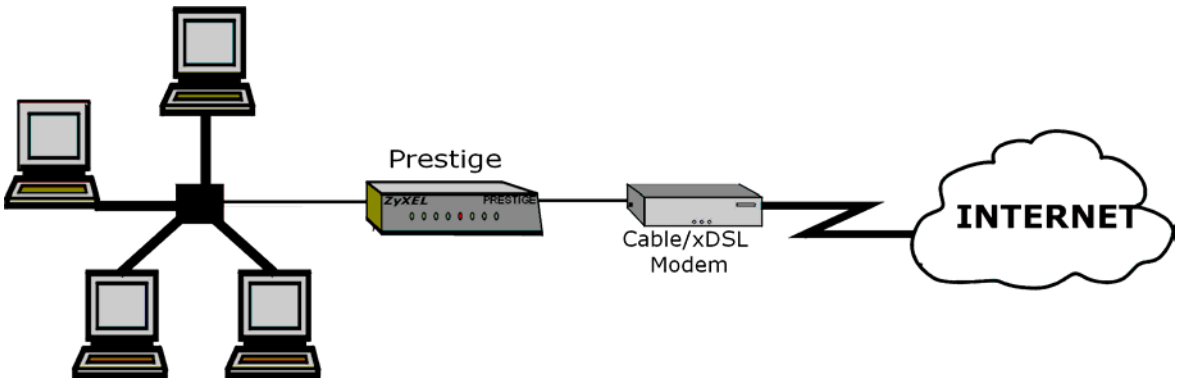


Figure 1-1 Internet Access Application

1.4 Internet Access Configuration Checklist

The following table shows the minimum SMT menu configurations you'll need to make (without changing the default Prestige values) in order to access the Internet.

Table 1-1 Internet Access Configuration Checklist

SMT #	FIELD	ACTION
1	System Name	<p>This field is for identification purposes but because some ISPs check this name you should enter your computer's "Computer Name".</p> <ul style="list-style-type: none"> • In Windows 95/98 click Start, Settings, Control Panel, Network. Click the Identification tab, note the entry for the Computer Name field and enter it as the System Name. • In Windows 2000, click Start, Settings, Control Panel, Network Identification. Click the Identification tab, note the entry for the Computer Name field and enter it as the System Name. • In Windows XP, click Start, Control Panel, System. Click the Computer Name tab. Note the entry for the Computer Description field and enter it as the System Name.
2	MAC Address: Assigned By	<p>The default is Factory Default, which is the factory assigned default MAC Address. We recommend you choose IP Address attached on LAN and enter the IP address of the workstation on the LAN whose MAC you are cloning.</p>
4	<p>Encapsulation</p> <p style="text-align: center;">PPTP</p> <p style="text-align: center;">PPPoE</p>	<p>Choose PPPoE if you have a dial-up connection to the Internet (or PPTP if you reside in France or Austria); otherwise choose Ethernet. Choose from RR-Manager, RR-Telstra or RR-Toshiba if your ISP is Time Warner's RoadRunner; otherwise choose Standard.</p> <p>You need to know your login name, password and connection ID/Name. The latter may not be obligatory for some ISPs, but if it is you must follow the "c:id" and "n:name" format.</p> <p>You need to know your login name, password and service name. The latter may not be obligatory for some ISPs.</p>
	IP Address Assignment	<p>If your ISP did not assign you a fixed IP address, select Dynamic, otherwise select Static and enter the IP address & subnet mask in the IP address and IP Subnet Mask fields.</p>
<p>Once these key fields have been configured, you should be able to enjoy super-fast Internet access with your Prestige!</p>		

Chapter 2

Hardware Installation & Initial Setup

This chapter shows you how to connect hardware and perform the initial setup.

2.1 Front Panel LEDs

The LEDs on the front panel indicate the operational status of the Prestige.



Figure 2-1 Front Panel

The following table describes the LED functions.

Table 2-1 LED Descriptions

LED	FUNCTION	COLOR	STATUS	MEANING
PWR	Power	Green	On	The Prestige is receiving power.
SYS	System		Off	The system is not ready or failed.
			On	The system is ready and running.
			Flashing	The system is rebooting.
10M LAN 1,2,3,4	LAN	Green	Off	The 10M LAN is not connected.
			On	The Prestige is connected to a 10M LAN.
			Flashing	The 10M LAN is sending/receiving packets.
100M LAN 1,2,3,4		Orange	Off	The 100M LAN is not connected.
			On	The Prestige is connected to a 100Mbps LAN.
			Flashing	The 100M LAN is sending/receiving packets.

LED	FUNCTION	COLOR	STATUS	MEANING
WAN	WAN	Green	Off	The WAN Link is not ready, or has failed.
			On	The WAN Link is ok.
			Flashing	The 10/100M WAN link is sending/receiving packets.

2.2 Prestige Rear Panel and Connections

The following figure shows the rear panel of your Prestige and the related connections.

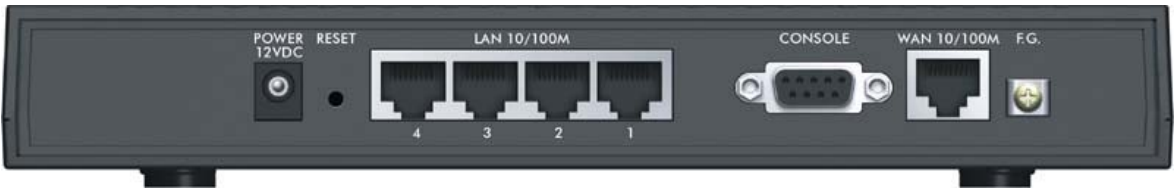


Figure 2-2 Prestige Rear Panel Connections

Table 2-2 Prestige Rear Panel Connections

CONNECTION	DESCRIPTION AND FUNCTION
Power 12VDC	This supplies the power to the unit. Connect the supplied power adaptor to the wall outlet and insert the small plug from the power adaptor to this socket.
Reset	This button resets the unit. Refer to <i>section 2.7.1</i> for details on how to reset the unit.
LAN 10/100M	These auto-sensing LAN ports are used to connect the Prestige to local computers or to an external hub. All LAN ports are auto-sensing. This means that these ports automatically adjust according to the type of cable, eg Straight-through Ethernet cable or Crossover Ethernet cable.
Console	This port is used for configuration and administration of the Prestige. Connect your administration computer to this port via an RS-232 cable.
WAN 10/100M	Connect your Cable/DSL modem to this port.
F.G.	Ground the Prestige by connecting a grounded wire to the Frame Ground (F.G) terminal.

2.3 Connecting Your Prestige

This section outlines how to connect your Prestige to the LAN and the WAN. If you want to connect a cable modem, you must connect the coaxial cable from your cable service to the threaded coaxial cable connector on the back of the cable modem. Connect an xDSL modem to the xDSL wall jack.

Step 1. Connecting the Console Port

For the initial configuration of your Prestige, you need to use terminal emulator software on your computer and connect it to the Prestige through the console port. Connect the 9-pin end of the console cable to the console port of the Prestige and the other end (choice of 9-pin or 25-pin, depending on your computer) end to a serial port (COM1, COM2 or other COM port) of your computer. You can use an extension RS-232 cable if the enclosed one is too short. After the initial setup, you can modify the configuration remotely through telnet connections.

Step 2. Connecting the Prestige to the Broadband Modem

The WAN connection cable should be STP (Shielded Twisted Pair).

Step 2a. Connecting the Prestige to the cable modem:

Connect the WAN port (silver) on the Prestige to the Ethernet port on the cable modem using the cable that came with your cable modem. The Ethernet port on a cable modem is sometimes labeled "PC" or "Workstation".

OR

Step 2b. Connecting the Prestige to the xDSL Modem:

Connect the WAN port (silver) on the Prestige to the Ethernet port on the xDSL modem using the cable that came with your xDSL modem.

Step 3. Connecting the Prestige to the LAN

When the Prestige Ethernet cable is correctly connected to a computer or a hub, the corresponding LAN LED on the front panel will go on.

You can connect up to four computers directly to the Prestige. For each computer, connect a 10/100M LAN port on the Prestige to the Network Adapter on the computer using a straight-through cable

If you have more than four computers, you must use an external hub. Connect a 10/100M LAN port on the Prestige to a port on the hub using a crossover Ethernet cable.

The **Uplink** button allows you to reverse the role of LAN port 4. Pushing the **Uplink** button in (“on”) lets you connect LAN port 4 on the Prestige directly to a computer using a crossover Ethernet cable. If the **Uplink** button is not “on”, you must use a straight-through cable for this connection.

When connecting the Prestige LAN port 4 to an external hub, pressing the **Uplink** button allows a straight-through Ethernet cable to be used instead of a crossover cable.

Step 4. Connecting the Power Adapter to your Prestige

Connect one end of the power adapter to the port labeled **POWER** on the rear panel of your Prestige.

**To prevent damage to the Prestige, make sure you have the correct power adapter.
See the *Power Adapter Specification Appendix* for regional specifications.**

Step 5. Grounding the Prestige (Optional)

Ground the Prestige by connecting a grounded wire to the **F.G.** (Frame Ground) of the Prestige.

2.4 Additional Installation Requirements

In addition to the contents of your package, there are other hardware and software requirements you need before you can install and use your Prestige. These requirements include:

1. A computer(s) with an installed Ethernet NIC (Network Interface Card).
2. A computer equipped with terminal emulation communications software configured to the following parameters:
 - ◆ VT100 terminal emulation.
 - ◆ 9600 baud.
 - ◆ No parity, 8 data bits, 1 stop bit, flow control set to none.
3. A cable/xDSL modem and an ISP account.

2.5 Turning on Your Prestige

At this point, you should have connected the console port, the LAN port(s), the WAN port and the power port to the appropriate devices or lines. Plug the power adapter into a wall outlet. The PWR LED should be on. The SYS LED will come on after the system tests are complete. The WAN LED and one of the LAN LEDs come on immediately after the SYS LED comes on, if proper connections have been made to the LAN and WAN ports.

2.5.1 Initial Screen

When you turn on your Prestige, it performs several internal tests as well as line initialization.

After the tests, the Prestige asks you to press [ENTER] to continue, as shown next.

```
Copyright (c) 1994 - 2002 ZyXEL Communications Corp.  
initialize ch =0, ethernet address: 00:a0:c5:01:23:45  
initialize ch =1, ethernet address: 00:a0:c5:01:23:46  
Press ENTER to continue...
```

Figure 2-3 Initial Screen

2.5.2 Entering the Password

The login screen appears after you press [ENTER], prompting you to enter the password, as shown next.

For your first login, enter the default password 1234. As you type the password, the screen displays an (X) for each character you type.

Note that if there is no activity for longer than five minutes after you log in, your Prestige will automatically log you out and will display a blank screen. If you see a blank screen, press [ENTER] to bring up the login screen again.

```
Enter Password : XXXX
```

Figure 2-4 Password Screen

2.6 Navigating the SMT Interface

The SMT (System Management Terminal) is the interface that you use to configure your Prestige.

Several operations that you should be familiar with before you attempt to modify the configuration are listed next.

Table 2-3 Main Menu Commands

OPERATION	KEYSTROKE(S)	DESCRIPTION
Move down to another menu	[ENTER]	To move forward to a submenu, type in the number of the desired submenu and press [ENTER].
Move up to a previous menu	[ESC]	Press the [ESC] key to move back to the previous menu.
Move to a "hidden" menu	Press the [SPACE BAR] to change No to Yes then press [ENTER].	Fields beginning with "Edit" lead to hidden menus and have a default setting of No. Press the [SPACE BAR] to change No to Yes, then press [ENTER] to go to a "hidden" menu.
Move the cursor	[ENTER] or [Up]/[Down] arrow keys	Within a menu, press [ENTER] to move to the next field. You can also use the [Up]/[Down] arrow keys to move to the previous and the next field, respectively.
Enter information	Fill in, or Press the [SPACE BAR] to select.	You need to fill in two types of fields. The first requires you to type in the appropriate information. The second allows you to cycle through the available choices by pressing the [SPACE BAR].
Required fields	<? > or ChangeMe	All fields with the symbol <?> must be filled in order to be able to save the new configuration. All fields with ChangeMe must not be left blank in order to be able to save the new configuration.
N/A fields	<N/A>	Some of the fields in the SMT will show a <N/A>. This symbol refers to an option that is Not Applicable.
Save your configuration	[ENTER]	Save your configuration by pressing [ENTER] at the message [Press ENTER to confirm or ESC to cancel]. Saving the data on the screen will take you, in most cases to the previous menu.
Exit the SMT	Type 99, then press [ENTER].	Type 99 at the main menu prompt and press [ENTER] to exit the SMT interface.

2.6.1 Main Menu

After you enter the password, the SMT displays the **Prestige Main Menu**, as shown next.

```

Copyright (c) 1994 - 2002 ZyXEL Communications Corp.

Prestige 314 PLUS Main Menu

Getting Started
1. General Setup
2. WAN Setup
3. LAN Setup
4. Internet Access Setup

Advanced Applications
11. Remote Node Setup
12. Static Routing Setup
15. NAT Setup

Advanced Management
21. Filter Set Configuration
22. SNMP Configuration
23. System Password
24. System Maintenance
26. Schedule Setup

99. Exit

Enter Menu Selection Number:

```

Figure 2-5 Prestige Main Menu

2.6.2 System Management Terminal Interface Summary

Table 2-4 Main Menu Summary

NO.	MENU TITLE	FUNCTION
1	General Setup	Use this menu to set up routing/bridging and general information.
2	WAN Setup	Use this menu to clone a MAC address from a computer on your LAN.
3	LAN Setup	Use this menu to configure LAN DHCP and TCP/IP settings as well as apply LAN filters.
4	Internet Access Setup	Configure your Internet Access setup (Internet address, gateway, login, etc.) with this menu.
11	Remote Node Setup	Use this menu to configure detailed remote node settings (your ISP is also a remote node) as well as apply WAN filters.
12	Static Routing Setup	Configure static routes for bridging and IP in this menu.
15	NAT Setup	Use this menu to configure network address translation.
21	Filter Set Configuration	Use this menu to provide security via filters.

NO.	MENU TITLE	FUNCTION
22	SNMP Configuration	Use this menu to configure SNMP-related parameters.
23	System Password	Change your password in this menu (recommended).
24	System Maintenance	From displaying system status to uploading firmware, this menu provides comprehensive system maintenance.
26	Schedule Setup	Use this menu to schedule outgoing calls.
99	Exit	Use this menu to exit (necessary for remote configuration).

2.7 Changing the System Password

The first thing you should do is change the default system password by following the steps shown next.

Step 1. Enter 23 in the main menu to open **Menu 23 - System Password** as shown next.

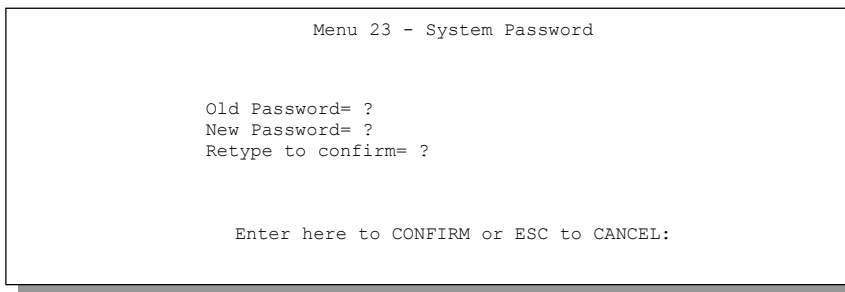


Figure 2-6 Menu 23 — System Security

Step 2. Enter your existing password and press [ENTER].

Step 3. Enter your new system password and press [ENTER].

Step 4. Re-type your new system password for confirmation and press [ENTER].

Note that as you type a password, the screen displays a (X) for each character you type.

2.7.1 Resetting the Prestige

If you forget your password or cannot access the SMT menu, you will need to reload the factory-default configuration file. Uploading this configuration file replaces the current configuration file with the factory-default configuration file. This means that you will lose all configurations that you had previously and the speed of the console port will be reset to the default of 9600bps with 8 data bit, no parity, one stop bit and flow control set to none. The password will be reset to “1234”, also.

Turn off the Prestige and begin a terminal emulation software session with the default console port settings. Turn on the Prestige again. When you see the message "Press Any key to enter Debug Mode within 3 seconds", press any key to enter debug mode. You should already have downloaded the correct file from your nearest ZyXEL FTP site. See *section 12.4* for more information on how to transfer the configuration file to your Prestige.

Procedure To Use The Reset Button

Make sure the **SYS** led is on (not blinking) before you begin this procedure.

- Step 1.** Press the **RESET** button for ten seconds, then release it. If the **SYS** LED begins to blink, the defaults have been restored and the Prestige restarts. Otherwise, go to step 2.
- Step 2.** Turn the Prestige off.
- Step 3.** While pressing the **RESET** button, turn the Prestige on.
- Step 4.** Continue to hold the **RESET** button. The **SYS** LED will begin to blink and flicker very quickly after about 10 or 15 seconds. This indicates that the defaults have been restored and the Prestige is now restarting.

2.8 General Setup

Menu 1 - General Setup contains administrative and system-related information (shown next). **System Name** is for identification purposes. However, because some ISPs check this name you should enter your computer's "Computer Name".

- In Windows 95/98 click **Start, Settings, Control Panel, Network**. Click the **Identification** tab, note the entry for the **Computer Name** field and enter it as the **System Name**.

- In Windows 2000, click **Start, Settings, Control Panel** and then double-click **System**. Click the **Network Identification** tab and then the **Properties** button. Note the entry for the **Computer name** field and enter it as the **System Name**.
- In Windows XP, click **Start, Control Panel, System**. Click the **Computer Name** tab. Note the entry for the **Computer Description** field and enter this entry as the **System Name**.

The **Domain Name** entry is what is propagated to the DHCP clients on the LAN. If you leave this blank, the domain name obtained by DHCP from the ISP is used. While you must enter the host name (**System Name**) on each individual computer, the domain name can be assigned from the Prestige via DHCP.

2.8.1 Dynamic DNS

Dynamic DNS (Domain Name System) allows you to update your current dynamic IP address with one or many dynamic DNS services so that anyone can contact you (in *NetMeeting*, *CU-SeeMe* or other services). You can also access your FTP server or Web site on your own computer using a DNS-like address (for example, *myhost.dhs.org*, where *myhost* is a name of your choice) which will never change instead of using an IP address that changes each time you reconnect. Your friends or relatives will always be able to call you even if they don't know your IP address.

First of all, you need to have registered a dynamic DNS account with www.dyndns.org. This is for people with a dynamic IP from their ISP or DHCP server that would still like to have a DNS name.

To use this service, you must register with the Dynamic DNS service provider. The Dynamic DNS service provider will give you a password or key. The Prestige supports www.dyndns.org. You can apply to this service provider for Dynamic DNS service.

DYNDNS Wildcard

Enabling the wildcard feature for your host causes **.yourhost.dyndns.org* to be aliased to the same IP address as *yourhost.dyndns.org*. This feature is useful if you want to be able to use, for example, *www.yourhost.dyndns.org* and still reach your hostname.

2.8.2 Procedure For Configuring Menu 1

Step 1. Enter 1 in the main menu to open **Menu 1 – General Setup** (shown next).

Step 2. Fill in the required fields. Refer to the table shown next for more information about these fields.

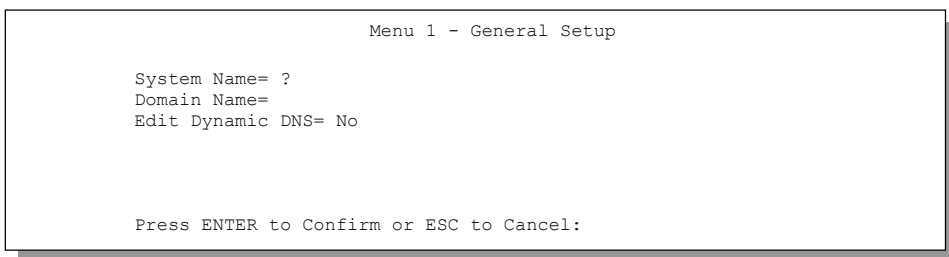


Figure 2-7 Menu 1 — General Setup

Table 2-5 General Setup Menu Field

FIELD	DESCRIPTION	EXAMPLE
System Name	Choose a descriptive name for identification purposes. It is recommended you enter your computer's "Computer name" in this field. This name can be up to 30 alphanumeric characters long. Spaces are not allowed, but dashes "-" and underscores "_" are accepted.	P314_PLUS
Domain Name	Enter the domain name (if you know it) here. If you leave this field blank, the ISP may assign a domain name via DHCP. You can go to menu 24.8 and type "sys domainname" to see the current domain name used by your gateway. If you want to clear this field just press the [SPACE BAR]. The domain name entered by you is given priority over the ISP assigned domain name.	zyxel.com.tw
Edit Dynamic DNS	Press the [SPACE BAR] to select Yes or No (default). Select Yes to configure Menu 1.1 – Configure Dynamic DNS (discussed next).	No
When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm..." to save your configuration, or press [ESC] at any time to cancel.		

2.8.3 Configuring Dynamic DNS

To configure Dynamic DNS, go to **Menu 1 – General Setup** and press select **Yes** in the **Edit Dynamic DNS** field. Press [ENTER] to display **Menu 1.1– Configure Dynamic DNS** as shown next.

```

Menu 1.1 - Configure Dynamic DNS
Service Provider= WWW.DynDNS.ORG
Active= Yes
DDNSType= DynamicDNS
Host1=
Host2=
Host3=
EMAIL=
USER=
Password= *****
Enable Wildcard= No
Offline= N/A
Edit Update IP Address:
Use Server Detected IP= Yes
User Specified IP Addr=No
IP Address=N/A

Press ENTER to confirm or ESC to cancel:
    
```

Figure 2-8 Configure Dynamic DNS

Follow the instructions in the next table to configure Dynamic DNS parameters.

Table 2-6 Configure Dynamic DNS Menu Fields

Table 2-7 Configure Dynamic DNS Menu Fields

FIELD	DESCRIPTION	EXAMPLE
Service Provider	This is the name of your Dynamic DNS service provider.	WWW. DynDNS.ORG (default)
Active	Press [SPACE BAR] to select Yes and then press [ENTER] to make dynamic DNS active.	Yes
DDNS Type	Press [SPACE BAR] and then [ENTER] to select DynamicDNS if you have a dynamic IP address(es). Select StaticDNS if you have a static IP address(s). Select CustomDNS to have dyns.org provide DNS service for a domain name that you already have from a source other than dyndns.org.	DynamicDNS (default)
Host1-3	Enter your host name(s) in the fields provided. You can specify up to two host names separated by a comma in each field.	me.dyndns.org
EMAIL	Enter your e-mail address.	mail@mailserver
USER	Enter your user name.	

Table 2-7 Configure Dynamic DNS Menu Fields

FIELD	DESCRIPTION	EXAMPLE
Password	Enter the password assigned to you.	
Enable Wildcard	Your Prestige supports DYNDNS Wildcard. Press [SPACE BAR] and then [ENTER] to select Yes or No . This field is N/A when you choose DDNS client as your service provider.	No
Offline	This field is only available when CustomDNS is selected in the DDNS Type field. Press [SPACE BAR] and then [ENTER] to select Yes . When Yes is selected, traffic is redirected to a URL that you have previously specified (see www.dyndns.org for details).	Yes
<p>Edit Update IP Address:</p> <p>You can select Yes in either the Use Server Detected IP field (recommended) or the User Specified IP Addr field, but not both.</p> <p>With the Use Server Detected IP and User Specified IP Addr fields both set to No, the DDNS server automatically updates the IP address of the host name(s) with the Prestige's WAN IP address.</p> <p>DDNS does not work with a private IP address. When both fields are set to No, the Prestige must have a public WAN IP address in order for DDNS to work.</p>		
Use Server Detected IP	<p>Press [SPACE BAR] to select Yes and then press [ENTER] to have the DDNS server automatically update the IP address of the host name(s) with the public IP address that the Prestige uses or is behind.</p> <p>You can set this field to Yes whether the IP address is public or private, static or dynamic.</p>	Yes
User Specified IP Addr	<p>Press [SPACE BAR] to select Yes and then press [ENTER] to update the IP address of the host name(s) to the IP address specified below.</p> <p>Only select Yes if the Prestige uses or is behind a static public IP address.</p>	No
IP Address	Enter the static public IP address if you select Yes in the User Specified IP Addr field.	N/A
<p>When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm..." to save your configuration, or press [ESC] at any time to cancel.</p>		

The IP address will be updated when you reconfigure menu 1 or perform DHCP client renewal. If you have a private WAN IP address, then you cannot use Dynamic DNS.

2.9 WAN Setup

This section describes how to configure the WAN using **Menu 2 – WAN Setup**. From the main menu, enter 2 to display menu 2.

ZyXEL recommends you configure this menu even if your ISP does not require MAC address authentication.

```

Menu 2 - WAN Setup

MAC Address:
Assigned By= Factory default
IP Address= N/A

Press ENTER to Confirm or ESC to Cancel:
Press Space Bar to Toggle
    
```

Figure 2-9 Menu 2 — WAN Setup

The MAC address field allows users to configure the WAN port's MAC Address by either using the factory default or cloning the MAC address from a workstation on your LAN. Once it is successfully configured, the address will be copied to the rom file (ZyNOS configuration file). It will not change unless you change the setting in menu 2 or upload a different rom file.

The following table contains instructions on how to configure your WAN setup.

Table 2-8 WAN Setup Menu Fields

FIELD	DESCRIPTION	EXAMPLE
MAC Address Assigned By	Press the [SPACE BAR] to choose one of two methods to assign a MAC Address. Choose Factory Default to select the factory assigned default MAC Address. Choose IP Address attached on LAN to use the MAC Address of that workstation whose IP you give in the following field.	IP Address attached on LAN

FIELD	DESCRIPTION	EXAMPLE
IP Address	This field is applicable only if you choose the IP Address attached on LAN method in the Assigned By field above. Enter the IP address of the workstation on the LAN whose MAC you are cloning.	192.168.1.33
When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm..." to save your configuration, or press [ESC] at any time to cancel.		

Your Prestige WAN Port is always set at half-duplex mode as most cable modems only support half-duplex mode. If your cable modem supports full-duplex mode, then you will be able to manually set it at half-duplex mode. If the Prestige is set at half-duplex mode and the cable modem is set at full-duplex mode, then the WAN port will not function properly.

Your Prestige supports full duplex mode on the LAN side.

2.10 LAN Setup

This section describes how to configure the LAN using **Menu 3 — LAN Setup**. From the main menu, enter 3 to display menu 3 (shown next).

```

Menu 3 - LAN Setup

1. LAN Port Filter Setup
2. TCP/IP and DHCP Setup

Enter Menu Selection Number:

```

Figure 2-10 Menu 3 — LAN Setup

2.10.1 LAN Port Filter Setup

This menu allows you to specify the filter sets that you wish to apply to the LAN traffic. You seldom need to filter the LAN traffic, however, the filter sets may be useful to block certain packets, reduce traffic and prevent security breaches.

```
Menu 3.1 - LAN Port Filter Setup
Input Filter Sets:
  protocol filters= 2
  device filters=
Output Filter Sets:
  protocol filters=
  device filters=

Press ENTER to Confirm or ESC to Cancel:
```

Figure 2-11 Menu 3.1 — LAN Port Filter Setup

Menu 3.2 is discussed in the next part of the manual. Please read on.

Chapter 3

Internet Access

This chapter shows you how to configure the LAN as well as the WAN of your Prestige for Internet access.

3.1 TCP/IP and DHCP for LAN

The Prestige has built-in DHCP server capability that assigns IP addresses and DNS servers to systems that support DHCP client capability.

3.1.1 Factory LAN Defaults

The LAN parameters of the Prestige are preset in the factory with the following values:

1. IP address of 192.168.1.1 with subnet mask of 255.255.255.0 (24 bits)
2. DHCP server enabled with 32 client IP addresses starting from 192.168.1.33.

These parameters should work for the majority of installations. If your ISP gives you explicit DNS server address(es), skip to the *DNS Server Address section* to see how to enter the DNS server address(es).

3.1.2 DHCP Configuration

DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) allows individual clients to obtain TCP/IP configuration at start-up from a server. You can configure the Prestige as a DHCP server or disable it. When configured as a server, the Prestige provides the TCP/IP configuration for the clients. If set to **None**, DHCP service will be disabled and you must have another DHCP server on your LAN, or else the workstation must be manually configured. The Prestige can also act as a surrogate DHCP server (DHCP Relay) where it relays IP address assignment from the actual real DHCP server to the clients

IP Pool Setup

The Prestige is pre-configured with a pool of 32 IP addresses starting from 192.168.1.33 to 192.168.1.64. This configuration leaves 31 IP addresses (excluding the Prestige itself) in the lower range for other server computers, e.g., server for mail, FTP, telnet, web, etc., that you may have.

DNS Server Address

Use DNS (Domain Name System) to map a domain name to its corresponding IP address and vice versa, e.g., the IP address of *www.zyxel.com* is 204.217.0.2. The DNS server is extremely important because without it, you must know the IP address of a computer before you can access it.

There are two ways that an ISP disseminates the DNS server addresses.

1. The ISP tells you the DNS server addresses, usually in the form of an information sheet, when you sign up. If your ISP gives you DNS server addresses, enter them in the **DNS Server** fields in DHCP Setup.
2. Leave the **DNS Server** fields in DHCP Setup blank (for example 0.0.0.0). The Prestige acts as a DNS proxy when this field is blank.

Table 3-1 Example of Network Properties for LAN Servers with Fixed IP Addresses

Choose an IP address	192.168.1.2 - 192.168.1.32; 192.168.1.65 - 192.168.1.254.
Subnet mask	255.255.255.0
Gateway (or default route)	192.168.1.1 (Prestige LAN IP)

3.1.3 IP Address and Subnet Mask

Similar to the way houses on a street share a common street name, so too do computers on a LAN share one common network number.

Where you obtain your network number depends on your particular situation. If the ISP or your network administrator assigns you a block of registered IP addresses, follow their instructions in selecting the IP addresses and the subnet mask.

If the ISP did not explicitly give you an IP network number, then most likely you have a single user account and the ISP will assign you a dynamic IP address when the connection is established. If this is the case, it is recommended that you select a network number from 192.168.0.0 to 192.168.255.0 and you must enable the

Network Address Translation (NAT) feature of the Prestige. The Internet Assigned Number Authority (IANA) reserved this block of addresses specifically for private use; please do *not* use any other number unless you are told otherwise. Let's say you select 192.168.1.0 as the network number; which covers 254 individual addresses, from 192.168.1.1 to 192.168.1.254 (zero and 255 are reserved). In other words, the first three numbers specify the network number while the last number identifies an individual workstation on that network.

Once you have decided on the network number, pick an IP address that is easy to remember, e.g., 192.168.1.1, for your Prestige, but make sure that no other device on your network is using that IP.

The subnet mask specifies the network number portion of an IP address. Your Prestige will compute the subnet mask automatically based on the IP address that you entered. You don't need to change the subnet mask computed by the Prestige unless you are instructed to do otherwise.

3.1.4 Private IP Addresses

Every computer on the Internet must have a unique IP address. If your networks are isolated from the Internet, e.g., only between your two branch offices, you can assign any IP addresses to the hosts without problems. However, the Internet Assigned Numbers Authority (IANA) has reserved the following three blocks of IP addresses specifically for private networks:

Table 3-2 Private IP Address Ranges

10.0.0.0 — 10.255.255.255
172.16.0.0 — 172.31.255.255
192.168.0.0 — 192.168.255.255

You can obtain your IP address from the IANA, from an ISP or have it assigned by a private network. If you belong to a small organization and your Internet access is through an ISP, the ISP can provide you with the Internet addresses for your local networks. On the other hand, if you are part of a much larger organization, you should consult your network administrator for the appropriate IP addresses.

Regardless of your particular situation, do not create an arbitrary IP address; always follow the guidelines above. For more information on address assignment, please refer to *RFC 1597, Address Allocation for Private Internets* and *RFC 1466, Guidelines for Management of IP Address Space*.

3.1.5 RIP Setup

RIP (Routing Information Protocol, RFC1058 and RFC 1389) allows a router to exchange routing information with other routers. The **RIP Direction** field controls the sending and receiving of RIP packets. When set to **Both** or **Out Only**, the Prestige will broadcast its routing table periodically. When set to **Both** or **In Only**, it will incorporate the RIP information that it receives; when set to **None**, it will not send any RIP packets and will ignore any RIP packets received.

The **Version** field controls the format and the broadcasting method of the RIP packets that the Prestige sends (it recognizes both formats when receiving). **RIP-1** is universally supported; but **RIP-2** carries more information. **RIP-1** is probably adequate for most networks, unless you have an unusual network topology.

Both **RIP-2B** and **RIP-2M** sends the routing data in RIP-2 format; the difference being that **RIP-2B** uses subnet broadcasting while **RIP-2M** uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also.

By default, **RIP Direction** is set to **Both** and the **Version** set to **RIP-1**.

3.1.6 IP Multicast

Traditionally, IP packets are transmitted in one of either two ways - Unicast (1 sender — 1 recipient) or Broadcast (1 sender — everybody on the network). Multicast delivers IP packets to *a group* of hosts on the network - not everybody and not just 1.

IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a Multicast group - it is not used to carry user data. IGMP version 2 (RFC 2236) is an improvement over version 1 (RFC 1112) but IGMP version 1 is still in wide use. If you would like to read more detailed information about interoperability between IGMP version 2 and version 1, please see *sections 4 and 5 of*

RFC 2236. The class D IP address is used to identify host groups and can be in the range 224.0.0.0 to 239.255.255.255. The address 224.0.0.0 is not assigned to any group and is used by IP multicast computers. The address 224.0.0.1 is used for query messages and is assigned to the permanent group of all IP hosts (including gateways). All hosts must join the 224.0.0.1 group in order to participate in IGMP. The address 224.0.0.2 is assigned to the multicast routers group.

The Prestige supports both IGMP version 1 (**IGMP-v1**) and IGMP version 2 (**IGMP-v2**). At start up, the Prestige queries all directly connected networks to gather group membership. After that, the Prestige periodically updates this information. IP Multicasting can be enabled/disabled on the Prestige LAN and/or WAN interfaces using menus 3.2 (LAN) and 11.3 (WAN). Select **None** to disable IP Multicasting on these interfaces.

3.1.7 IP Alias

IP Alias allows you to partition a physical network into different logical networks over the same Ethernet interface. The Prestige supports three logical LAN interfaces via its single physical Ethernet interface with the Prestige itself as the gateway for each LAN network.

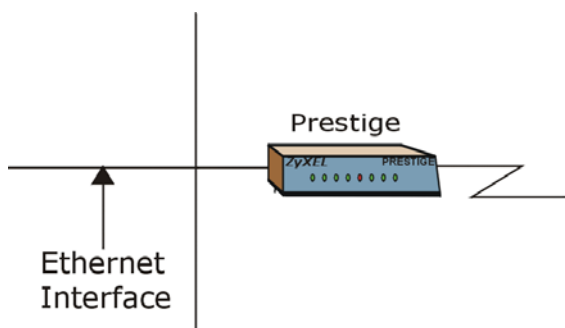


Figure 3-1 Physical Network

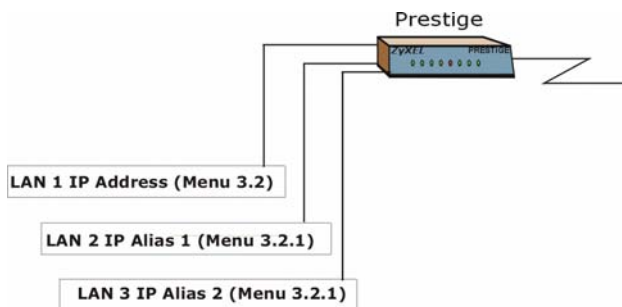


Figure 3-2 Partitioned Logical Networks

Use menu 3.2.1 to configure IP Alias on your Prestige.

3.2 TCP/IP and DHCP Ethernet Setup

From the main menu, enter 3 to open **Menu 3 - LAN Setup** (10/100 Mbps Ethernet) to configure TCP/IP (RFC 1155) and DHCP Ethernet setup.

```
Menu 3 - LAN Setup

1. LAN Port Filter Setup
2. TCP/IP and DHCP Setup

Enter Menu Selection Number:
```

Figure 3-3 Menu 3 — LAN Setup (10/100 Mbps Ethernet)

To edit the TCP/IP and DHCP configuration, enter 2 to display **Menu 3.2 - TCP/IP and DHCP Ethernet Setup** as shown next.

```
Menu 3.2 - TCP/IP and DHCP Ethernet Setup

DHCP= Server
Configuration:
Client IP Pool Starting Address= 192.168.1.33
Size of Client IP Pool= 32
Primary DNS Server= 0.0.0.0
Secondary DNS Server= 0.0.0.0
DHCP Server Address = N/A

TCP/IP Setup:
IP Address= 192.168.1.1
IP Subnet Mask= 255.255.255.0
RIP Direction= Both
Version= RIP-1
Multicast= None
Edit IP Alias= No

Press ENTER to Confirm or ESC to Cancel:
Press Space Bar to Toggle.
```

The diagram shows four callout boxes on the right side of the menu screen, each with a line pointing to a specific line of text in the menu:

- The first box points to the line "Client IP Pool Starting Address= 192.168.1.33".
- The second box points to the line "Size of Client IP Pool= 32".
- The third box points to the line "Primary DNS Server= 0.0.0.0".
- The fourth box points to the line "IP Address= 192.168.1.1".

Figure 3-4 Menu 3.2 — TCP/IP and DHCP Ethernet Setup

Follow the instructions in the following table on how to configure the DHCP fields.

Table 3-3 LAN DHCP Setup Menu Fields

FIELD	DESCRIPTION	EXAMPLE
DHCP	This field enables/disables the DHCP server. If it is set to Server , your Prestige will act as a DHCP server. If set to None , DHCP service will be disabled and you must have another DHCP server on your LAN, or else the workstation must be manually configured. When DHCP is set to Server , the following four items need to be set. The Prestige can now also act as a surrogate DHCP server (Relay) where it relays IP address assignment from the actual real DHCP server to the clients.	Server (default)
Configuration: Client IP Pool Starting Address	This field specifies the first of the contiguous addresses in the IP address pool.	192.168.1.33
Size of Client IP Pool	This field specifies the size, or count, of the IP address pool.	32
Primary DNS Server Secondary DNS Server	Enter the IP addresses of the DNS servers. The DNS servers are passed to the DHCP clients along with the IP address and the subnet mask. Leave these entries at 0.0.0.0 if a WAN DHCP server provides them.	
DHCP Server Address	The Prestige acts as a surrogate DHCP server when you select Relay from the DHCP field. This field is N/A when the DHCP field is Server or None .	N/A

Follow the instructions in the table shown next to configure TCP/IP parameters for the LAN port.

Table 3-4 LAN TCP/IP Setup Menu Fields

FIELD	DESCRIPTION	EXAMPLE
TCP/IP Setup: IP Address	Enter the IP address of your Prestige in dotted decimal notation	192.168.1.1 (default)
IP Subnet Mask	Your Prestige will automatically calculate the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the Prestige	255.255.255.0

FIELD	DESCRIPTION	EXAMPLE
RIP Direction	Press the [SPACE BAR] to select the RIP direction. Options are Both , In Only , Out Only or None .	Both (default)
Version	Press the [SPACE BAR] to select the RIP version. Options are RIP-1 , RIP-2B or RIP-2M .	RIP-1 (default)
Multicast	IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a Multicast group. The Prestige supports both IGMP version 1 (IGMP-v1) and IGMP-v2 . Press the [SPACE BAR] to enable IP Multicasting or select None (default) to disable it.	None
Edit IP Alias	The Prestige supports three logical LAN interfaces via its single physical Ethernet interface with the Prestige itself as the gateway for each LAN network. Press the [SPACE BAR] to select Yes , then press [ENTER] to display menu 3.2.1	Yes
When you have completed this menu, press [ENTER] at the prompt [Press ENTER to Confirm...] to save your configuration, or press [ESC] at any time to cancel.		

3.2.1 IP Alias Setup

Use menu 3.2 to configure the first network and move the cursor to the **Edit IP Alias** field and press [SPACE BAR] to choose **Yes** and press [ENTER] to configure the second and third network.

Pressing [ENTER] opens **Menu 3.2.1 - IP Alias Setup**, as shown next.

```

Menu 3.2.1 - IP Alias Setup

IP Alias 1= No
IP Address= N/A
IP Subnet Mask= N/A
RIP Direction= N/A
Version= N/A
Incoming protocol filters= N/A
Outgoing protocol filters= N/A
IP Alias 2= No
IP Address= N/A
IP Subnet Mask= N/A
RIP Direction= N/A
Version= N/A
Incoming protocol filters= N/A
Outgoing protocol filters= N/A

Enter here to CONFIRM or ESC to CANCEL:
Press Space Bar to Toggle.
    
```

Figure 3-5 Menu 3.2.1 — IP Alias Setup

Follow the instructions in the table shown next to configure IP Alias parameters.

Table 3-5 IP Alias Setup Menu Fields

FIELD	DESCRIPTION	EXAMPLE
IP Alias	Choose Yes to configure the LAN network for the Prestige.	Yes
IP Address	Enter the IP address of your Prestige in dotted decimal notation	192.168.2.1
IP Subnet Mask	Your Prestige will automatically calculate the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the Prestige.	255.255.255.0
RIP Direction	Press the [SPACE BAR] to select the RIP direction. Options are None , Both , In Only or Out Only .	None
Version	Press the [SPACE BAR] to select the RIP version. Options are RIP-1 , RIP-2B or RIP-2M .	RIP-1
Incoming Protocol Filters	Enter the filter set(s) you wish to apply to the incoming traffic between this node and the Prestige.	

FIELD	DESCRIPTION	EXAMPLE
Outgoing Protocol Filters	Enter the filter set(s) you wish to apply to the outgoing traffic between this node and the Prestige.	
When you have completed this menu, press [ENTER] at the prompt [Press ENTER to Confirm...] to save your configuration, or press [ESC] at any time to cancel.		

3.3 Internet Access Setup

You will see three different menu 4 screens depending on whether you chose **Ethernet**, **PPTP** or **PPPoE** encapsulation.

In the **Encapsulation** field in menu 4, choose:

- Ethernet when the WAN port is used as a regular Ethernet.
- PPTP or PPPoE if you have a dial-up connection to the Internet.

3.3.1 Ethernet Encapsulation

You must choose the **Ethernet** option when the WAN port is used as a regular Ethernet. If you choose **Ethernet** in menu 4 you will see the next screen.

```

Menu 4 - Internet Access Setup

ISP's Name= myISP
Encapsulation= Ethernet
Service Type= Standard
My Login= N/A
My Password= N/A
Login Server IP= N/A

IP Address Assignment= Dynamic
IP Address= N/A
IP Subnet Mask= N/A
Gateway IP Address= N/A
Network Address Translation = SUA Only

Press ENTER to Confirm or ESC to Cancel:

```

Figure 3-6 Internet Access Setup (Ethernet)

The following table describes this screen.

Table 3-6 Internet Access Setup Menu Fields

FIELD	DESCRIPTION
ISP's Name	Enter the name of your Internet Service Provider, e.g., myISP. This information is for identification purposes only.
Encapsulation	Press the [SPACE BAR] and then press [ENTER] to choose Ethernet . The encapsulation method influences your choices for IP Address.
Service Type	This is applicable only when you choose Ethernet as your encapsulation method. Press the [SPACE BAR] to select Standard , RR-Toshiba (RoadRunner Toshiba authentication method), RR-Manager (RoadRunner Manager authentication method) or RR-Telstra (RoadRunner Telstra authentication method). Choose a RoadRunner service type if your ISP is Time Warner's RoadRunner; otherwise choose Standard .
Note: xDSL users must choose the Standard option only. The Server IP , My Login IP and My Password fields are not applicable in this case.	
My Login	Enter the login name given to you by your ISP.
My Password	Enter the password associated with the login name above.
Login Server IP	The Prestige will find the RoadRunner Server IP if this field is left blank. If it does not, then you must enter the authentication server IP address.
IP Address Assignment	If your ISP did not assign you a fixed IP address, select Dynamic , otherwise select Static and enter the IP address & subnet mask in the following fields.
IP Address	Enter the (fixed) IP address assigned to you by your ISP (Static IP Address Assignment is selected in the previous field).
IP Subnet Mask	Enter the subnet mask associated with your static IP.
Gateway IP Address	Enter the gateway IP address associated with your static IP.
Network Address Translation	Refer to the following chapter for a more detailed discussion on the Single User Account and NAT. Options are SUA only , Full Feature or None .
Once you have finished configuring a rule in this menu, press [ENTER] at the message "Press ENTER to Confirm..." to save your configuration, or press [ESC] to cancel.	

3.3.2 PPTP Encapsulation

Point-to-Point Tunneling Protocol (PPTP) is a network protocol that enables transfer of data from a remote client to a private server, creating a Virtual Private Network (VPN) using TCP/IP-based networks.

PPTP supports on-demand, multi-protocol, and virtual private networking over public networks, such as the Internet.

The P314 PLUS supports one PPTP server connection at any given time.

3.3.3 Configure PPTP Client

To configure a PPTP client, you must configure **My Login** and **Password** fields for PPP connection and PPTP parameters for PPTP connection.

After configuring the **User Name** and **Password** for PPP connection, press [SPACE BAR] in the **Encapsulation** field in **Menu 4 -Internet Access Setup** to choose **PPTP** as your encapsulation option.

If you choose **PPTP** in menu 4 you will see the next screen.

```

Menu 4 - Internet Access Setup

ISP's Name= myISP
Encapsulation= PPTP
Service Type= N/A
My Login=
My Password= *****
Idle Timeout= 300

IP Address Assignment= Dynamic
IP Address= N/A
IP Subnet Mask= N/A
Gateway IP Address=N/A
Network Address Translation = SUA Only

Press ENTER to Confirm or ESC to Cancel:
```

Figure 3-7 Internet Access Setup (PPTP)

The following table contains instructions about the new fields when you choose **PPTP** in the **Encapsulation** field in menu 4.

Table 3-7 New Fields in Menu 4 (PPTP) screen

FIELD	DESCRIPTION	EXAMPLE
Encapsulation	Press the [SPACE BAR] and then press [ENTER] to choose PPTP. The encapsulation method influences your choices for IP Address.	PPTP

FIELD	DESCRIPTION	EXAMPLE
Idle Timeout	This value specifies the time in seconds that elapses before the Prestige automatically disconnects from the PPTP server.	300 (default)

3.3.4 PPPoE Encapsulation

The Prestige supports PPPoE (Point-to-Point Protocol over Ethernet). You can use PPPoE encapsulation only when you're using the Prestige with an xDSL modem as the WAN device.

PPPoE is an IETF Draft standard specifying how a host personal computer interacts with a broadband modem (i.e. xDSL, cable, wireless, etc.) to achieve access to high-speed data networks. It preserves the existing Microsoft Dial-Up Networking experience and requires no new learning or procedures.

For the service provider, PPPoE offers an access and authentication method that works with existing access control systems (e.g., Radius). For the user, PPPoE provides a login and authentication method that the existing Microsoft Dial-Up Networking software can activate, and therefore requires no new learning or procedures for Windows users.

One of the benefits of PPPoE is the ability to let end users access one of multiple network services, a function known as dynamic service selection. This enables the service provider to easily create and offer new IP services for specific users.

Operationally, PPPoE saves significant effort for both the end user and ISP/carrier, as it requires no specific configuration of the broadband modem at the customer site.

By implementing PPPoE directly on the Prestige (rather than individual computers), the computers on the LAN do not need PPPoE software installed, since the Prestige does that part of the task. Furthermore, with NAT, all of the LAN's computers will have access.

If you enable PPPoE in menu 4, you will see the next screen. For more information on PPPoE, please refer to the *PPPoE Appendix*.

```

Menu 4 - Internet Access Setup

ISP's Name= myISP
Encapsulation= PPPoE
Service Type= N/A
My Login=
My Password= *****
Idle Timeout= 300

IP Address Assignment= Dynamic
IP Address= N/A
IP Subnet Mask= N/A
Gateway IP Address= N/A
Network Address Translation = SUA Only

Press ENTER to Confirm or ESC to Cancel:
    
```

Figure 3-8 Internet Access (PPPoE)

Table 3-8 New Fields in Menu 4 (PPPoE) screen

FIELD	DESCRIPTION	EXAMPLE
Encapsulation	Press the [SPACE BAR] and then press [ENTER] to choose PPPoE . The encapsulation method influences your choices for IP Address.	PPPoE
Idle Timeout	This value specifies the time in seconds that elapses before the Prestige automatically disconnects from the PPPoE server.	300 (default)

3.4 Internet Test Setup

After configuring the menu 4 fields when you press [ENTER] to confirm you will see the message, " Do you wish to perform the Internet Setup Test[y/n].:" if you have chosen PPTP or PPPoE as your encapsulation method. Say 'Y' to test your setup. An example of Internet Setup Test is shown next.

```
Start dialing for node <ChangeMe>...
### Hit any key to continue.###
$$$ DIALING dev=a ch=0.....
$$$ OUTGOING-CALL phone()
$$$ PPTP: Start tunnel setup, send SCCRQ
$$$ PPTP: OCRQ sent
$$$ CALL CONNECT speed<10000000> type<10> chan<0>
$$$ LCP opened
$$$ CHAP login to remote OK
$$$ IPCP negotiation started
$$$ CCP stopped
$$$ BACP stopped
$$$ IPCP neg' Primary DNS 202.xxx.xxx.x
$$$ IPCP opened
```

Figure 3-9 Internet Setup Test Example

3.5 Basic Setup Complete

Well done! You have successfully connected, installed and set up your Prestige to operate on your network and access the Internet.

Part II:

Advanced Applications

This section describes the advanced applications of your Prestige, such as NAT, Remote Node Setup and IP Static Route Setup.

Chapter 4

Network Address Translation (NAT)

This chapter discusses how to configure NAT on the Prestige.

4.1 Introduction

NAT (Network Address Translation - NAT, RFC 1631) is the translation of the IP address of a host in a packet, e.g., the source address of an outgoing packet, used within one network to a different IP address known within another network.

4.1.1 NAT Definitions

Inside/outside denotes where a host is located relative to the Prestige, e.g., the workstations of your subscribers are the inside hosts, while the web servers on the Internet are the outside hosts.

Global/local denotes the IP address of a host in a packet as the packet traverses a router, e.g., the local address refers to the IP address of a host when the packet is in the local network, while the global address refers to the IP address of the host when the same packet is traveling in the WAN side.

Note that inside/outside refers to the location of a host, while global/local refers to the IP address of a host used in a packet. Thus, an inside local address (ILA) is the IP address of an inside host in a packet when the packet is still in the local network, while an inside global address (IGA) is the IP address of the same inside host when the packet is on the WAN side. The following table summarizes this information.

Table 4-1 NAT Definitions

TERM	DEFINITION
Inside	This refers to the host on the LAN.
Outside	This refers to the host on the WAN.
Local	This refers to the packet address (source or destination) as the packet travels on the LAN.
Global	This refers to the packet address (source or destination) as the packet travels on the WAN.

NAT never changes the IP address (either local or global) of an outside host.

4.1.2 What NAT Does

In the simplest form, NAT changes the source IP address in a packet received from a subscriber (the inside local address) to another (the inside global address) before forwarding the packet to the WAN side. When the response comes back, NAT translates the destination address (the inside global address) back the inside local address before forwarding it to the original inside host. Note that the IP address (either local or global) of an outside host is never changed.

The global IP addresses for the inside hosts can be either static or dynamically assigned by the ISP. In addition, you can designate servers, e.g., a web server and a telnet server, on your local network and make them accessible to the outside world. If you do not define any servers (for Many-to-One and Many-to-Many Overload mapping – see *Table 4-2*), NAT offers the additional benefit of firewall protection. If no server is defined in these cases, all incoming inquiries will be filtered out by your Prestige, thus preventing intruders from probing your network. For more information on IP address translation, refer to *RFC 1631, The IP Network Address Translator (NAT)*.

4.1.3 How NAT Works

Each packet has two addresses – a source address and a destination address. For outgoing packets, the ILA (Inside Local Address) is the source address on the LAN, and the IGA (Inside Global Address) is the source address on the WAN. For incoming packets, the ILA is the destination address on the LAN, and the IGA is the destination address on the WAN. NAT maps private (local) IP addresses to globally unique ones required for communication with hosts on other networks. It replaces the original IP source address (and TCP or UDP source port numbers for Many-to-One and Many-to-Many Overload NAT mapping) in each packet and then forwards it to the Internet. The Prestige keeps track of the original addresses and port numbers so incoming reply packets can have their original values restored. The following figure illustrates this.

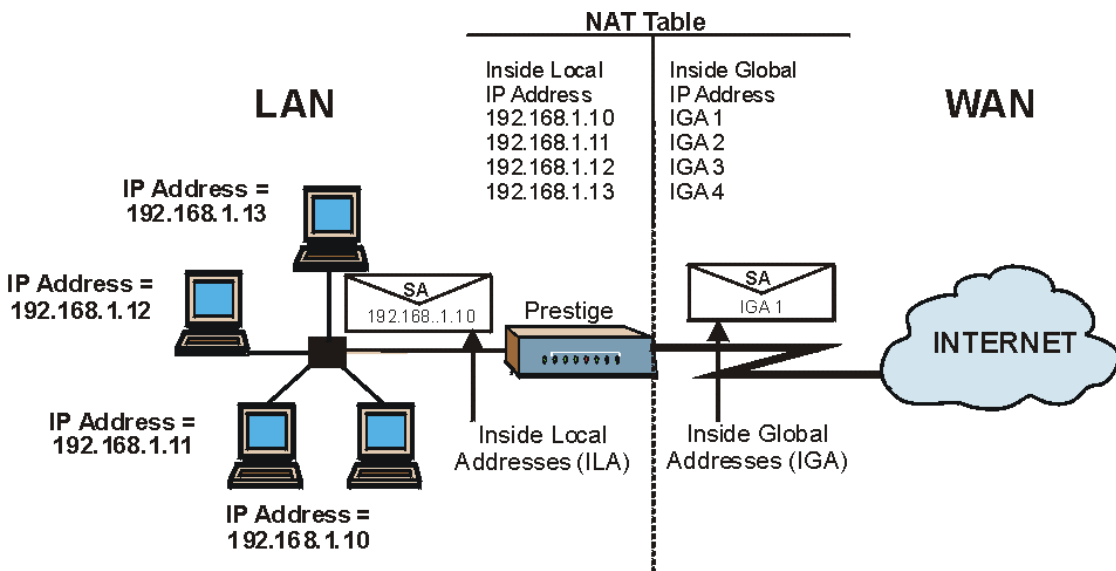


Figure 4-1 How NAT Works

4.1.4 NAT Application

The following figure illustrates a possible NAT application, where three inside LANs (logical LANs using IP Alias) behind the Prestige can communicate with three distinct WAN networks. More examples follow at the end of this chapter.

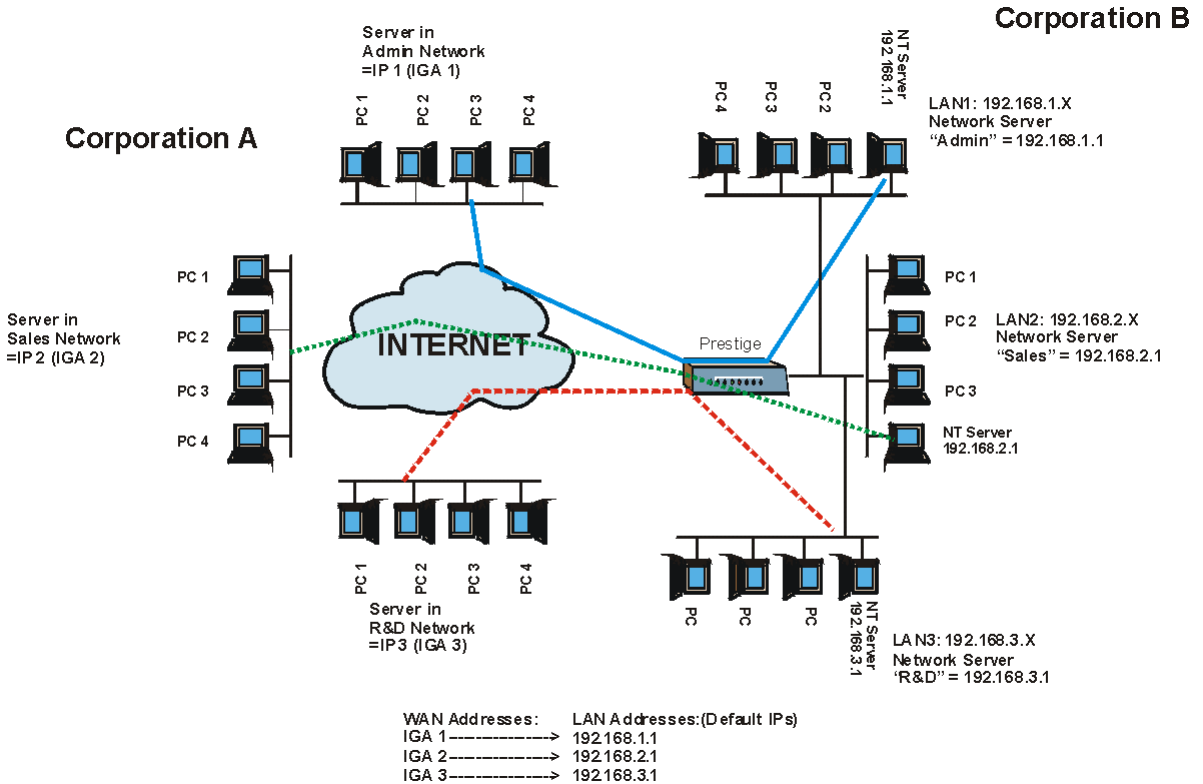


Figure 4-2 NAT Application With IP Alias

4.1.5 NAT Mapping Types

NAT supports five types of IP/port mapping. They are:

1. **One to One:** In One-to-One mode, the Prestige maps one local IP address to one global IP address.
2. **Many to One:** In Many-to-One mode, the Prestige maps multiple local IP addresses to one global IP address. This is equivalent to SUA (i.e., PAT, port address translation), ZyXEL's Single User Account feature that previous ZyXEL routers supported (the SUA Only option in today's routers).

3. **Many to Many Overload:** In Many-to-Many Overload mode, the Prestige maps the multiple local IP addresses to shared global IP addresses.
4. **Many One-to-One:** In **Many One-to-One** mode, the Prestige maps the each local IP addresses to unique global IP addresses.
5. **Server:** This type allows you to specify inside servers of different services behind the NAT to be accessible to the outside world.

Port numbers do not change for One-to-One and Many One-to-One NAT mapping types.

The following table summarizes these types.

Table 4-2 NAT Mapping Types

TYPE	IP MAPPING	SMT ABBREVIATION
One-to-One	ILA1 ↔ IGA1	1:1
Many-to-One (SUA/PAT)	ILA1 ↔ IGA1 ILA2 ↔ IGA1 ...	M:1
Many-to-Many Overload	ILA1 ↔ IGA1 ILA2 ↔ IGA2 ILA3 ↔ IGA1 ILA4 ↔ IGA2 ...	M:M Ov
Many-One-to-One	ILA1 ↔ IGA1 ILA2 ↔ IGA2 ILA3 ↔ IGA3 ...	M-1-1
Server	Server 1 IP ↔ IGA1 Server 2 IP ↔ IGA1 Server 3 IP ↔ IGA1	Server

4.2 Using NAT

4.2.1 SUA (Single User Account) Versus NAT

SUA (Single User Account) is a Zynos implementation of a subset of NAT that supports two types of mapping, **Many-to-One** and **Server**. See section 4.3.1 for a detailed description of the NAT set for SUA. The Prestige also supports **Full Feature** NAT to map multiple global IP addresses to multiple private LAN IP addresses of clients or servers using mapping types as outlined in *Table 4-2*.

-
1. Choose SUA Only if you have just one public WAN IP address for your Prestige.
 2. Choose Full Feature if you have multiple public WAN IP addresses for your Prestige.
-

4.2.2 Applying NAT

You apply NAT via menus 4 or 11.3 as displayed next. The next figure shows you how to apply NAT for Internet access in menu 4. Enter 4 from the main menu to go to **Menu 4 - Internet Access Setup**.

```
Menu 4 - Internet Access Setup

ISP's Name= myISP
Encapsulation= Ethernet
Service Type= Standard
My Login= N/A
My Password= N/A
Login Server IP= N/A

IP Address Assignment= Dynamic
IP Address= N/A
IP Subnet Mask= N/A
Gateway IP Address= N/A
Network Address Translation= SUA Only

Press ENTER to Confirm or ESC to Cancel:
```

Figure 4-3 Menu 4 — Applying NAT for Internet Access

The following figure shows how you apply NAT to the remote node in menu 11.1.

Step 1. Enter 11 from the main menu.

Step 2. Move the cursor to the **Edit IP** field, press the [SPACE BAR] to select **Yes** and then press

Step 3. [ENTER] to bring up **Menu 11.3 - Remote Node Network Layer Options**.

```

Menu 11.3 - Remote Node Network Layer Options

IP Address Assignment= Dynamic
IP Address: N/A
IP Subnet Mask= N/A
Gateway IP Addr= N/A

Network Address Translation= Full Feature
Metric= 1
Private= No
RIP Direction= None
Version= N/A
Multicast= None

Enter here to CONFIRM or ESC to CANCEL:
Press Space Bar to Toggle.
    
```

Figure 4-4 Menu 11.3 — Applying NAT to the Remote Node

The following table describes the options for Network Address Translation.

Table 4-3 Applying NAT in Menus 4 & 11.3

FIELD	OPTIONS	DESCRIPTION
Network Address Translation	Full Feature	When you select this option the SMT will use Address Mapping Set 1 (menu 15.1 - see section 4.3.1 for further discussion). You can configure any of the mapping types described in <i>Table 4-2</i> . Choose Full Feature if you have multiple public WAN IP addresses for your Prestige.
	None	NAT is disabled when you select this option.
	SUA Only	When you select this option the SMT will use Address Mapping Set 255 (menu 15.1 - see section 4.3.1). Choose SUA Only if you have just one public WAN IP address for your Prestige.

4.3 NAT Setup

Use the Address Mapping Sets menus and submenus to create the mapping table used to assign global addresses to computers on the LAN. You can see two NAT Address Mapping sets in menu 15.1. You can only configure **Set 1**. **Set 255** is used for SUA. When you select **Full Feature** in menu 4 or 11.3, the SMT will use **Set 1**, which supports all mapping types as outlined in *Table 4-2*. When you select **SUA Only**, the SMT will use the pre-configured **Set 255** (read only).

The Server Set is a list of LAN side servers mapped to external ports. To use this set (one set for the Prestige 10), a server rule must be set up inside the NAT Address Mapping set. Please see *section **Error! Reference source not found.*** for further information on these menus. To configure NAT, enter 15 from the main menu to bring up the following screen.

```
Menu 15 - NAT Setup

1.  Address Mapping Sets
2.  Port Forwarding Setup
3.  Trigger Port Setup

Enter Menu Selection Number:
```

Figure 4-5 Menu 15 — NAT Setup

4.3.1 Address Mapping Sets

Enter 1 to bring up **Menu 15.1 — Address Mapping Sets**.

```
Menu 15.1 - Address Mapping Sets

1.
255. SUA (read only)

Enter Menu Selection Number:
```

Figure 4-6 Menu 15.1 — Address Mapping Sets

SUA Address Mapping Set

Enter 255 to display the next screen (see also *section 4.2.1*). The fields in this menu cannot be changed.

```

Menu 15.1.255 - Address Mapping Rules

Set Name= SUA

Idx Local Start IP  Local End IP  Global Start IP Global End IP  Type
-----
1. 0.0.0.0      255.255.255.255 0.0.0.0          M-1
2.                0.0.0.0          Server
3.
4.
5.
6.
7.
8.
9.
10.

Press ENTER to Confirm or ESC to Cancel:

```

Figure 4-7 Menu 15.1.255 — SUA Address Mapping Rules

The following table explains the fields in this screen.

The fields in menu 15.1.255 are read-only.

Table 4-4 SUA Address Mapping Rules

FIELD	DESCRIPTION	EXAMPLE
Set Name	This is the name of the set you selected in menu 15.1 or enter the name of a new set you want to create.	SUA
Idx	This is the index or rule number.	1
Local Start IP Local End IP	Local Start IP is the starting local IP address (ILA) (see <i>Figure 4-1</i>). Local End IP is the ending local IP address (ILA). If the rule is for all local IPs, then the Start IP is 0.0.0.0 and the End IP is 255.255.255.255.	0.0.0.0 255.255.255.255

Table 4-4 SUA Address Mapping Rules

FIELD	DESCRIPTION	EXAMPLE
Global Start IP	This is the starting global IP address (IGA). If you have a dynamic IP, enter 0.0.0.0 as the Global Start IP .	0.0.0.0
Global End IP	This is the ending global IP address (IGA).	N/A
Type	These are the mapping types discussed above (see <i>Table 4-2</i>). Server allows you to specify multiple servers of different types behind NAT to this machine. See later for some examples.	Server
Once you have finished configuring a rule in this menu, press [ENTER] at the message "Press ENTER to Confirm..." to save your configuration, or press [ESC] to cancel.		

User-Defined Address Mapping Sets

Now let's look at Option 1 in menu 15.1. Enter 1 to bring up this menu. We'll just look at the differences from the previous menu. Note the extra **Action** and **Select Rule** fields mean you can configure rules in this screen. Note also that the [?] in the **Set Name** field means that this is a required field and you must enter a name for the set.

If the Set Name field is left blank, the entire set will be deleted.

```

Menu 15.1.1 - Address Mapping Rules

Set Name= ?

Idx Local Start IP   Local End IP   Global Start IP Global End IP   Type
-----
1.
2.
3.
4.
5.
6.
7.
8.
9.
10.

Action= None      Select Rule= N/A

Press ENTER to Confirm or ESC to Cancel:
    
```

Figure 4-8 Menu 15.1.1 — First Set

The Type, Local and Global Start/End IPs are configured in menu 15.1.1.1 (described later) and the values are displayed here.

Ordering Your Rules

Ordering your rules is important because the Prestige applies the rules in the order that you specify. When a rule matches the current packet, the Prestige takes the corresponding action and the remaining rules are ignored. If there are any empty rules before your new configured rule, your configured rule will be pushed up by that number of empty rules. For example, if you have already configured rules 1 to 6 in your current set and now you configure rule number 9. In the set summary screen, the new rule will be rule 7, not 9.

Now if you delete rule 4, rules 5 to 7 will be pushed up by 1 rule, so as old rule 5 becomes rule 4, old rule 6 becomes rule 5 and old rule 7 becomes rule 6.

Table 4-5 Fields in Menu 15.1.1

FIELD	DESCRIPTION	EXAMPLE
Set Name	Enter a name for this set of rules. This is a required field. If this field is left blank, the entire set will be deleted.	NAT_SET
Action	The default is Edit . Edit means you want to edit a selected rule (see following field). Insert Before means to insert a rule	Edit

FIELD	DESCRIPTION	EXAMPLE
Action	The default is Edit . Edit means you want to edit a selected rule (see following field). Insert Before means to insert a rule before the rule selected. The rules after the selected rule will then be moved down by one rule. Delete means to delete the selected rule and then all the rules after the selected one will be advanced one rule. None disables the Select Rule item.	Edit
Select Rule	When you choose Edit , Insert Before or Delete in the previous field the cursor jumps to this field to allow you to select the rule to apply the action in question.	1

You must press [ENTER] at the bottom of the screen to save the whole set. You must do this again if you make any changes to the set – including deleting a rule. No changes to the set take place until this action is taken.

Selecting **Edit** in the **Action** field and then selecting a rule brings up the following menu, **Menu 15.1.1.1 - Address Mapping Rule** in which you can edit an individual rule and configure the **Type**, **Local** and **Global Start/End IPs**.

An End IP address must be numerically greater than its corresponding IP Start address.

```

Menu 15.1.1.1 Address Mapping Rule

Type= One-to-One

Local IP:
Start=
End = N/A

Global IP:
Start=
End = N/A

Press ENTER to Confirm or ESC to Cancel:

Press Space Bar to Toggle.
    
```

Figure 4-9 Menu 15.1.1.1 — Editing/Configuring an Individual Rule in a Set

Table 4-6 Menu 15.1.1.1 — Editing/Configuring an Individual Rule in a Set

FIELD	DESCRIPTION	EXAMPLE
Type	Press the [SPACE BAR] to select one of five types. These are the mapping types discussed in <i>Table 4-2</i> . Server allows you to specify multiple servers of different types behind NAT to this computer. See <i>section 4.4.3 below</i> for an example.	One-to-One
Local IP	Only local IP fields are N/A for server; Global IP fields MUST be set for Server .	
Start	This is the starting local IP address (ILA).	0.0.0.0
End	This is the ending local IP address (ILA). If the rule is for all local IPs, then put the Start IP as 0.0.0.0 and the End IP as 255.255.255.255. This field is N/A for One-to-One and Server types.	N/A
Global IP		
Start	This is the starting global IP address (IGA). If you have a dynamic IP, enter 0.0.0.0 as the Global IP Start . Note that Global IP Start can be set to 0.0.0.0 only if the types are Many-to-One or Server .	0.0.0.0
End	This is the ending global IP address (IGA). This field is N/A for One-to-One , Many-to-One and Server types .	N/A
Once you have finished configuring a rule in this menu, press [ENTER] at the message "Press ENTER to Confirm..." to save your configuration, or press [ESC] to cancel.		

4.3.2 Port Forwarding Setup

A NAT server set is a list of inside (behind NAT on the LAN) servers, for example, web or FTP, that you can make visible to the outside world even though NAT makes your whole inside network appear as a single machine to the outside world.

Use **Menu 15 - NAT Setup** to forward incoming service requests to the server(s) on your local network. You may enter a single port number or a range of port numbers to be forwarded, and the local IP address of the desired server. The port number identifies a service; for example, web service is on port 80 and FTP on port 21. In some cases, such as for unknown services or where one server can support more than one service (for example both FTP and web service), it might be better to specify a range of port numbers. Entry 12 (port 1026) is non-editable (see *Figure 4-10*).

In addition to the servers for specified services, NAT supports a default server. A service request that does not have a server explicitly designated for it is forwarded to the default server. If the default is not defined, the service request is simply discarded.

Many residential broadband ISP accounts do not allow you to run any server processes (such as a Web or FTP server) from your location. Your ISP may periodically check for servers and may suspend your account if it discovers any active services at your location. If you are unsure, refer to your ISP.

The most often used port numbers are shown in the following table. Please refer to *RFC 1700* for further information about port numbers. Please also refer to the included disk for more examples and details on NAT.

Table 4-7 Services & Port Numbers


SERVICES	PORT NUMBER
ECHO	7
FTP (File Transfer Protocol)	21
Telnet	23
SMTP (Simple Mail Transfer Protocol)	25
DNS (Domain Name System)	53
Finger	79
HTTP (Hyper Text Transfer protocol or WWW, Web)	80
POP3 (Post Office Protocol)	110
NNTP (Network News Transport Protocol)	119
SNMP (Simple Network Management Protocol)	161
SNMP trap	162
PPTP (Point-to-Point Tunneling Protocol)	1723

Configuring a Server behind NAT

Follow these steps to configure a server behind NAT:

Step 1. Enter 15 in the main menu to go to **Menu 15 - NAT Setup**.

- Step 2.** Enter 2 to go to **Menu 15.2 - NAT Server Setup**.
- Step 3.** Enter a port number in an unused **Start Port No** field. To forward only one port, enter it again in the **End Port No** field. To specify a range of ports, enter the last port to be forwarded in the **End Port No** field.
- Step 4.** Enter the inside IP address of the server in the **IP Address** field. In the following figure, you have a computer acting as an FTP, Telnet and SMTP server (ports 21, 23 and 25) at 192.168.1.33.
- Step 5.** Press [ENTER] at the “Press ENTER to confirm ...” prompt to save your configuration after you define all the servers or press [ESC] at any time to cancel.

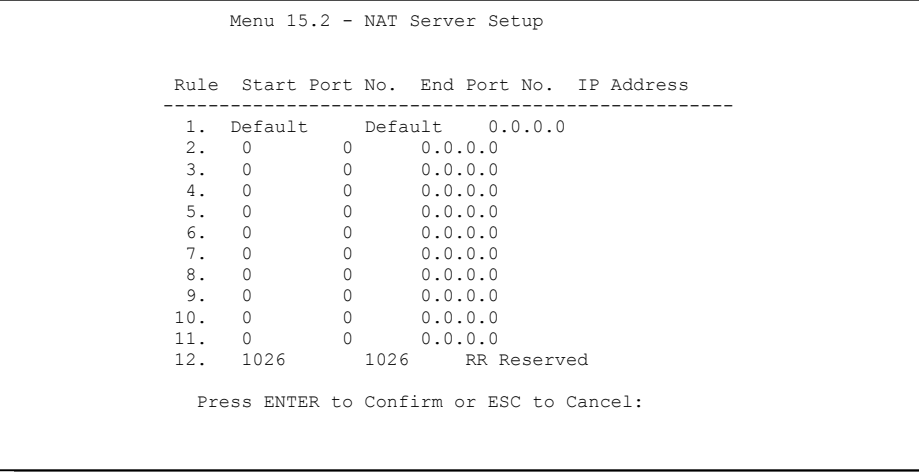

```
Menu 15.2 - NAT Server Setup

Rule  Start Port No.  End Port No.  IP Address
-----
1.  Default          Default      0.0.0.0
2.  0                 0           0.0.0.0
3.  0                 0           0.0.0.0
4.  0                 0           0.0.0.0
5.  0                 0           0.0.0.0
6.  0                 0           0.0.0.0
7.  0                 0           0.0.0.0
8.  0                 0           0.0.0.0
9.  0                 0           0.0.0.0
10. 0                 0           0.0.0.0
11. 0                 0           0.0.0.0
12. 1026             1026       RR Reserved

Press ENTER to Confirm or ESC to Cancel:
```

Figure 4-10 Menu 15.2 — NAT Server Setup

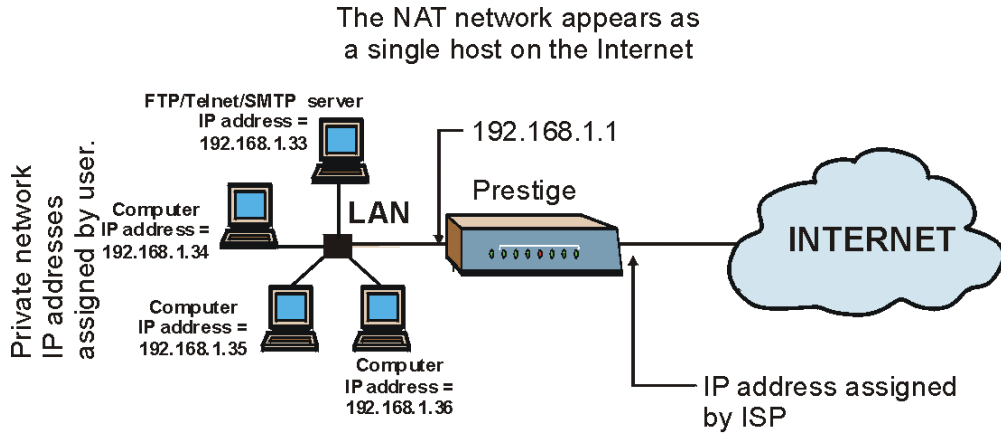


Figure 4-11 Multiple Servers Behind NAT Example

4.3.3 Trigger Port Setup

The following is an example of trigger port forwarding.

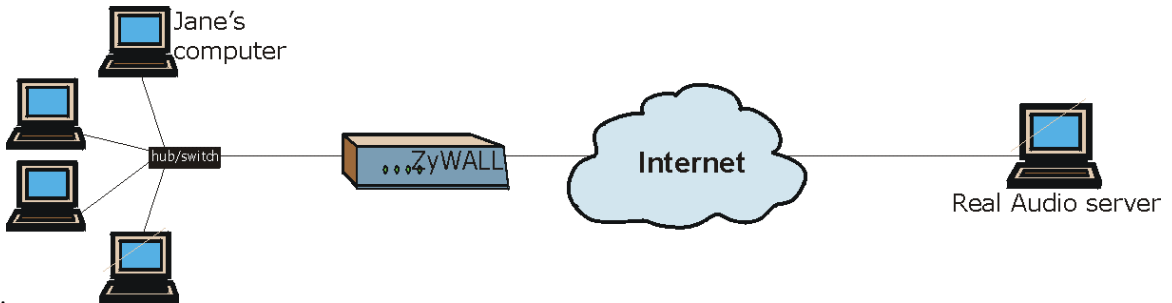


Figure 4-12 Trigger Port Forwarding Process: Example

1. Jane requests a file from the Real Audio server (port 7070).
2. Port 7070 is a “trigger” port and causes the Prestige to record Jane’s computer IP address. The Prestige associates Jane's computer IP address with the "incoming" port range of 6970-7170.
3. The Real Audio server responds using a port number ranging between 6970-7170.

4. The Prestige forwards the traffic to Jane’s computer IP address.
5. Only Jane can connect to the Real Audio server until the connection is closed or times out. The Prestige times out in three minutes with UDP (User Datagram Protocol) or two hours with TCP/IP (Transfer Control Protocol/Internet Protocol).

Two Points To Remember About Trigger Ports

1. Trigger events only happen on data that is going coming from inside the Prestige and going to the outside.
2. If an application needs a continuous data stream, that port (range) will be tied up so that another computer on the LAN can’t trigger it.

Only one LAN computer can use a trigger port (range) at a time.

Enter 3 in menu 15 to display **Menu 15.3 — Trigger Port Setup**, shown next.

Menu 15.3 - Trigger Port Setup						
Rule	Name	Incoming		Trigger		
		Start Port	End Port	Start Port	End Port	
1.	Real Audio	6970	7170	7070	7070	
2.		0	0	0	0	
3.		0	0	0	0	
4.		0	0	0	0	
5.		0	0	0	0	
6.		0	0	0	0	
7.		0	0	0	0	
8.		0	0	0	0	
9.		0	0	0	0	
10.		0	0	0	0	
11.		0	0	0	0	
12.		0	0	0	0	

Press ENTER to Confirm or ESC to Cancel:

Figure 4-13 Menu 15.3: Trigger Port Setup

Table 4-8 Menu 15.3—Trigger Port Setup Description

FIELD	DESCRIPTION	EXAMPLE
Rule	This is the rule index number.	1
Name	Enter a unique name for identification purposes. You may enter up to 15 characters in this field. All characters are permitted - including spaces.	Real Audio
Incoming	Incoming is a port (or a range of ports) that a server on the WAN uses when it sends out a particular service. The Prestige forwards the traffic with this port (or range of ports) to the client computer on the LAN that requested the service.	
Start Port	Enter a port number or the starting port number in a range of port numbers.	6970
End Port	Enter a port number or the ending port number in a range of port numbers.	7170
Trigger	The trigger port is a port (or a range of ports) that causes (or triggers) the Prestige to record the IP address of the LAN computer that sent the traffic to a server on the WAN.	
Start Port	Enter a port number or the starting port number in a range of port numbers.	7070
End Port	Enter a port number or the ending port number in a range of port numbers.	7070
Press [ENTER] at the message "Press ENTER to Confirm..." to save your configuration, or press [ESC] at any time to cancel.		

4.4 General NAT Examples

4.4.1 Internet Access Only

In the following Internet access example, you only need one rule where all your ILAs (Inside Local addresses) map to one dynamic IGA (Inside Global Address) assigned by your ISP.

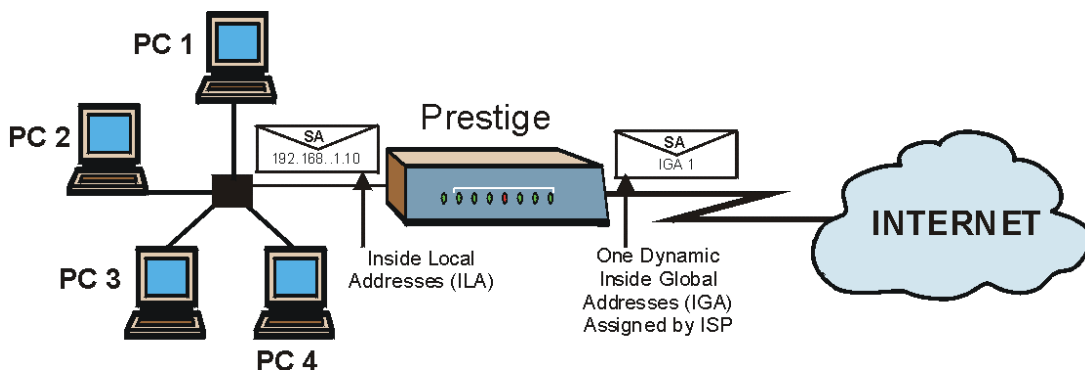


Figure 4-14 NAT Example 1

```

Menu 4 - Internet Access Setup

ISP's Name= ChangeMe
Encapsulation= Ethernet
Service Type= Standard
My Login= N/A
My Password= N/A
Login Server IP= N/A

IP Address Assignment= Dynamic
IP Address= N/A
IP Subnet Mask= N/A
Gateway IP Address= N/A
Network Address Translation= SUA Only

Press ENTER to Confirm or ESC to Cancel:

```

Figure 4-15 Menu 4 — Internet Access & NAT Example

From menu 4 shown above, simply choose the **SUA Only** option from the **Network Address Translation** field. This is the Many-to-One mapping discussed in *section 4.1.5*. The **SUA Only** read-only option from the **Network Address Translation** field in menus 4 and 11.3 is specifically pre-configured to handle this case.

4.4.2 Example 2: Internet Access with an Inside Server

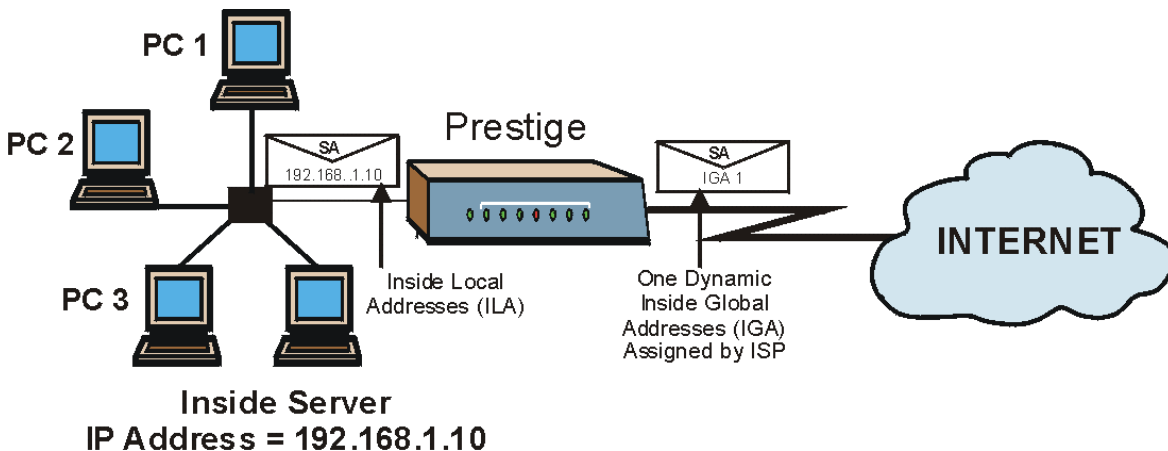


Figure 4-16 NAT Example 2

In this case, you do exactly as above (use the convenient pre-configured **SUA Only** set) and also go to menu 15.2 to specify the Inside Server behind the NAT as shown later.

4.4.3 Example 3: Multiple Public IP Addresses With Inside Servers

In this example, there are 3 IGAs from our ISP. There are many departments but two have their own FTP server. All departments share the same router. The example will reserve one IGA for each department with an FTP server and all departments use the other IGA. Map the FTP servers to the first two IGAs and the other LAN traffic to the remaining IGA. Map the third IGA to an inside web server and mail server. Four rules need to be configured, two bi-directional and two uni-directional as follows.

- Rule 1.** Map the first IGA to the first inside FTP server for FTP traffic in both directions (**1 : 1** mapping, giving both local and global IP addresses).
- Rule 2.** Map the second IGA to our second inside FTP server for FTP traffic in both directions (**1 : 1** mapping, giving both local and global IP addresses).
- Rule 3.** Map the other outgoing LAN traffic to IGA3 (**Many : 1** mapping).

Rule 4. You also map your third IGA to the web server and mail server on the LAN. Type **Server** allows you to specify multiple servers, of different types, to other computers behind NAT on the LAN.

The example situation looks somewhat like this:

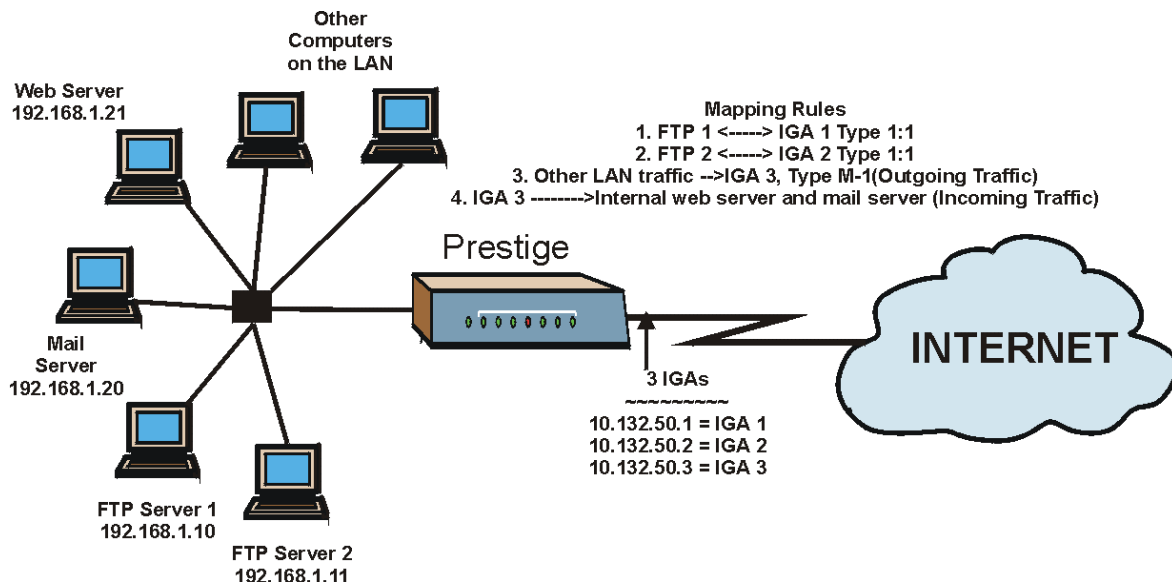


Figure 4-17 NAT Example 3

In this case you need to configure Address Mapping Set 1 from **Menu 15.1 - Address Mapping Sets**. Therefore you must choose the **Full Feature** option from the **Network Address Translation** field (in menu 4 or menu 11.3) in *Figure 4-18*.

Step 1. Then enter 15 from the main menu.

Step 2. Enter 1 to configure the Address Mapping Sets.

Step 3. Enter 1 to begin configuring this new set. Enter a Set Name, choose the **Edit Action** and then enter 1 for the **Select Rule** field. Press [ENTER] to confirm.

- Step 4.** Select **Type** as **One-to-One** (direct mapping for packets going both ways), and enter the local **Start IP** as 192.168.1.10 (the IP address of FTP Server 1), the global **Start IP** as 10.132.50.1 (our first IGA). (See *Figure 4-19*).
- Step 5.** Repeat the previous step for rules 2 to 4 as outlined above.
- Step 6.** When finished, menu 15.1.1 should look like as shown in *Figure 4-20*.

```
Menu 11.3 - Remote Node Network Layer Options

IP Address Assignment= Dynamic
IP Address= N/A
IP Subnet Mask= N/A
Gateway IP Addr= N/A
Network Address Translation= Full Feature
Metric= 1
Private= No
RIP Direction= None
Version= N/A

Enter here to CONFIRM or ESC to CANCEL:
```

Figure 4-18 Example 3: Menu 11.3

The following figure shows how to configure the first rule.

```

Menu 15.1.1.1 Address Mapping Rule

Type= One-to-One
Local IP:
Start= 192.168.1.10
End = N/A

Global IP:
Start= 10.132.50.1
End = N/A

Press ENTER to Confirm or ESC to Cancel:

Press Space Bar to Toggle.
    
```

Figure 4-19 Example 3: Menu 15.1.1.1

```

Menu 15.1.1 - Address Mapping Rules

Set Name= Example3

Idx Local Start IP Local End IP Global Start IP Global End IP Type
-----
1. 192.168.1.10          10.132.50.1          1-1
2 192.168.1.11          10.132.50.2          1-1
3. 0.0.0.0              255.255.255.255 10.132.50.3          M-1
4.                      10.132.50.3          Server
5.
6.
7.
8.
9.
10.

Action= Edit      Select Rule=

Press ENTER to Confirm or ESC to Cancel:
    
```

Figure 4-20 Example 3: Final Menu 15.1.1

Now configure the IGA3 to map to our web server and mail server on the LAN.

Step 7. Enter 15 from the main menu.

Step 8. Now enter 2 from this menu and configure it as shown in *Figure 4-21*.

```
Menu 15.2 - NAT Server Setup

Rule  Start Port No.  End Port No.  IP Address
-----
1.  Default          Default      0.0.0.0
2.   80              80          192.168.1.21
3.   25              25          192.168.1.20
4.   0               0           0.0.0.0
5.   0               0           0.0.0.0
6.   0               0           0.0.0.0
7.   0               0           0.0.0.0
8.   0               0           0.0.0.0
9.   0               0           0.0.0.0
10.  0               0           0.0.0.0
11.  0               0           0.0.0.0
12.  1026            1026       RR Reserved

Press ENTER to Confirm or ESC to Cancel:
```

Figure 4-21 Example 3: Menu 15.2

4.4.4 Example 4: NAT Unfriendly Application Programs

Some applications do not support NAT Mapping using TCP or UDP port address translation. In this case it is better to use **Many-One-to-One** mapping as port numbers do *not* change for this mapping type. The following figure illustrates this.

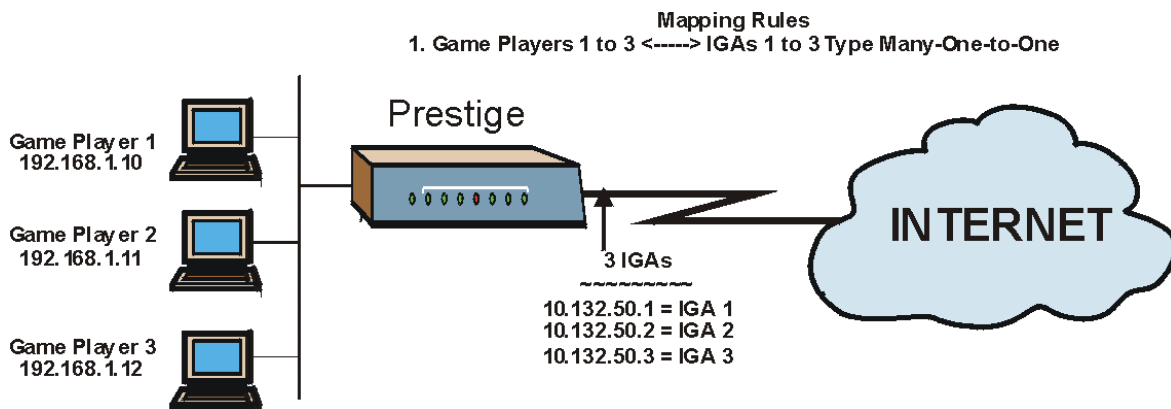


Figure 4-22 NAT Example 4

Other applications, for example, gaming programs are NAT unfriendly because they embed addressing information in the data stream. These applications still won't work through NAT even when using One-to-One and Many One-to-One mapping types.

Follow the steps outlined in example 3 above to configure these two menus as follows.

```

Menu 15.1.1.1 Address Mapping Rule

Type= Many-One-to-One

Local IP:
  Start= 192.168.1.10
  End = 192.168.1.12

Global IP:
  Start= 10.132.50.1
  End = 10.132.50.3

Press ENTER to Confirm or ESC to Cancel:
    
```

Figure 4-23 Example 4: Menu 15.1.1.1 — Address Mapping Rule

After you've configured your rule, you should be able to check the settings in menu 15.1.1 as shown next.

```
Menu 15.1.1 - Address Mapping Rules

Set Name= Example4

Idx Local Start IP  Local End IP   Global Start IP Global End IP  Type
-----
1. 192.168.1.10    192.168.1.12   10.132.50.1    10.132.50.3   M-1-1
2.
3.
4.
5.
6.
7.
8.
9.
10.

Action= Edit      Select Rule=

Press ENTER to Confirm or ESC to Cancel:
```

Figure 4-24 Example 4: Menu 15.1.1 — Address Mapping Rules

Chapter 5

Remote Node Setup

This chapter shows you how to configure a remote node.

A remote node is required for placing calls to a remote gateway. A remote node represents both the remote gateway and the network behind it across a WAN connection. Note that when you use menu 4 to set up Internet access, you are actually configuring a remote node. We will show you how to configure **Menu 11.1 Remote Node Profile**, **Menu 11.3 - Remote Node Network Layer Options** and **Menu 11.5 - Remote Node Filter**.

5.1 Remote Node Profile

From the main menu, select option 11 to display **Menu 11.1 - Remote Node Profile**. There are three variations of this menu depending on whether you choose **Ethernet Encapsulation**, **PPTP** or **PPPoE Encapsulation**.

See *Chapter 10* for information on the “Traffic Redirect” feature.

5.1.1 Ethernet Encapsulation

Choose the **Ethernet** option when the WAN port is used as a regular Ethernet. The first menu 11.1 screen you see is for **Ethernet Encapsulation** shown next.

```

Menu 11.1 - Remote Node Profile

Rem Node Name= ChangeMe           Route= IP
Active= Yes

Encapsulation= Ethernet           Edit IP= No
Service Type= Standard           Session Options:
Service Name= N/A                Edit Filter Sets= No
Outgoing:
My Login= N/A                    Edit Traffic Redirect= No
My Password= N/A
Server IP= N/A

Press ENTER to Confirm or ESC to Cancel.
    
```

Figure 5-1 Menu 11.1 Remote Node Profile for Ethernet Encapsulation

Table 5-1 Fields in Menu 11.1 (Ethernet Encapsulation)

FIELD	DESCRIPTION	EXAMPLE
Rem Node Name	Enter a descriptive name for the remote node. This field can be up to eight characters.	LAoffice
Active	Press [SPACE BAR] to select Yes (activate remote node) or No (deactivate remote node).	Yes
Encapsulation	Ethernet is the default encapsulation. Press the [SPACE BAR] if you wish to change to PPPoE or PPTP encapsulation.	Ethernet
Service Type	Press [SPACE BAR] to select from Standard , RR-Toshiba (RoadRunner Toshiba authentication method), RR-Manager (RoadRunner Manager authentication method) or, RR-Telstra (RoadRunner Telstra authentication method). Choose one of the RoadRunner methods if your ISP is Time Warner's RoadRunner; otherwise choose Standard .	Standard
Note: xDSL users must choose the Standard option only. The Server IP , My Login IP and My Password fields are not applicable in this case.		
Service Name	This is valid only when you have chosen PPPoE encapsulation. If you are using PPPoE encapsulation, then type the name of your PPPoE service here.	poellc
Outgoing		

FIELD	DESCRIPTION	EXAMPLE
My Login	This field is applicable for PPPoE encapsulation only. Enter the login name assigned by your ISP when the Prestige calls this remote node. Some ISPs append this field to the Service Name field above (e.g., jim@poelc) to access the PPPoE server.	jim
My Password	Enter the password assigned by your ISP when the Prestige calls this remote node. Valid for PPPoE encapsulation only.	*****
Server IP	This field is valid for RoadRunner service type only. The Prestige will find the RoadRunner Server IP automatically if this field is left blank. If it does not, then you must enter the authentication server IP address here.	
Route	This field refers to the protocol that will be routed by your Prestige – IP is the only option for the Prestige 10.	IP
Edit IP	This field leads to a “hidden” menu. Press [SPACE BAR] to select Yes and press [ENTER] to go to Menu 11.3 - Remote Node Network Layer Options .	Yes
Session Options Edit Filter sets	This field leads to another “hidden” menu. Use the [SPACE BAR] to select Yes and press [ENTER] to open menu 11.5 to edit the filter sets. See the <i>Remote Node Filter</i> section for more details.	Yes
Once you have configured the Remote Node Profile Menu, press [ENTER] to return to menu 11. Press [ENTER] at the message “Press ENTER to Confirm...” to save your configuration, or press [ESC] at any time to cancel.		

5.1.2 PPTP Encapsulation

If you change the **Encapsulation** to **PPTP** in **Menu 11.1**, then you will see the next screen. Please see the appendix for information.

```

Menu 11.1 - Remote Node Profile

Rem Node Name= ChangeMe          Route= IP
Active= Yes

Encapsulation= PPTP              Edit IP= No
Service Type= Standard           Telco Option:
Service Name=N/A                 Allocated Budget(min)= 0
Outgoing:                         Period(hr)= 0
My Login=                          Schedules=
My Password= *****             Nailed-up Connections= No
Authen= CHAP/PAP

PPTP :                             Session Options:
IP Addr=                           Edit Filter Sets= No
Server IP Addr=                     Idle Timeout(sec)= 300
Connection ID/Name=                 Edit Traffic Redirect= No

Press ENTER to Confirm or ESC to Cancel:

Press Space Bar to Toggle.
    
```

Figure 5-2 Remote Node Profile for PPTP Encapsulation

The next table shows how to configure the new fields in the **Remote Node Profile** menu.

Table 5-2 Fields in Menu 11.1 (PPTP Encapsulation)

FIELD	DESCRIPTION	EXAMPLE
Encapsulation	Press the [SPACE BAR] to choose PPTP . You must also go to menu 11.3 to check the IP Address setting once you have selected the encapsulation method.	PPTP
My IP Addr	Enter the IP address of the WAN Ethernet port.	10.0.0.140
Server IP Addr	Enter the IP address of the ANT modem.	10.0.0.138
Connection ID/Name	Enter the connection ID or connection name in the ANT. It must follow the "c:id" and "n:name" format. This field is optional and depends on the requirements of your xDSL Modem.	N:My ISP
Schedules	You can apply up to four schedule sets here. For more details please refer to the <i>Call Schedule Scheduling</i> chapter.	
Nailed-Up Connections	Use the [SPACE BAR] to select Yes if you want to make the connection to this remote node a nailed-up connection.	No

Nailed-Up Connection

A nailed-up connection is a dial-up line where the connection is always up regardless of traffic demand. The Prestige does two things when you specify a nailed-up connection. The first is that idle timeout is disabled. The second is that the Prestige will try to bring up the connection at power-on and whenever the connection is down. A nailed-up connection can be very expensive for obvious reasons.

Do not specify a nailed-up connection unless your telephone company offers flat-rate service or you need a constant connection and the cost is of no concern.

5.1.3 PPPoE Encapsulation

The Prestige supports PPPoE (Point-to-Point Protocol over Ethernet). PPPoE is an IETF Draft standard (RFC 2516) specifying how a personal computer (PC) interacts with a broadband modem (i.e. xDSL, cable, wireless, etc.) connection.

For the service provider, PPPoE offers an access and authentication method that works with existing access control systems (e.g., Radius). For the user, PPPoE provides a login and authentication method that the existing Microsoft Dial-Up Networking software can activate, and therefore requires no new learning or procedures for Windows users.

One of the benefits of PPPoE is the ability to let end users access one of multiple network services, a function known as dynamic service selection. This enables the service provider to easily create and offer new IP services for specific users.

Operationally, PPPoE saves significant effort for both the end user and ISP/carrier, as it requires no specific configuration of the broadband modem at the customer site.

By implementing PPPoE directly on the Prestige (rather than individual computers), the computers on the LAN do not need PPPoE software installed, since the Prestige does that part of the task. Furthermore, with NAT, all of the LANs' computers will have access.

Enable PPPoE in menu 11.1 by pressing the [SPACE BAR] to select **PPPoE** in the **Encapsulation** field.

```

Menu 11.1 - Remote Node Profile

Rem Node Name= ChangeMe          Route= IP
Active= Yes

Encapsulation= PPPoE            Edit IP= No
Service Type= Standard         Telco Option:
Service Name=                   Allocated Budget(min)= 0
Outgoing=                       Period(hr)= 0
My Login=                       Schedules=
My Password= *****          Nailed-up Connections= No
Authen= CHAP/PAP

Session Options:
  Edit Filter Sets= No
  Idle Timeout(sec)= 100

Edit Traffic Redirect= No

Press ENTER to Confirm or ESC to Cancel:

Press Space Bar to Toggle.
    
```

Figure 5-3 Menu 11.1 Remote Node Profile for PPPoE Encapsulation

The next table describes the fields NOT already described in *Table 5-1* already.

Table 5-3 Fields in Menu 11.1 (PPPoE Encapsulation Specific Only)

FIELD	DESCRIPTION	EXAMPLE
Authen	This field sets the authentication protocol used for outgoing calls. Options for this field are: CHAP/PAP - Your Prestige will accept either CHAP or PAP when requested by this remote node. CHAP - accept CHAP only. PAP - accept PAP only.	CHAP/PAP
Telco Option		
Allocated Budget (min)	The field sets a ceiling for outgoing call time for this remote node. The default for this field is 0 meaning no budget control.	10

Table 5-3 Fields in Menu 11.1 (PPPoE Encapsulation Specific Only)

FIELD	DESCRIPTION	EXAMPLE
Period(hr)	This field is the time period that the budget should be reset. For example, if we are allowed to call this remote node for a maximum of 10 minutes every hour, then the Allocated Budget(min) is (10 minutes) and the Period(hr) is 1 (hour).	1
Schedules	You can apply up to four schedule sets here. For more details please refer to the <i>Call Scheduling</i> chapter.	
Nailed-Up Connection	This field specifies if you want to make the connection to this remote node a nailed-up connection. More details are given earlier in this section.	
Session Options Idle Timeout	This value specifies the idle time (i.e., the length of time there is no traffic from the Prestige to the remote node) in seconds that can elapse before the Prestige automatically disconnects the PPPoE connection. <i>This option only applies when the Prestige initiates the call.</i>	300 seconds (default)

5.2 Editing TCP/IP Options (with Ethernet Encapsulation)

Move the cursor to the **Edit IP** field in **Menu 11.1**, then press the [SPACE BAR] to set the value to **Yes**. Press [ENTER] to open **Menu 11.3 - Network Layer Options**.

```

Menu 11.3 - Remote Node Network Layer Options

IP Address Assignment= Dynamic
Rem IP Address= N/A
Rem IP Subnet Mask= N/A
My WAN Addr=0.0.0.0
Network Address Translation= SUA only
Metric= 1
Private= No
RIP Direction= None
Version= N/A
Multicast= None

Enter here to CONFIRM or ESC to CANCEL:

Press Space Bar to Toggle.

```

Figure 5-4 Remote Node Network Layer Options

The next table gives you instructions about configuring remote node network layer options.

Table 5-4 Remote Node Network Layer Options Menu Fields

FIELD	DESCRIPTION	EXAMPLE
IP Address Assignment	If your ISP did not assign you an explicit IP address, select Dynamic ; otherwise select Static and enter the IP address & subnet mask in the following fields.	Dynamic
Rem IP Address	If you have a Static IP Assignment, enter the IP address assigned to you by your ISP.	
Rem IP Subnet Mask	If you have a Static IP Assignment, enter the subnet mask assigned to you.	
My WAN Addr	If you have a Static IP Assignment, enter the gateway IP address assigned to you.	
Network Address Translation	Use the [SPACE BAR] to select either Full Feature , None or SUA Only . See the <i>NAT</i> chapter for a full discussion of this feature.	SUA Only
Metric	This field is valid only for PPTP/PPPoE encapsulation. The metric represents the “cost” of transmission for routing purposes. IP routing uses hop count as the measurement of cost, with a minimum of 1 for directly connected networks. Enter a number that approximates the cost for this link. The number need not be precise, but it must be between 1 and 15. In practice, 2 or 3 is usually a good number.	3
Private	This field is valid only for PPTP/PPPoE encapsulation. This parameter determines if the Prestige will include the route to this remote node in its RIP broadcasts. If set to Yes , this route is kept private and not included in RIP broadcast. If No , the route to this remote node will be propagated to other hosts through RIP broadcasts.	Yes
RIP	Press the [SPACE BAR] to select the RIP direction . Options are: Both , None , In Only , Out Only or None . Please see the <i>RIP Setup section</i> for more information on RIP. The default for RIP on the WAN side is None . It is recommended that you do not change this setting.	None (default)
Version	Press the [SPACE BAR] to select the RIP version. Options are RIP-1 , RIP-2B or RIP-2M .	None

Table 5-4 Remote Node Network Layer Options Menu Fields

FIELD	DESCRIPTION	EXAMPLE
Multicast	IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a Multicast group. The Prestige supports both IGMP version 1 (IGMP-v1) and version 2 (IGMP-v2). Press [SPACE BAR] to enable IP Multicasting or select None to disable it. See the previous <i>Part</i> for more information on this feature.	IGMP-v2
Once you have completed filling in the Network Layer Options Menu, press [ENTER] to return to menu 11. Press [ENTER] at the message "Press ENTER to Confirm..." to save your configuration, or press [ESC] at any time to cancel.		

5.2.1 Editing TCP/IP Options (with PPTP Encapsulation)

Make sure that **Encapsulation** is set to **PPTP** in menu 11.1. Then move the cursor to the **Edit IP** field in menu 11.1, press the [SPACE BAR] to toggle **No** to **Yes**. Press [ENTER] to open **Menu 11.3 - Network Layer Options**.

```

Menu 11.3 - Remote Node Network Layer Options

IP Address Assignment= Dynamic
Rem IP Address= N/A
Rem Subnet Mask= N/A
My WAN Addr= N/A

Network Address Translation= SUA Only
Metric= 1
Private= No
RIP Direction= None
Version= N/A
Multicast= None

Enter here to CONFIRM or ESC to CANCEL:

Press Space Bar to Toggle.

```

Figure 5-5 Remote Node Network Layer Options

The next table gives you instructions about configuring remote node network layer options.

Table 5-5 Remote Node Network Layer Options Menu Fields

FIELD	DESCRIPTION	EXAMPLE
IP Address Assignment	If your ISP did not assign you an explicit IP address, select Dynamic ; otherwise select Static and enter the IP address & subnet mask in the following fields.	Dynamic
Rem IP Address	If you have a Static IP Assignment , enter the IP address assigned to the remote node.	192.168.1.1
Rem IP Subnet Mask	If you have a Static IP Assignment , enter the subnet mask assigned to the remote node.	255.255.255.0
My WAN Addr	Some implementations, especially the UNIX derivatives, require the WAN link to have a separate IP network number from the LAN and each end must have a unique address within the WAN network number. If this is the case, enter the IP address assigned to the WAN port of your Prestige. Note that this is the address assigned to your local Prestige, not the remote router.	
Network Address Translation	Use the [SPACE BAR] to select either Full Feature , None or SUA Only . See the <i>NAT chapter</i> for a full discussion on this feature.	SUA Only
Metric	The metric represents the “cost” of transmission for routing purposes. IP routing uses hop count as the measurement of cost, with a minimum of 1 for directly connected networks. Enter a number that approximates the cost for this link. The number need not be precise, but it must be between 1 and 15. In practice, 2 or 3 is usually a good number.	1 to 15
Private	This parameter determines if the Prestige will include the route to this remote node in its RIP broadcasts. If set to Yes , this route is kept private and not included in RIP broadcast. If No , the route to this remote node will be propagated to other hosts through RIP broadcasts.	Yes
RIP Version	Press the [SPACE BAR] to select the RIP direction . Options are Both , None , In Only , Out Only or None . Press the [SPACE BAR] to select the RIP version. Options are RIP-1 , RIP-2B or RIP-2M .	None (default) RIP-1
Multicast	IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a Multicast group. The Prestige supports both IGMP version 1 (IGMP-v1) and version 2 (IGMP-v2). Press the [SPACE BAR] to enable IP Multicasting or select None to disable it. See the previous <i>Part</i> for more information on this feature.	None

Table 5-5 Remote Node Network Layer Options Menu Fields

FIELD	DESCRIPTION	EXAMPLE
Once you have completed filling in the Network Layer Options Menu, press [ENTER] to return to menu 11. Press [ENTER] at the message "Press ENTER to Confirm..." to save your configuration, or press [ESC] at any time to cancel.		

5.2.2 Editing TCP/IP Options (with PPPoE Encapsulation)

Make sure **Encapsulation** is set to **PPPoE** in menu 11.1. Move the cursor to the **Edit IP** field in menu 11.1. The menu and field are the same as described for PPTP encapsulation.

5.3 Remote Node Filter

Move the cursor to the field **Edit Filter Sets** in menu 11.1, then press the [SPACE BAR] to set the value to **Yes**. Press [ENTER] to open **Menu 11.5 - Remote Node Filter**.

Use menu 11.5 to specify the filter set(s) to apply to the incoming and outgoing traffic between this remote node and the Prestige to prevent certain packets from triggering calls. You can specify up to 4 filter sets separated by commas, e.g., 1, 5, 9, 12, in each filter field. Note that spaces are accepted in this field. For more information on defining the filters, please refer to the *Filters* chapter. For PPPoE or PPTP Encapsulation, you can also specify remote node call filter sets.

```
Menu 11.5 - Remote Node Filter

Input Filter Sets:
  protocol filters= 5
  device filters=
Output Filter Sets:
  protocol filters= 1
  device filters=
Call Filter Sets:
  protocol filters=1
  device filters=

Enter here to CONFIRM or ESC to CANCEL:
```

Figure 5-6 Remote Node Filter (Ethernet Encapsulation)

```
Menu 11.5 - Remote Node Filter

Input Filter Sets:
  protocol filters= 5
  device filters=
Output Filter Sets:
  protocol filters= 1
  device filters=
Call Filter Sets:
  protocol filters= 1
  device filters=

Enter here to CONFIRM or ESC to CANCEL:
```

Figure 5-7 Remote Node Filter (PPTP/PPPoE Encapsulation)

Chapter 6

IP Static Route Setup

This chapter shows you how to configure static routes with your Prestige.

Static routes tell the Prestige routing information what it cannot learn automatically through other means. This can arise in cases where RIP is disabled on the LAN.

Each remote node specifies only the network to which the gateway is directly connected, and the Prestige has no knowledge of the networks beyond. For instance, the Prestige knows about network N2 in the following diagram through remote node Router 1. However, the Prestige is unable to route a packet to network N3 because it doesn't know that there is a route through the same remote node Router 1 (via gateway Router 2). The static routes are for you to tell the Prestige about the networks beyond the remote nodes.

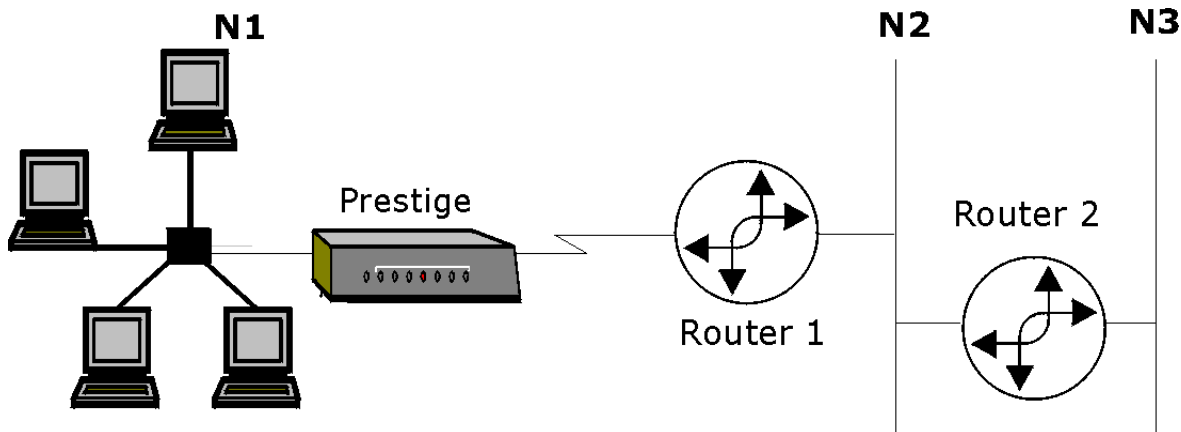


Figure 6-1 Example of Static Routing Topology

6.1 IP Static Route Setup

You configure IP static routes in menu 12. 1, by selecting one of the IP static routes as shown below. Enter 12 from the main menu.

```
Menu 12 - IP Static Route Setup

1. _____
2. _____
3. _____
4. _____
5. _____
6. _____
7. _____
8. _____

Enter selection number:
```

Figure 6-2 Menu 12 — IP Static Route Setup

Now, enter the index number of one of the static routes you want to configure.

```
Menu 12.1 - Edit IP Static Route

Route #: 1
Route Name= ?
Active= No
Destination IP Address= ?
IP Subnet Mask= ?
Gateway IP Address= ?
Metric= 2
Private= No

Press ENTER to CONFIRM or ESC to CANCEL:
```

Figure 6-3 Menu 12. 1 — Edit IP Static Route

The following table describes the IP Static Route Menu fields.

Table 6-1 IP Static Route Menu Fields

FIELD	DESCRIPTION
Route #	This is the index number of the static route that you chose in menu 12.
Route Name	Enter a descriptive name for this route. This is for identification purposes only.
Active	This field allows you to activate/deactivate this static route.
Destination IP Address	This parameter specifies the IP network address of the final destination. Routing is always based on network number. If you need to specify a route to a single host, use a subnet mask of 255.255.255.255 in the subnet mask field to force the network number to be identical to the host ID.
IP Subnet Mask	Enter the IP subnet mask for this destination.
Gateway IP Address	Enter the IP address of the gateway. The gateway is an immediate neighbor of your Prestige that will forward the packet to the destination. On the LAN, the gateway must be a router on the same segment as your Prestige; over the WAN, the gateway must be the IP address of one of the Remote Nodes.
Metric	Metric represents the “cost” of transmission for routing purposes. IP routing uses hop count as the measurement of cost, with a minimum of 1 for directly connected networks. Enter a number that approximates the cost for this link. The number need not be precise, but it must be between 1 and 15. In practice, 2 or 3 is usually a good number.
Private	This parameter determines if the Prestige will include the route to this remote node in its RIP broadcasts. If set to Yes , this route is kept private and not included in RIP broadcast. If No , the route to this remote node will be propagated to other hosts through RIP broadcasts.
Once you have completed filling in this menu, press [ENTER] at the message “Press ENTER to Confirm...” to save your configuration, or press [ESC] to cancel.	

Part III:

Advanced Management

This section provides information on Filter Configuration, SNMP Configuration, System Information and Diagnosis, Firmware and Configuration File Maintenance, System Maintenance and Call Scheduling.

Chapter 7

Filter Configuration

This chapter shows you how to create and apply filter(s).

7.1 About Filtering

Your Prestige uses filters to decide whether to allow passage of a data packet and/or to make a call. There are two types of filter applications: data filtering and call filtering. Filters are subdivided into device and protocol filters, which are discussed later.

Data filtering screens the data to determine if the packet should be allowed to pass. Data filters are divided into incoming and outgoing filters, depending on the direction of the packet relative to a port. Data filtering can be applied on either the WAN side or the Ethernet side. Call filtering is used to determine if a packet should be allowed to trigger a call. Remote node call filtering is only applicable when using **PPTP** or **PPPoE** encapsulation (*see Figure 5-7*). Outgoing packets must undergo data filtering before they encounter call filtering as shown in the following figure.

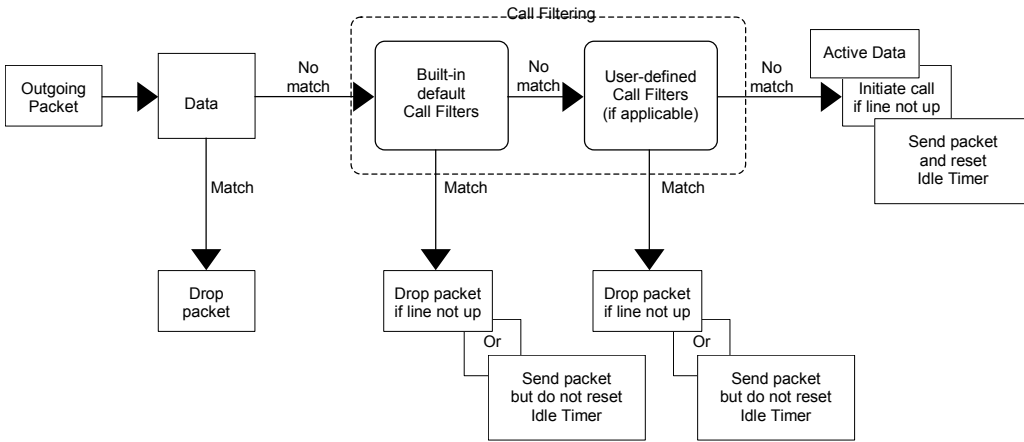


Figure 7-1 Outgoing Packet Filtering Process

For incoming packets, your Prestige applies data filters only. Packets are processed depending upon whether a match is found. The following sections describe how to configure filter sets

7.1.1 The Filter Structure of the Prestige

A filter set consists of one or more filter rules. Usually, you would group related rules, e.g., all the rules for NetBIOS, into a single set and give it a descriptive name. The Prestige allows you to configure up to twelve filter sets with six rules in each set, for a total of 72 filter rules in the system. You cannot mix device filter rules and protocol filter rules within the same set. You can apply up to four filter sets to a particular port to block multiple types of packets. With each filter set having up to six rules, you can have a maximum of 24 rules active for a single port.

Three sets of factory default filter rules have been configured in menu 21 to prevent NetBIOS traffic from triggering calls and to prevent incoming telnetting and FTP connections from the WAN side. A summary of their filter rules is shown in the figures that follow.

The following diagram illustrates the logic flow when executing a filter rule.

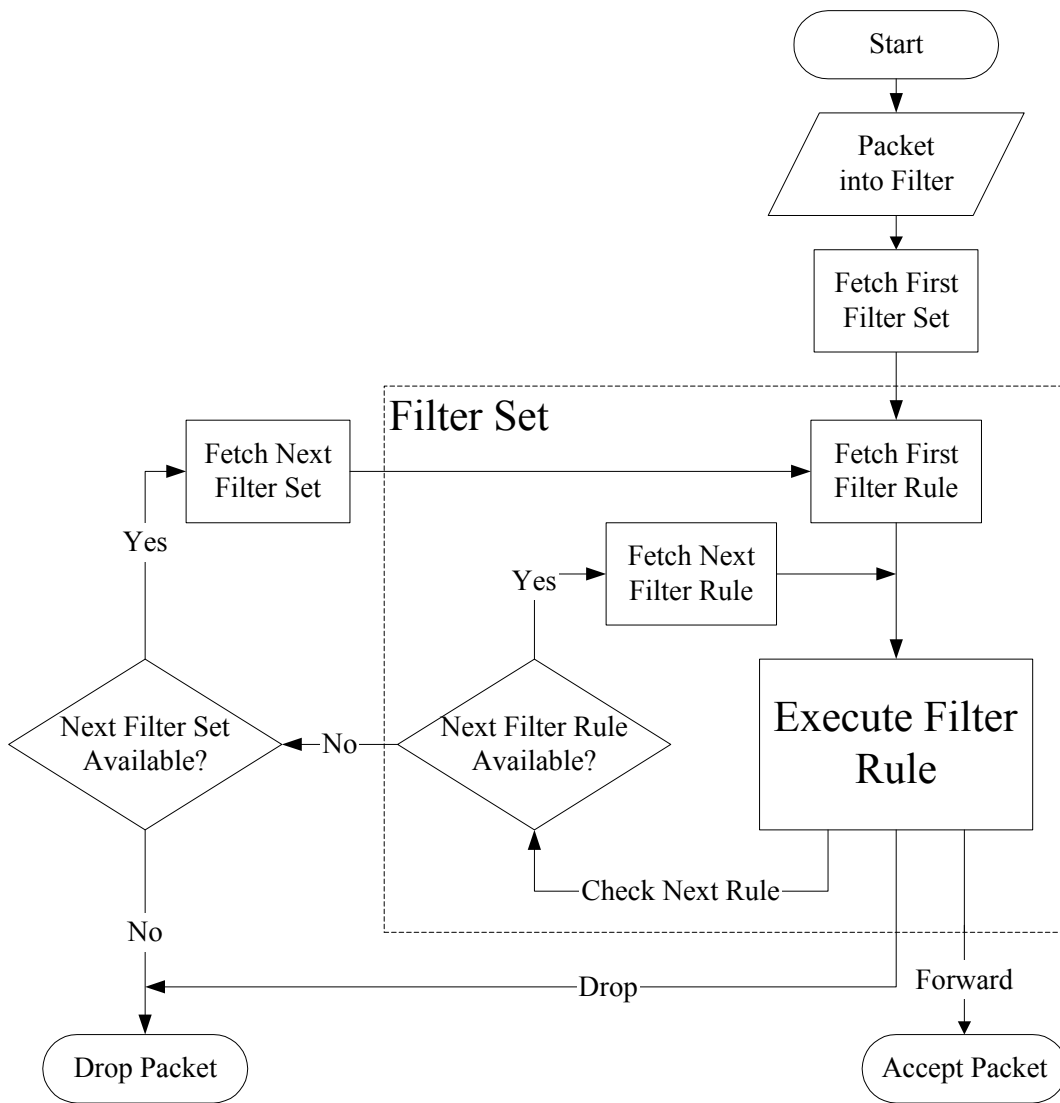


Figure 7-2 Filter Rule Process

You can apply up to four filter sets to a particular port to block multiple types of packets. With each filter set having up to six rules, you can have a maximum of 24 rules active for a single port.

7.2 Configuring a Filter Set

To configure a filter set, follow the procedure below. Select option 21 from the main menu to display menu 21.

Step 1. Enter 1 to display the following menu.

```

Menu 21 - Filter Set Configuration

Filter Set #      Comments      Filter Set #      Comments
-----
1      NetBIOS_WAN      7      _____
2      NetBIOS_LAN      8      _____
3      TEL_FTP_WEB_WAN  9      _____
4      _____      10     _____
5      _____      11     _____
6      _____      12     _____

Enter Filter Set Number to Configure= 0

Edit Comments=

Press ENTER to CONFIRM or ESC to CANCEL:
    
```

Figure 7-3 Menu 21 — Filter Set Configuration

Step 2. Select the filter set you wish to configure (no. 1-12) and press [ENTER].

Step 3. Enter a descriptive name or comment in the **Edit Comments** field and press [ENTER].

Step 4. Press [ENTER] at the message: [Press ENTER to confirm] to open **Menu 21.1.1 — Filter Rules Summary**.

```

Menu 21.1 - Filter Rules Summary

# A Type          Filter Rules          M m n
-----
1 Y IP Pr=6, SA=0.0.0.0, DA=0.0.0.0, DP=137      N D N
2 Y IP Pr=6, SA=0.0.0.0, DA=0.0.0.0, DP=138      N D N
3 Y IP Pr=6, SA=0.0.0.0, DA=0.0.0.0, DP=139      N D N
4 Y IP Pr=17, SA=0.0.0.0, DA=0.0.0.0,DP=137      N D N
5 Y IP Pr=17, SA=0.0.0.0, DA=0.0.0.0,DP=138      N D N
6 Y IP Pr=17, SA=0.0.0.0, DA=0.0.0.0,DP=139      N D F

Enter Filter Rule Number (1-6) to Configure:

```

Figure 7-4 NetBIOS_WAN Filter Rules Summary

```

Menu 21.2 - Filter Rules Summary

# A Type          Filter Rules          M m n
-----
1 Y IP Pr=17, SA=0.0.0.0, SP=137, DA=0.0.0.0, DP=53  N D F
2 N
3 N
4 N
5 N
6 N

Enter Filter Rule Number (1-6) to Configure:

```

Figure 7-5 NetBIOS_LAN Filter Rules Summary

```

Menu 21.3 - Filter Rules Summary

# A Type          Filter Rules          M m n
-----
1 Y IP Pr=6, SA=0.0.0.0, DA=0.0.0.0, DP=23        N D N
2 Y IP Pr=6, SA=0.0.0.0, DA=0.0.0.0, DP=21        N D N
3 Y IP Pr=6, SA=0.0.0.0, DA=0.0.0.0, DP=80        N D F
4 N
5 N
6 N

Enter Filter Rule Number (1-6) to Configure:

```

Figure 7-6 TEL_FTP_WEB_WAN Filter Rules Summary

```

Menu 21.5 - Filter Rules Summary
# A Type          Filter Rules          M m n
-----
1 Y IP Pr=17, SA=0.0.0.0, DA=0.0.0.0, DP=161          N D F
2 N
3 N
4 N
5 N
6 N

Enter Filter Rule Number (1-6) to Configure:
    
```

Figure 7-7 SNMP_WAN Filter Rules Summary

7.2.1 Filter Rules Summary Menu

This screen shows the summary of the existing rules in the filter set. The following tables contain a brief description of the abbreviations used in the previous menus.

Table 7-1 Abbreviations Used in the Filter Rules Summary Menu

FIELD	DESCRIPTION
#	The filter rule number: 1 to 6.
A	Active: "Y" means the rule is active. "N" means the rule is inactive.
Type	The type of filter rule: "GEN" for Generic, "IP" for TCP/IP.
Filter Rules	These parameters are displayed here.
M	More. "Y" means there are more rules to check which form a rule chain with the present rule. An action cannot be taken until the rule chain is complete. "N" means there are no more rules to check. You can specify an action to be taken i.e., forward the packet, drop the packet or check the next rule. For the latter, the next rule is independent of the rule just checked.
m	Action Matched. "F" means to forward the packet immediately and skip checking the remaining rules. "D" means to drop the packet. "N" means to check the next rule.
n	Action Not Matched. "F" means to forward the packet immediately and skip checking the remaining rules. "D" means to drop the packet. "N" means to check the next rule.

The protocol dependent filter rules abbreviation are listed as follows:

Table 7-2 Rule Abbreviations Used

ABBREVIATION	DESCRIPTION
IP	Pr Protocol
	SA Source Address
	SP Source Port number
	DA Destination Address
	DP Destination Port number
GEN	Off Offset
	Len Length

Refer to the next section for information on configuring the filter rules.

7.2.2 Configuring a Filter Rule

To configure a filter rule, type its number in **Menu 21.1 - Filter Rules Summary** and press [ENTER] to open menu 21.1.1 for the rule.

To speed up filtering, all rules in a filter set must be of the same class, i.e., protocol filters or generic filters. The class of a filter set is determined by the first rule that you create. When applying the filter sets to a port, separate menu fields are provided for protocol and device filter sets. If you include a protocol filter set in a device filter field or vice versa, the Prestige will warn you and will not allow you to save.

7.2.3 TCP/IP Filter Rule

This section shows you how to configure a TCP/IP filter rule. TCP/IP rules allow you to base the rule on the fields in the IP and the upper layer protocol, e.g., UDP and TCP headers.

To configure TCP/IP rules, select press [ENTER] to open **Menu 21.1.1 - TCP/IP Filter Rule**, as shown next.

```

Menu 21.1.1.1 - TCP/IP Filter Rule

Filter #: 1,1
Filter Type= TCP/IP Filter Rule
Active= Yes
IP Protocol= 6   IP Source Route= No
Destination: IP Addr= 0.0.0.0
               IP Mask= 0.0.0.0
               Port #= 137
               Port # Comp= Equal
Source: IP Addr= 0.0.0.0
           IP Mask= 0.0.0.0
           Port #=
           Port # Comp= None
TCP Estab= No
More= No      Log= None
Action Matched= Drop
Action Not Matched= Check Next Rule

                Press ENTER to Confirm or ESC to Cancel:
Press Space Bar to Toggle.
    
```

Figure 7-8 Menu 21.1.1 — TCP/IP Filter Rule

The following table describes how to configure your TCP/IP filter rule.

Table 7-3 TCP/IP Filter Rule Menu Fields

FIELD	DESCRIPTION	EXAMPLE
Active	Yes activates and No deactivates the filter rule.	Yes
IP Protocol	Protocol refers to the upper layer protocol, e.g., TCP is 6, UDP is 17 and ICMP is 1. This value must be between 0 and 255	0-255
IP Source Route	If Yes , the rule applies to packet with IP source route option; else the packet must not have source route option. The majority of IP packets do not have source route.	No
Destination IP Address	Enter the destination IP Address of the packet you wish to filter. This field reads don't-care if it is 0.0.0.0.	IP address
IP Mask	Enter the IP mask that will be used to mask the bits of the IP address given in the Destination IP Address field.	IP mask
Port #	Enter the destination port of the packets that you wish to filter. The range of this field is 0 to 65535. This field reads don't-care if it is 0.	0-65535

FIELD	DESCRIPTION	EXAMPLE
Port # Comp	Select the comparison to apply to the destination port in the packet against the value given in Destination Port # field. Options are: None , Less , Greater , Equal or Not Equal .	Equal
Source IP Address	Enter the source IP Address of the packet you wish to filter. This field reads don't-care if it is 0.0.0.0.	IP Address
IP Mask	Enter the IP mask that will be used to mask the bits of the IP address given in the Source IP Address field.	IP Mask
Port #	Enter the source port of the packets that you wish to filter. The range of this field is 0 to 65535. This field reads don't-care if it is 0.	0-65535
Port # Comp	Select the comparison to apply to the source port in the packet against the value given in Source Port # field. Options are: None , Less , Greater , Equal or Not Equal .	None
TCP Estab	This field is applicable only when IP Protocol field is 6, TCP. If Yes , the rule matches only established TCP connections; else the rule matches all TCP packets.	Yes No
More	If Yes , a matching packet is passed to the next filter rule before an action is taken; else the packet is disposed of according to the action fields. If the More field is Yes , then Action Matched and Action Not Matched will be No .	No
Log	Select the logging option from the following: None – No packets will be logged. Action Matched - Only packets that match the rule parameters will be logged. Action Not Matched - Only packets that do not match the rule parameters will be logged. Both – All packets will be logged.	None
Action Matched	Select the action for a matching packet. Options are Check Next Rule , Forward or Drop .	Drop
Action Not Matched	Select the action for a packet not matching the rule. Options are Check Next Rule , Forward or Drop .	Check Next Rule

FIELD	DESCRIPTION	EXAMPLE
	Once you have completed filling in Menu 21.1.1.1 - TCP/IP Filter Rule , press [ENTER] at the message "Press Enter to Confirm to save your configuration, or press [ESC] to cancel". This data will now be displayed on Menu 21.1.1 - Filter Rules Summary .	

The following figure illustrates the logic flow of an IP filter.

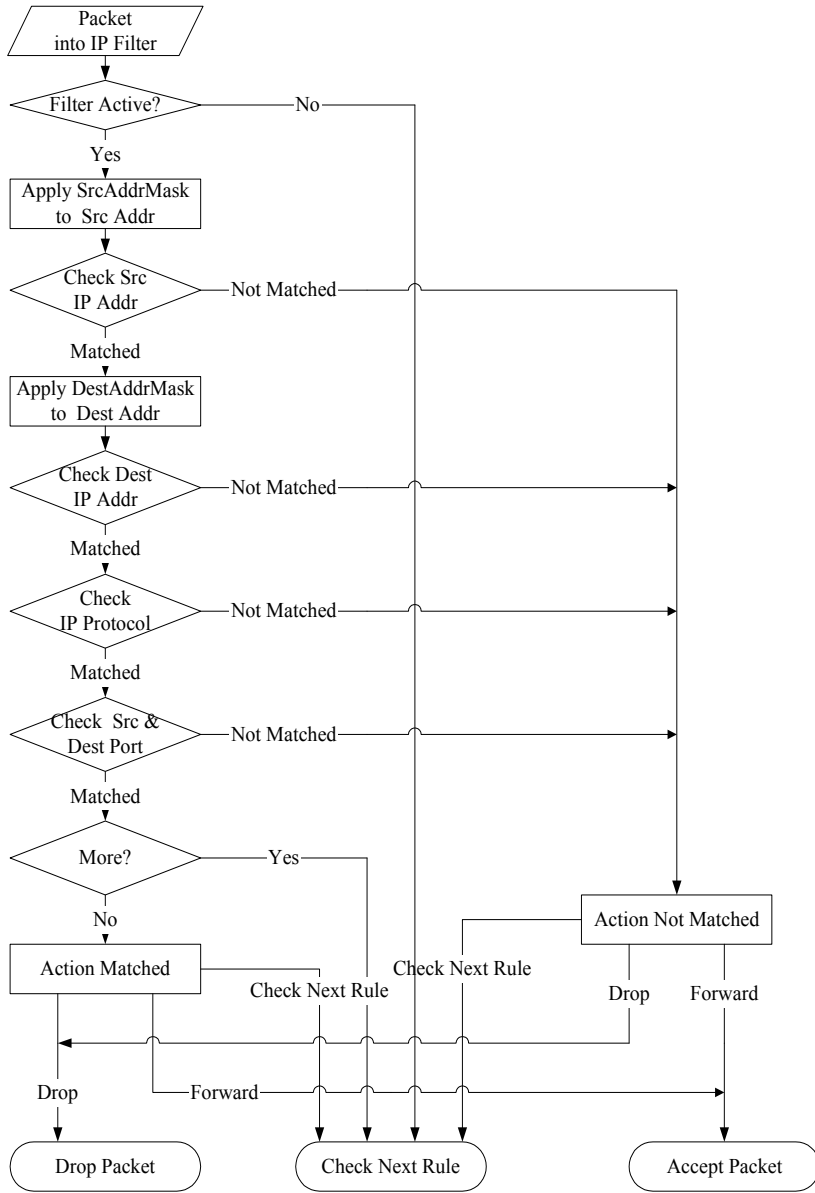


Figure 7-9 Executing an IP Filter

7.2.4 Generic Filter Rule

This section shows you how to configure a generic filter rule. The purpose of generic rules is to allow you to filter non-IP packets. For IP, it is generally easier to use the IP rules directly.

For generic rules, the Prestige treats a packet as a byte stream as opposed to an IP or IPX packet. You specify the portion of the packet to check with the **Offset** (from 0) and the **Length** fields, both in bytes. The Prestige applies the **Mask** (bit-wise ANDing) to the data portion before comparing the result against the **Value** to determine a match. The **Mask** and **Value** are specified in hexadecimal numbers. Note that it takes two hexadecimal digits to represent a byte, so if the length is 4, the value in either field will take 8 digits, e.g., FFFFFFFF.

To configure a generic rule, select **Generic Filter Rule** in the **Filter Type** field in the menu 21.4.1 and press [ENTER] to open **Menu 21.4.1 - Generic Filter Rule**, as shown below.

```

Menu 21.4.1 - Generic Filter Rule

Filter #: 4,1
Filter Type= Generic Filter Rule
Active= No
Offset= 0
Length= 0
Mask= N/A
Value= N/A
More= No      Log= None
Action Matched= Check Next Rule
Action Not Matched= Check Next Rule

Press ENTER to Confirm or ESC to Cancel:
Press Space Bar to Toggle.
```

Figure 7-10 Menu 21.4.1 — Generic Filter Rule

The following table describes the fields in the Generic Filter Rule Menu.

Table 7-4 Generic Filter Rule Menu Fields

Field	Description	EXAMPLE
Filter #	This is the filter set, filter rule co-ordinates, i.e., 2,3 refers to the second filter set and the third rule of that set.	

Field	Description	EXAMPLE
Filter Type	Use the [SPACE BAR] to select a rule. Parameters displayed below each type will be different. Options are: Generic Filter Rule or TCP/IP Filter Rule .	Generic Filter Rule
Active	Select Yes to turn on the filter rule.	No
Offset	Enter the starting byte of the data portion in the packet that you wish to compare. The range for this field is from 0 to 255.	0 (default)
Length	Enter the byte count of the data portion in the packet that you wish to compare. The range for this field is 0 to 8.	0 (default)
Mask	Enter the mask (in Hexadecimal) to apply to the data portion before comparison.	
Value	Enter the value (in Hexadecimal) to compare with the data portion.	
More	If Yes , a matching packet is passed to the next filter rule before an action is taken; else the packet is disposed of according to the action fields. If the More field is Yes , then Action Matched and Action Not Matched will be No .	No
Log	Select the logging option from the following: None – No packets will be logged. Action Matched - Only packets that match the rule parameters will be logged. Action Not Matched - Only packets that do not match the rule parameters will be logged. Both – All packets will be logged.	None
Action Matched	Select the action for a matching packet. Options are: Check Next Rule , Forward or Drop .	Check Next Rule
Action Not Matched	Select the action for a packet not matching the rule. Options are: Check Next Rule , Forward or Drop .	Check Next Rule
Once you have completed filling in Menu 21.4.1.1 — Generic Filter Rule , press [ENTER] at the message “[Press Enter to Confirm] to save your configuration, or press [ESC] to cancel”. This data will now be displayed on Menu 21.1.1 — Filter Rules Summary .		

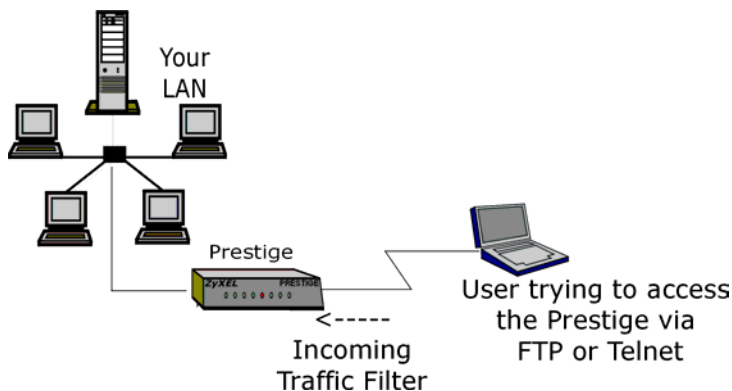


Figure 7-11 Filter Example

7.3 Example Filter

Let's look at an example to block outside users from telnetting into the Prestige. See the included support CD for more example filters.

- Step 1.** Enter 21 from the main menu to open **Menu 21 - Filter Set Configuration**.
- Step 2.** Enter the index of the filter set you wish to configure (e.g., 7) and press [ENTER].
- Step 3.** Enter a descriptive name or comment in the **Edit Comments** field (e.g., TELNET_WAN) and press [ENTER].
- Step 4.** Press [ENTER] at the message “[Press ENTER to confirm]” to open **Menu 21.7 - Filter Rules Summary**.
- Step 5.** Enter 1 to configure the first filter rule. Make the entries in this menu as shown in the following figure.

Menu 21.7.1 - TCP/IP Filter Rule

```

Filter #: 7,1
Filter Type= TCP/IP Filter Rule
Active= Yes
IP Protocol= 6   IP Source Route= No
Destination: IP Addr= 0.0.0.0
                IP Mask= 0.0.0.0
                Port #= 21
                Port # Comp= Equal
Source: IP Addr= 0.0.0.0
                IP Mask= 0.0.0.0
                Port #= 0
                Port # Comp= None
TCP Estab= No
More= No       Log= None
Action Matched= Drop
Action Not Matched= Check Next Rule

Press ENTER to Confirm or ESC to Cancel:
Press Space Bar to Toggle.
    
```

Press [SPACE BAR] to choose this filter rule type. The first filter rule type determines all subsequent filter types within a set.

Select **Yes** to make the rule active.

6 is the TCP protocol.

The port number for FTP is **21**. See *RFC 1060* for port numbers of well-known services.

Select **Equal** here as we are looking for packets going to port 21 only.

Select **Check Next Rule** here so that the next rule in this set will be checked.

Select **Drop** so that the packet will be dropped if its destination is the telnet port.

There are no more rules to check.

Figure 7-12 Example Filter — Menu 21.3.1

Step 6. Press [ENTER] to confirm and display the next screen. Note that there is only one filter rule in this set.

Menu 21.7 - Filter Rules Summary						
#	A	Type	Filter Rules	M	m	n
1	Y	IP	Pr=6, SA=0.0.0.0, DA=0.0.0.0, DP=21	N	D	N
2	N					
4	N					
5	N					
6	N					

Enter Filter Rule Number (1-6) to Configure: 2

This shows you that you have configured and activated (**A = Y**) a TCP/IP filter rule (**Type = IP, Pr = 6**) for destination FTP ports (**DP = 21**).

M = N means an action can be taken immediately. The action is to drop the packet (m = D) if the action is matched and to forward the packet immediately (n = N) if the action is not matched and there are more rules to be checked (there is one more in this example).

Figure 7-13 Example Filter Rules Summary — Menu 21.3

Step 7. Enter 2 in the above menu to configure the second rule. Configure this filter rule with port number as 23 (Telnet) as shown in the next screen (after you press [ENTER] to confirm).

```

Menu 21.7 - Filter Rules Summary
# A Type          Filter Rules          M m n
-----
1 Y IP Pr=6, SA=0.0.0.0, DA=0.0.0.0, DP=21      N D N
2 Y IP Pr=6, SA=0.0.0.0, DA=0.0.0.0, DP=23      N D F
3 N
4 N
5 N
6 N

Enter Filter Rule Number (1-6) to Configure:

```

Figure 7-14 Example Filter Rules Summary

After you've created the filter set, you must apply it.

- Step 1.** Enter 11 from the main menu to display menu 11.
- Step 2.** Go to the **Edit Filter Sets** field, press the [SPACE BAR] to select **Yes** and press [ENTER].
- Step 3.** This brings you to menu 11.5. Apply the TELNET_FTP_WAN filter set (filter set 7) as shown in *Figure 7-17*.

7.4 Filter Types and NAT

There are two classes of filter rules, **Generic Filter** (Device) rules and Protocol Filter (**TCP/IP**) rules. Generic Filter rules act on the raw data from/to LAN and WAN and Protocol Filter rules act on the IP packets.

Generic and TCP/IP filter rules are discussed in more detail in the next section. When NAT (Network Address Translation) is enabled, the inside IP address and port number are replaced on a connection-by-connection basis, which makes it impossible to know the exact address and port on the wire. Therefore, the Prestige applies the protocol filters to the “native” IP address and port number before NAT for outgoing packets and after NAT for incoming packets. On the other hand, the generic, or device filters are applied to the raw packets that appear on the wire. They are applied at the point when the Prestige is receiving and sending the packets; i.e. the interface. The interface can be an Ethernet port or any other hardware port. The following figure illustrates this.

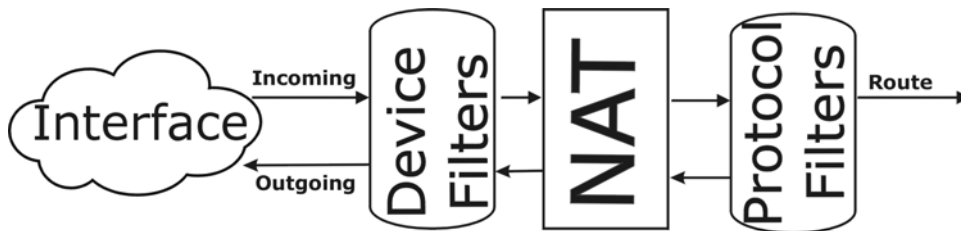


Figure 7-15 Protocol and Device Filter Sets

7.5 Applying a Filter and Factory Defaults

This section shows you where to apply the filter(s) after you design it (them). Sets of factory default filter rules have been configured in menu 21 to prevent NetBIOS traffic from triggering calls and block incoming telnet, FTP and HTTP connections.

7.5.1 LAN traffic

You seldom need to filter LAN traffic; however, the filter sets may be useful to block certain packets, reduce traffic and prevent security breaches. Go to menu 3.1 (shown below) and enter the number(s) of the filter set(s) that you want to apply as appropriate. You can choose up to four filter sets (from twelve) by entering their numbers separated by commas, e.g., 3, 4, 6, 11. Input filter sets filter incoming traffic to the Prestige and Output filter sets filter outgoing traffic from the Prestige. A factory default set, NetBIOS_LAN, is inserted in **protocol filters** field under **Input Filter Sets** in menu 3.1 to block NetBIOS traffic to the Prestige from the LAN.

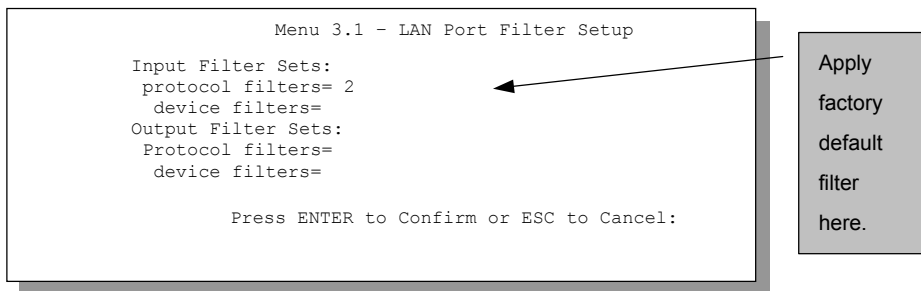


Figure 7-16 Filtering LAN Traffic

7.5.2 Remote Node Filters

Go to menu 11.5 (shown next – note that call filter sets are only present for PPPoE encapsulation) and enter the number(s) of the filter set(s) as appropriate. You can cascade up to four filter sets by entering their numbers separated by commas. The factory default filter set, NetBIOS_WAN, can be applied in menu 11.5 to block local NetBIOS traffic from triggering calls to the ISP (when you are using PPPoE or PPTP encapsulation only). Enter 1 in **protocol filters** under **Output Filter Sets** when using Ethernet encapsulation, and in the **protocol filters** field under **Call Filter Sets** when using PPPoE or PPTP encapsulation. Apply them as shown in the following figure.

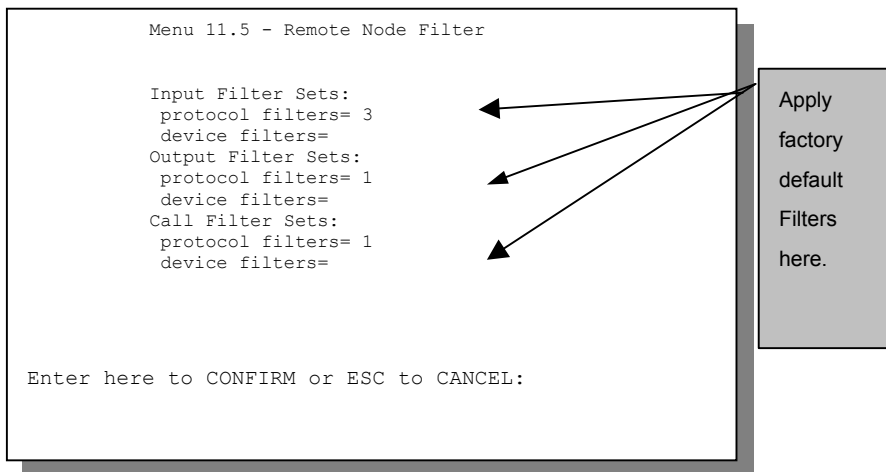


Figure 7-17 Filtering Remote Node Traffic

Chapter 8

UPnP

This chapter introduces the UPnP feature.

8.1 Introducing Universal Plug and Play

Universal Plug and Play (UPnP) is a distributed, open networking standard that uses TCP/IP for simple peer-to-peer network connectivity between devices. A UPnP device can dynamically join a network, obtain an IP address, convey its capabilities and learn about other devices on the network. In turn, a device can leave a network smoothly and automatically when it is no longer in use.

8.1.1 How do I know if I'm using UPnP?

UPnP hardware is identified as an icon in the Network Connections folder (Windows XP). Each UPnP compatible device installed on your network will appear as a separate icon. Selecting the icon of a UPnP device will allow you to access the information and properties of that device.

8.1.2 NAT Transversal

UPnP NAT Traversal automates the process of allowing an application to operate through NAT. UPnP network devices can automatically configure network addressing, announce their presence in the network to other UPnP devices and enable exchange of simple product and service descriptions. NAT traversal allows the following:

- Dynamic port mapping
- Learning public IP addresses
- Assigning lease times to mappings

Windows Messenger is an example of an application that supports NAT Traversal and UPnP.

See the Network Address Translation (NAT) chapter in your User's Guide for further information about NAT.

8.1.3 Cautions with UPnP

The automated nature of NAT Transversal applications in establishing their own services and opening firewall ports may present network security issues. Network information and configuration may also be obtained and modified by users in some network environments.

All UPnP-enabled devices may communicate freely with each other without additional configuration. Disable UPnP if this is not your intention.

8.2 UPnP and ZyXEL

ZyXEL has achieved UPnP certification from the Universal Plug and Play Forum Creates UPnP™ Implementers Corp. (UIC). ZyXEL's UPnP implementation supports IGD 1.0 (Internet Gateway Device). At the time of writing ZyXEL's UPnP implementation supports Windows Messenger 4.6 and 4.7 while Windows Messenger 5.0 and Xbox are still being tested.

UPnP broadcasts are only allowed on the LAN.

Please see later in this Users Guide for examples of installing UPnP in Windows XP and Windows Me as well as an example of using UPnP in Windows.

8.2.1 Configuring UPnP

From the **MAIN MENU** click **ADVANCED** and then **UPnP** to display the screen shown next.

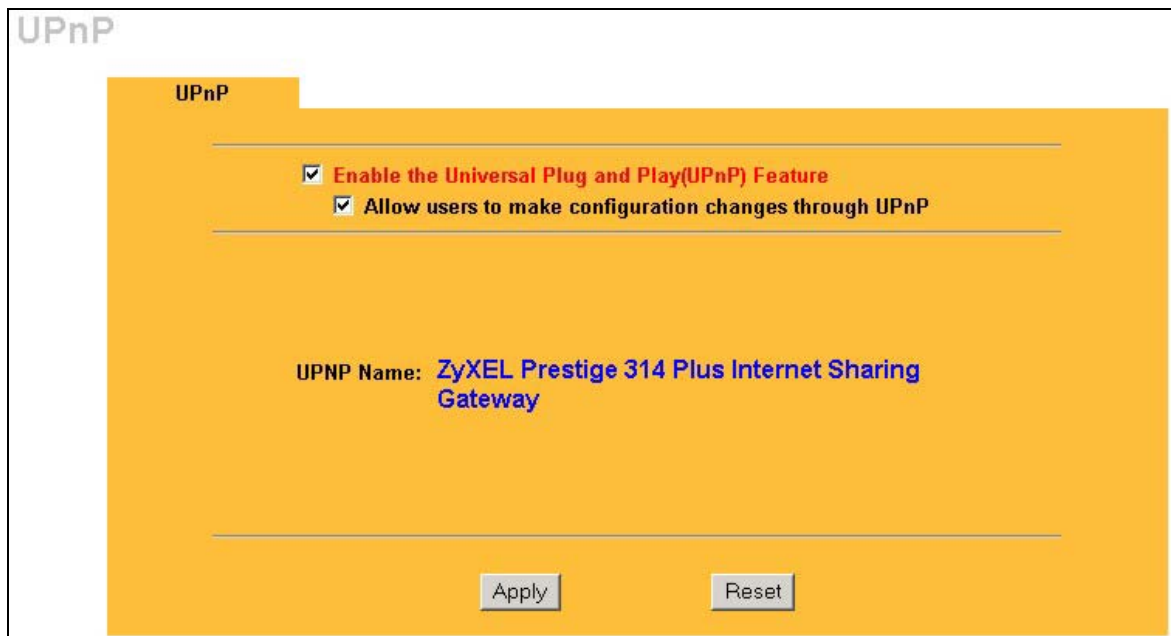


Figure 8-1 Configuring UPnP

Table 8-1 Configuring UPnP

FIELD	DESCRIPTION
Enable the Universal Plug and Play (UPnP) feature	Select this checkbox to activate UPnP. Be aware that anyone could use a UPnP application to open the web configurator's login screen without entering the Prestige's IP address (although you must still enter the password to access the web configurator).
Allow users to make configuration changes through UPnP	Select this check box to allow UPnP-enabled applications to automatically configure the Prestige so that they can communicate through the Prestige, for example by using NAT Transversal. UPnP applications automatically reserve a NAT forwarding port in order to communicate with another UPnP enabled device; this eliminates the need to manually configure port forwarding for the UPnP enabled application.
UPNP Name	This identifies the ZyXEL device in UPnP applications.
Apply	Click Apply to save the setting to the Prestige.
Reset	Click Reset to begin configuring this screen afresh.

8.3 Installing UPnP in Windows Example


This section shows how to install UPnP in Windows Me and Windows XP.

Installing UPnP in Windows Me

Follow the steps below to install the UPnP in Windows Me.

Step 5. Click **Start** and **Control Panel**. Double-click **Add/Remove Programs**.


Step 6. Click on the **Windows Setup** tab and select **Communication** in the **Components** selection box. Click **Details**.

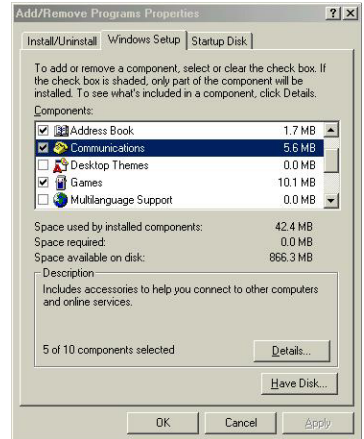

Step 7. In the **Communications** window, select the **Universal Plug and Play** check box in the **Components** selection box.

Step 8. Click **OK** to go back to the **Add/Remove Programs Properties** window and click **Next**.

Step 9. Restart the computer when prompted.

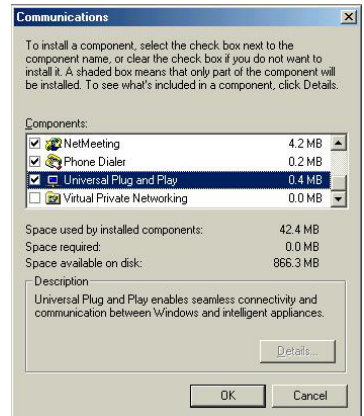


Installing UPnP in Windows XP

Follow the steps below to install the UPnP in Windows ME

Step 10. Click **start** and **Control Panel**.


Step 11. Double-click **Network Connections**.

Step 12. In the **Network Connections** window, click **Advanced** in the main menu and select **Optional Networking Components**

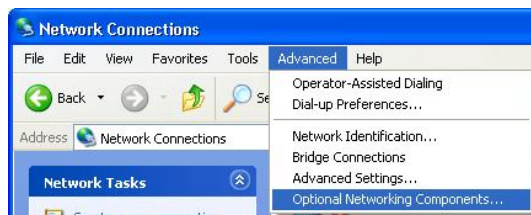


....
The **Windows Optional Networking Components Wizard** window displays.

Step 13. Select **Networking Service** in the **Components** selection box and click **Details**.

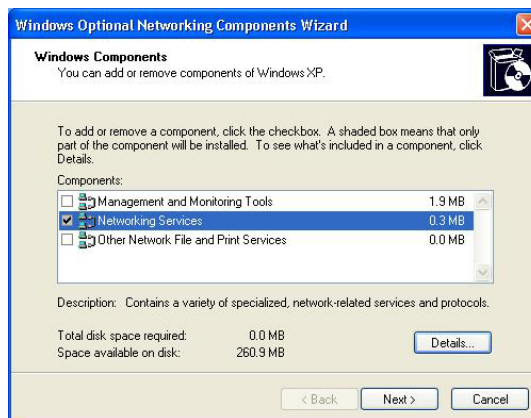

Step 14. In the **Networking Services** window, select the **Universal Plug and Play** check box.

Step 15. Click **OK** to go back to the **Windows Optional Networking Component Wizard** window and click **Next**.

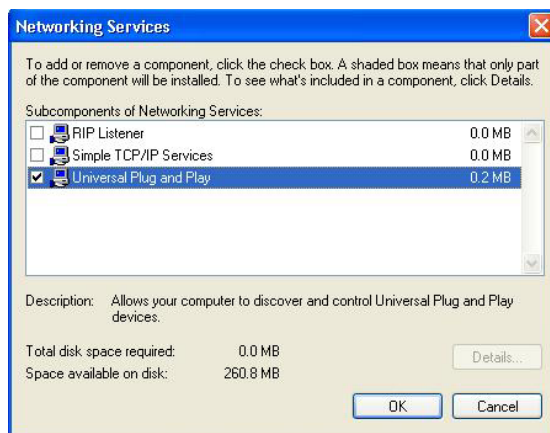

8.4 Using UPnP in Windows XP Example

This appendix shows you how to use the UPnP feature in Windows XP. You must already have UPnP installed in Windows XP and UPnP activated on the ZyXEL device.

Make sure the computer is connected to a LAN port of the ZyXEL device. Turn on your computer and the ZyXEL device.

Auto-discover Your UPnP-enabled Network Device

Step 16. Click **start** and **Control Panel**. Double-click **Network Connections**. An icon displays under **Internet Gateway**.



Step 17. Right-click the icon and select **Properties**.



Step 18. In the **Internet Connection Properties** window, click **Settings** to see the port mappings there were automatically created.




Step 19. You may edit or delete the port mappings or click **Add** to manually add port mappings.

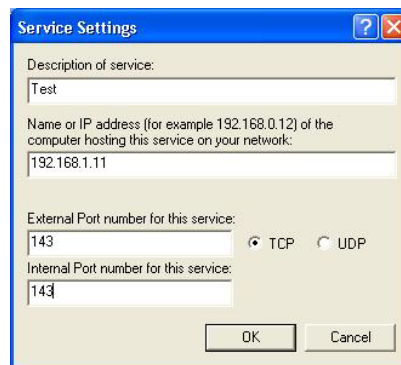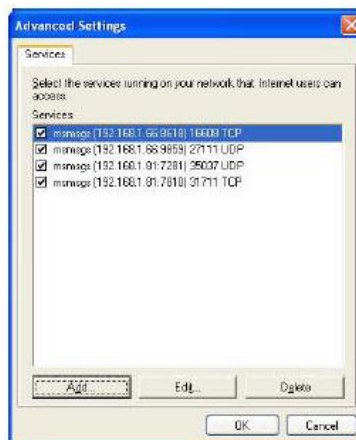

When the UPnP-enabled device is disconnected from your computer, all port mappings will be deleted automatically.

Step 20. Select **Show icon in notification area when connected** option and click **OK**. An icon displays in the system tray



Step 21. Double-click on the icon to display your current Internet connection status.



Web Configurator Easy Access


With UPnP, you can access the web-based configurator on the ZyXEL device without finding out the IP address of the ZyXEL device first. This comes helpful if you do not know the IP address of the ZyXEL device.

Follow the steps below to access the web configurator.

Step 22. Click **start** and then **Control Panel**.


Step 23. Double-click **Network Connections**.

Step 24. Select **My Network Places** under **Other Places**.

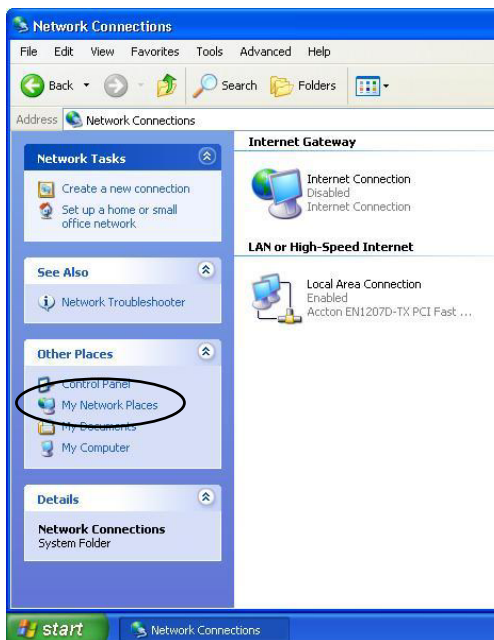


Step 25. An icon with the description for each UPnP-enabled device displays under **Local Network**.

Step 26. Right-click on the icon for your ZyXEL device and select **Invoke**. The web configurator login screen displays.

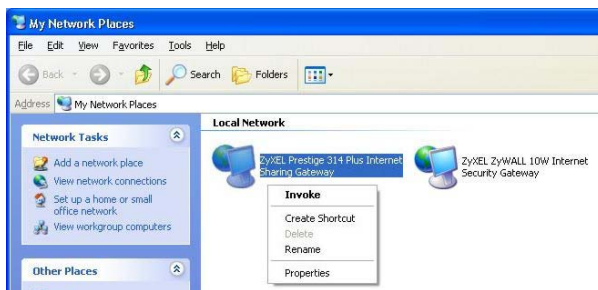

Step 27. Right-click on the icon for your ZyXEL device and select **Properties**. A properties window displays with basic information about the ZyXEL device.

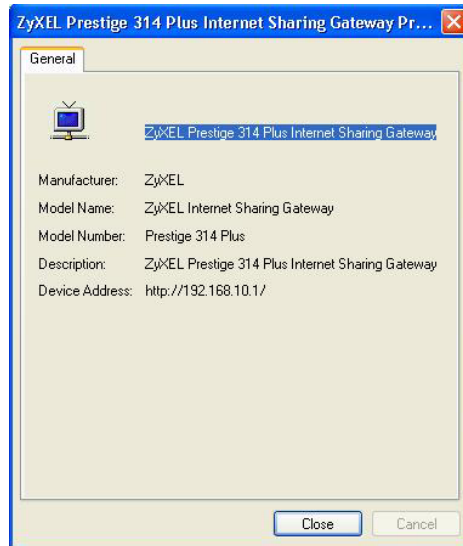

Chapter 9

SNMP Configuration

This chapter explains SNMP configuration menu 22.

SNMP is only available if TCP/IP is configured.

9.1 About SNMP

Simple Network Management Protocol is a protocol used for exchanging management information between network devices. SNMP is a member of TCP/IP protocol suite. Your Prestige supports SNMP agent functionality, which allows a manager station to manage and monitor the Prestige through the network. The Prestige supports SNMP version one (SNMPv1). The next figure illustrates an SNMP management operation. SNMP is only available if TCP/IP is configured.

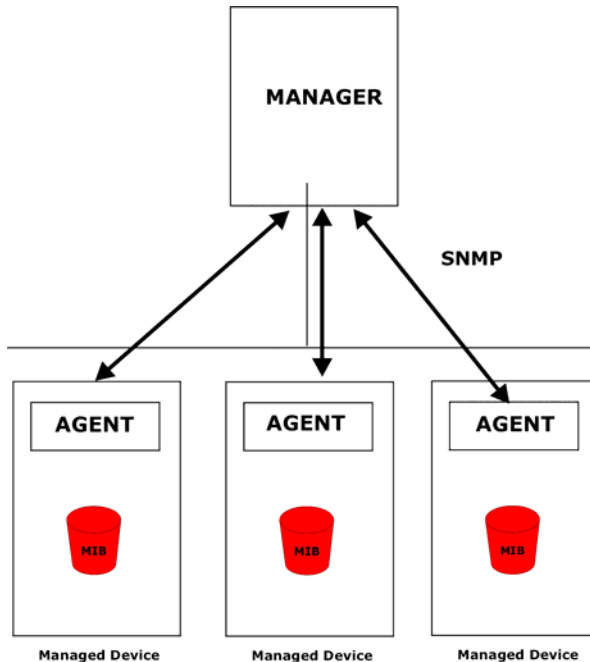


Figure 9-1 SNMP Management Model

An SNMP managed network consists of two main components: agents and a manager.

An agent is a management software module that resides in a managed device (the Prestige). An agent translates the local management information from the managed device into a form compatible with SNMP. The manager is the console through which network administrators perform network management functions. It executes applications that control and monitor managed devices.

The managed devices contain object variables/managed objects that define each piece of information to be collected about a device. Examples of variables include such as number of packets received, node port status etc. A Management Information Base (MIB) is a collection of managed objects. SNMP allows a manager and agents to communicate for the purpose of accessing these objects.

SNMP itself is a simple request/response protocol based on the manager/agent model. The manager issues a request and the agent returns responses using the following protocol operations:

- Get - Allows the manager to retrieve an object variable from the agent.
- GetNext - Allows the manager to retrieve the next object variable from a table or list within an agent. In SNMPv1, when a manager wants to retrieve all elements of a table from an agent, it initiates a Get operation, followed by a series of GetNext operations.
- Set - Allows the manager to set values for object variables within an agent.
- Trap - Used by the agent to inform the manager of some events.

9.2 Supported MIBs

The P314 PLUS supports MIB II that is defined in RFC-1213 and RFC-1215. The focus of the MIBs is to let administrators collect statistic data and monitor status and performance.

9.3 SNMP Configuration

To configure SNMP, enter 22 from the main menu to display **Menu 22 - SNMP Configuration** as shown next. The “community” for **Get**, **Set** and **Trap** fields is SNMP terminology for password.

```
Menu 22 - SNMP Configuration

SNMP:
Get Community= public
Set Community= public
Trusted Host= 0.0.0.0
Trap:
Community= public
Destination= 0.0.0.0

Press ENTER to Confirm or ESC to Cancel:
```

Figure 9-2 Menu 22 — SNMP Configuration

The following table describes the SNMP configuration parameters.

Table 9-1 SNMP Configuration Menu Fields

FIELD	DESCRIPTION	EXAMPLE
Get Community	Type the Get Community , which is the password for the incoming Get- and GetNext requests from the management station.	Public
Set Community	Type the Set community, which is the password for incoming Set requests from the management station.	Public
Trusted Host	If you enter a trusted host, your Prestige will only respond to SNMP messages from this address. A blank (default) field means your Prestige will respond to all SNMP messages it receives, regardless of source.	Blank
Trap: Community	Type the trap community, which is the password sent with each trap to the SNMP manager.	Public
Trap: Destination	Type the IP address of the station to send your SNMP traps to.	Blank
When you have completed this menu, press [ENTER] at the prompt "Press [ENTER] to confirm or [ESC] to cancel" to save your configuration or press [ESC] to cancel and go back to the previous screen.		

9.4 SNMP Traps

The Prestige will send traps to the SNMP manager when any one of the following events occurs:

Table 9-2 SNMP Traps

TRAP #	TRAP NAME	DESCRIPTION
0	coldStart (defined in <i>RFC-1215</i>)	A trap is sent after booting (power on).
1	warmStart (defined in <i>RFC-1215</i>)	A trap is sent after booting (software reboot).
2	LinkUp	A trap is sent when the link is established.
3	LinkDown	A trap is sent when the link is down.
4	authenticationFailure (defined in <i>RFC-1215</i>)	A trap is sent to the manager when receiving any SNMP get or set requirements with wrong community (password).
6	whyReboot (defined in ZYXEL-MIB)	A trap is sent with the reason of restart before rebooting when the system is going to restart (warmstart).
6a	For intentional reboot:	A trap is sent with the message "System reboot by user!" if reboot is done intentionally, (e.g. download new files, CLI command "sys reboot", etc.).

TRAP #	TRAP NAME	DESCRIPTION
6b	For fatal error:	A trap is sent with the message of the fatal code if the system reboots because of fatal errors.

Chapter 10

Traffic Redirect

This section details the configuration process for Traffic Redirect.

Metric

The metric sets the priority for the Prestige's routes to the Internet. If any two of the default routes have the same metric, the Prestige uses the following pre-defined priorities:

1. Normal route: designated by the ISP or a static route.
2. Traffic-redirect route.
3. Dial-backup route.

IP Policy Routing overrides the default routing behavior and takes priority over all of the routes mentioned above.

For example, if the normal route has a metric of "1" and the traffic-redirect route has a metric of "2" and dial-backup route has a metric of "3", then the normal route acts as the primary default route. If the normal route fails to connect to the Internet, the Prestige tries the traffic-redirect route next. In the same manner, the Prestige uses the dial-backup route if the traffic-redirect route also fails.

If you want the dial-backup route to take first priority over the traffic-redirect route or even the normal route, all you need to do is set the dial-backup route's metric to "1" and the others to "2" (or greater).

10.1 Traffic Redirect

Traffic redirect forwards WAN traffic to a backup gateway when the Prestige cannot connect to the Internet through its normal gateway.

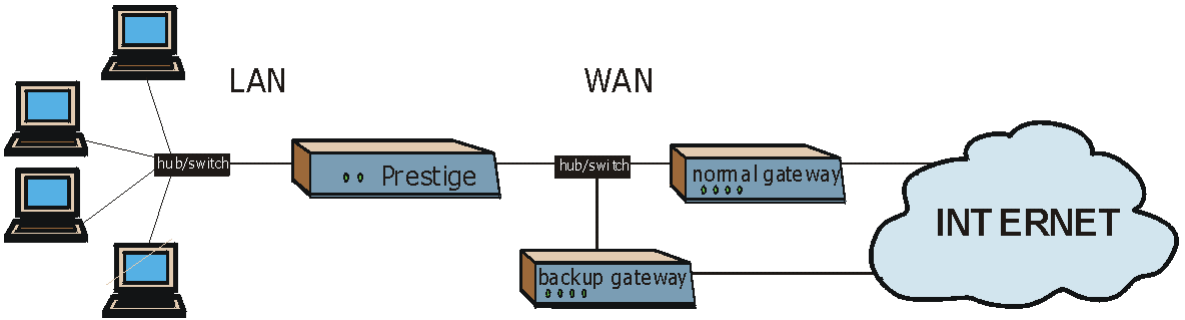


Figure 10-1 Traffic Redirect WAN Setup

The following network topology allows you to avoid triangle route security holes when the backup gateway is connected to the LAN. Use IP alias to configure the LAN into two or three logical networks with the Prestige itself as the gateway for each LAN network. Put the protected LAN in one subnet (Subnet 1 in the following figure) and the backup gateway in another subnet (Subnet 2). Configure a LAN to LAN/Prestige firewall rule that forwards packets from the protected LAN (Subnet 1) to the backup gateway (Subnet 2).

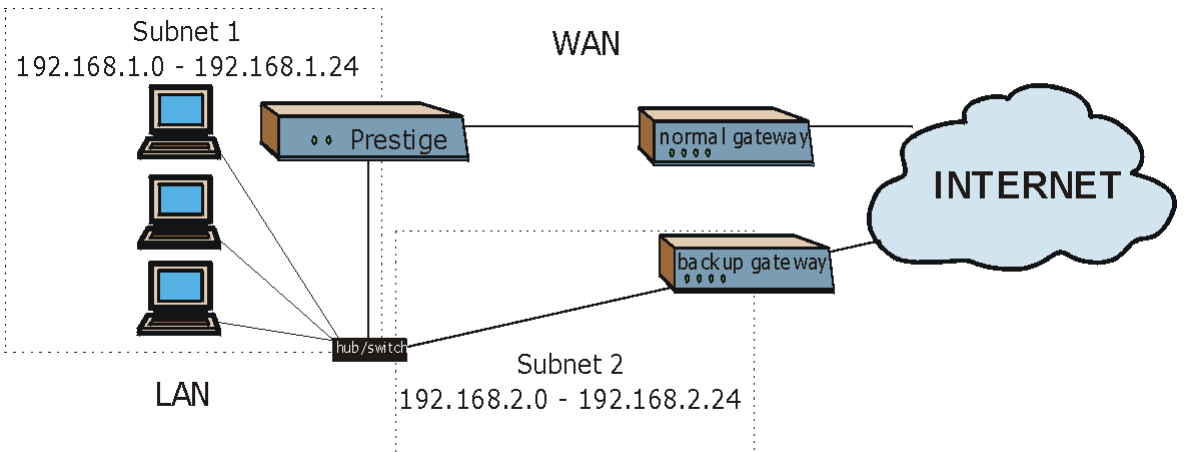


Figure 10-2 Traffic Redirect LAN Setup

To configure the parameters for traffic redirect, enter 11 from the main menu to display **Menu 11.1—Remote Node Profile** as shown next.

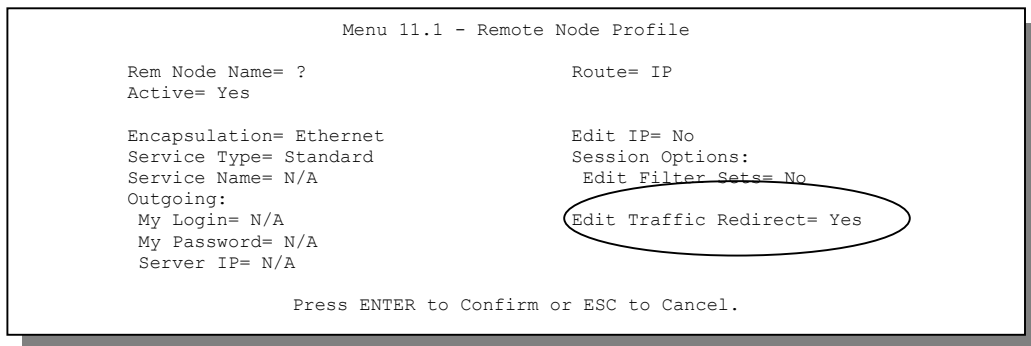


Figure 10-3 Menu 11.1 — Remote Node Profile

To configure traffic redirect properties, press [SPACE BAR] to select **Yes** in the **Edit Traffic Redirect** field and then press [ENTER].

Table 10-1 Menu 11.1 — Remote Node Profile (Traffic Redirect Field)

FIELD	DESCRIPTION	EXAMPLE
Edit Traffic Redirect	Press [SPACE BAR] to select Yes or No . Select No (default) if you do not want to configure this feature. Select Yes and press [ENTER] to configure Menu 11.6 — Traffic Redirect Setup .	Yes
Press [ENTER] at the message "Press ENTER to Confirm..." to save your configuration, or press [ESC] at any time to cancel.		

10.1.1 Traffic Redirect Setup

Configure parameters that determine when the Prestige will forward WAN traffic to the backup gateway using **Menu 11.6 — Traffic Redirect Setup**.

```

Menu 11.6 - Traffic Redirect Setup

Active= Yes
Configuration:
Backup Gateway IP Address= 0.0.0.0
Metric= 15
Check WAN IP Address= 0.0.0.0
Fail Tolerance= 2
Period (sec)= 5
Timeout (sec)= 3

Press ENTER to Confirm or ESC to Cancel:

Press Space Bar to Toggle.
    
```

Figure 10-4 Menu 11.6 — Traffic Redirect Setup

Table 10-2 Traffic Redirect Setup

FIELD	DESCRIPTION	EXAMPLE
Active	<p>Press [SPACE BAR] and select Yes (to enable) or No (to disable) traffic redirect setup. The default is No.</p> <p>When the Active field is Yes, you must configure every field in this screen unless you are using PPPoE or PPTP encapsulation (except Check WAN IP Address and Timeout).</p> <p>If you don't configure these fields and are using PPTP or PPPoE encapsulation, then the Prestige checks the PPPoE channel or PPTP tunnel to determine if the WAN connection is down.</p>	Yes
Configuration: Backup Gateway IP Address	<p>Enter the IP address of your backup gateway in dotted decimal notation.</p> <p>The Prestige automatically forwards traffic to this IP address if the Prestige's Internet connection terminates.</p>	0.0.0.0
Metric	<p>Enter a number from 1 to 15 to set this route's priority among the Prestige's routes (see <i>Metric</i> on page 10-1) The smaller the number, the higher priority the route has.</p>	15 (default)
Check WAN IP Address	<p>Enter the IP address of a reliable nearby computer (for example, your ISP's DNS server address) to test your Prestige's WAN accessibility.</p> <p>The Prestige uses the default gateway IP address if you do not enter an IP address here.</p> <p>If you are using PPTP or PPPoE Encapsulation, enter "0.0.0.0" to configure the Prestige to check the PVC (Permanent Virtual Circuit) or</p>	0.0.0.0

FIELD	DESCRIPTION	EXAMPLE
Check WAN IP Address	<p>Enter the IP address of a reliable nearby computer (for example, your ISP's DNS server address) to test your Prestige's WAN accessibility.</p> <p>The Prestige uses the default gateway IP address if you do not enter an IP address here.</p> <p>If you are using PPTP or PPPoE Encapsulation, enter "0.0.0.0" to configure the Prestige to check the PVC (Permanent Virtual Circuit) or PPTP tunnel.</p>	0.0.0.0
Fail Tolerance	Enter the number of times your Prestige may attempt and fail to connect to the Internet before traffic is forwarded to the backup gateway. Two to five is usually a good number.	2
Period (sec)	Enter the time interval (in seconds) between WAN connection checks. Five to 60 is usually a good number.	5
Timeout (sec)	<p>Enter the number of seconds the Prestige waits for a ping response from the IP Address in the Check WAN IP Address field before it times out. The number in this field should be less than the number in the Period field. Three to 50 is usually a good number.</p> <p>The WAN connection is considered "down" after the Prestige times out the number of times specified in the Fail Tolerance field.</p>	3
When you have completed this menu, press [ENTER] at the prompt "Press [ENTER] to confirm or [ESC] to cancel" to save your configuration or press [ESC] to cancel and go back to the previous screen.		

Chapter 11

System Information & Diagnosis

This chapter covers SMT menus 24.1 to 24.4.

This chapter covers the diagnostic tools that help you to maintain your Prestige. These tools include updates on system status, port status, log and trace capabilities and upgrades for the system software.

Select menu 24 in the main menu to open **Menu 24 - System Maintenance**, as shown below.

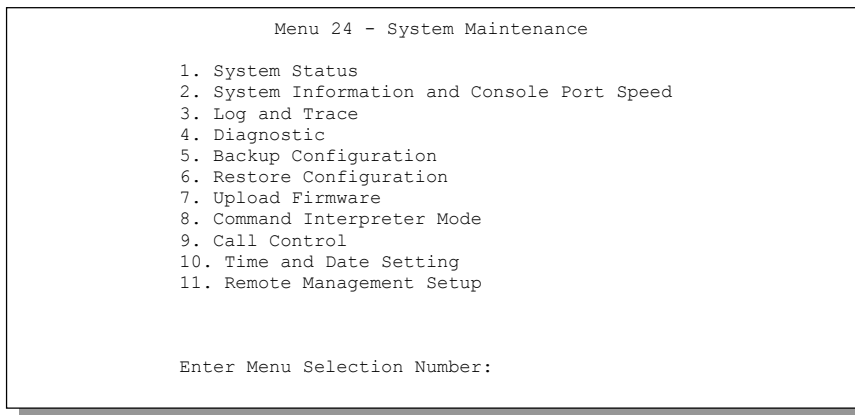


Figure 11-1 Menu 24 — System Maintenance

11.1 System Status

The first selection, System Status, gives you information on the version of your system firmware and the status and statistics of the ports, as shown in the next figure. System Status is a tool that can be used to monitor your Prestige. Specifically, it gives you information on your system firmware version, number of packets sent and number of packets received.

11.1.1 To get to the System Status:

- Enter 24 to display Menu 24 - System Maintenance.
- In this menu, enter number 1 to open **System Maintenance - Status**.
- There are three commands in **Menu 24.1 - System Maintenance - Status**. Entering 1 drops the WAN (PPTP/PPPoE) connection, 9 resets the counters and [ESC] takes you back to the previous screen.

The table below describes the fields present in **Menu 24.1 - System Maintenance - Status**. It should be noted that these fields are READ-ONLY and are meant to be used for diagnostic purposes.

```

Menu 24.1 -- System Maintenance - Status 1:39:06
Thu. Jan. 1. 1970
Port      Status  TxPkts  RxPkts    Cols  Tx B/s  Rx B/s  Up Time
WAN  100M/Full    1      0        0      0      0      0:00:00
LAN  100M/Full    0      0        0      0      0      0:00:00

Port:      Ethernet Address      IP Address      IP Mask      DHCP
WAN       00:a0:c5:21:8c:a3      0.0.0.0      0.0.0.0      Client
LAN       00:a0:c5:21:8c:a2      192.168.1.1  255.255.255.0  Server

System up Time:  1:08:22

Name:
Routing: IP
ZyNOS F/W Version: V3.60(CX.0)b2 | 07/02/2002

Press Command:

COMMANDS: 1-Drop WAN 9-Reset Counters  ESC-Exit
    
```

Figure 11-2 Menu 24.1 — System Maintenance — Status

The following table describes the fields present in **Menu 24.1 - System Maintenance - Status**.

Table 11-1 System Maintenance — Status Menu Fields

FIELD	DESCRIPTION
Port	The WAN or LAN port.
Status	Shows the port speed and duplex setting if you're using Ethernet Encapsulation and Down (line is down), idle (line (ppp) idle), dial (starting to trigger a call) and drop (dropping a call) if you're using PPPoE Encapsulation .

FIELD	DESCRIPTION
TxPkts	The number of transmitted packets on this port.
RxPkts	The number of received packets on this port.
Cols	The number of collisions on this port.
Tx B/s	Shows the transmission speed in Bytes per second on this port.
Rx B/s	Shows the reception speed in Bytes per second on this port.
Up Time	Total amount of time the line has been up.
LAN	
Ethernet Address	The LAN port Ethernet address.
IP Address	The LAN port IP address.
IP Mask	The LAN port IP mask.
DHCP	The LAN port DHCP role.
WAN	
Ethernet Address	The WAN port Ethernet address.
IP Address	The WAN port IP address.
IP Mask	The WAN port IP mask.
DHCP	The WAN port DHCP role.
System up Time	The total time the Prestige has been on.
Name	This is the Prestige's system name + domain name assigned in menu 1. e.g., System Name= xxx; Domain Name= baboo.mickey.com. Name= xxx.baboo.mickey.com
ZyNOS F/W Version	The ZyNOS Firmware version and the date created.
You may enter 1 to drop the PPPoE/PPTP connection, 9 to reset the counters or [ESC] to return to menu 24.	

11.2 System Information and Console Port Speed

This section describes your system and allows you to choose different console port speeds. To get to the system information and console port speed:

Step 1. Enter 24 to go to **Menu 24 - System Maintenance**.

Step 2. Enter 2 to open **Menu 24.2 - System Information and Console Port Speed**.

Step 3. From this menu you have two choices as shown in the next figure:

```
Menu 24.2 - System Information and Console Port Speed

      1. System Information
      2. Console Port Speed

Please enter selection:
```

Figure 11-3 Menu 24.2 — System Information and Console Port Speed

11.2.1 System Information

Menu 24.2.1 - System Maintenance - Information gives you information about your system as shown below. More specifically, it gives you information on your routing protocol, country code, Ethernet address, IP address, etc.

```
Menu 24.2.1 - System Maintenance - Information

Name:
Routing: IP
ZyNOS F/W Version: V3.60(CX.0)b2 | 07/02/2002
Country Code: 255

LAN
Ethernet Address: 00:a0:c5:01:23:45
IP Address: 192.168.1.1
IP Mask: 255.255.255.0
DHCP: Server

Press ESC or RETURN to Exit
```

Figure 11-4 Menu 24.2.1 System Maintenance — Information

Table 11-2 Fields in System Maintenance

FIELD	DESCRIPTION
Name	This is the Prestige's system name + domain name assigned in menu 1. E.G., System Name= Prestige; Domain Name= zyxel.com Name= P314 PLUS. zyxel.com
Routing	Refers to the routing protocol used.
ZyNOS F/W Version	Refers to the version of ZyXEL's Network Operating System software.
Ethernet Address	Refers to the Ethernet MAC (Media Access Control) address of your Prestige.
IP Address	This is the IP address of the Prestige in dotted decimal notation.
IP Mask	This shows the subnet mask of the Prestige.
DHCP	This field shows the DHCP setting of the Prestige.

11.2.2 Console Port Speed

You can change the speed of the console port through **Menu 24.2.2 — Console Port Speed**. Your Prestige supports 9600 (default), 19200, 38400, 57600, and 115200 bps for the console port. The recommended maximum port speed for the Prestige is 57600. Use the [SPACE BAR] to select the desired speed in menu 24.2.2, as shown next.

```

Menu 24.2.2 - System Maintenance - Change Console Port Speed
Console Port Speed: 9600

Press ENTER to Confirm or ESC to Cancel:

```

Figure 11-5 Menu 24.2.2 — System Maintenance — Change Console Port Speed

11.3 Log and Trace


There are three logging facilities in the Prestige. The first is the error logs and trace records that are stored locally. The second is the UNIX syslog facility for message logging. UNIX syslog is an external UNIX server used for storing log messages.

11.3.1 Viewing Error Log

The first place you should look for clues when something goes wrong is the error/trace log. Follow the procedure below to view the local error/trace log:

- Step 1.** Select option 24 from the main menu to open **Menu 24 - System Maintenance**.
- Step 2.** From menu 24, select option 3 to display **Menu 24.3 - System Maintenance - Log and Trace**.
- Step 3.** Select the first option from **Menu 24.3 - System Maintenance - Log and Trace** to display the error log in the system.

After the Prestige finishes displaying, you will have the option to clear the error log.

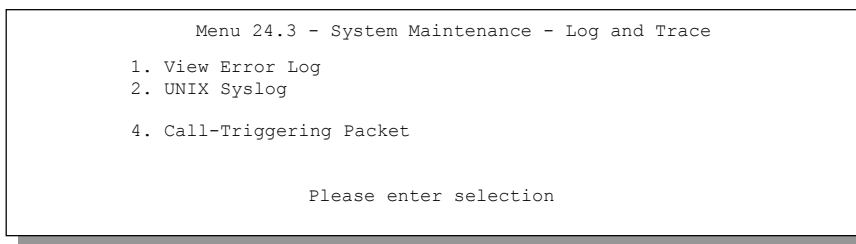

```
Menu 24.3 - System Maintenance - Log and Trace
1. View Error Log
2. UNIX Syslog
4. Call-Triggering Packet

Please enter selection
```

Figure 11-6 Menu 23.3 System Maintenance — Log and Trace

Examples of typical error and information messages are presented in the figure below.

```
59 Thu Jan 1 00:00:03 1970 PINI INFO SMT Session Begin
60 Thu Jan 1 00:05:11 1970 PINI INFO SMT Session End
61 Thu Jan 1 00:17:59 1970 PINI INFO SMT Session Begin
62 Thu Jan 1 00:24:40 1970 PINI INFO SMT Session End
63 Thu Jan 1 00:35:32 1970 PINI INFO SMT Session Begin
Clear Error Log (y/n):
```

Figure 11-7 Examples of Error and Information Messages

11.3.2 UNIX Syslog

The Prestige uses the UNIX syslog facility to log the CDR (Call Detail Record) and system messages to a syslog server. Syslog and accounting can be configured in **Menu 24.3.2 - System Maintenance - Syslog and Accounting**, as shown next.

```
Menu 24.3.2 -- System Maintenance - UNIX Syslog

Syslog:
Active= No
Syslog IP Address= ?
Log Facility= Local 1

Types:
CDR= No
Packet triggered= No
Filter log= No
PPP log= No

Press ENTER to Confirm or ESC to Cancel:
Press Space Bar to Toggle.
```

Figure 11-8 Menu 24.3.2 — System Maintenance — UNIX Syslog

You need to configure the UNIX syslog parameters described in the following table to activate syslog then choose what you want to log.

Table 11-3 System Maintenance Menu Syslog Parameters

PARAMETER	DESCRIPTION
Syslog: Active	Press the [SPACE BAR] to turn on or off syslog.
Syslog IP Address	Enter the IP Address of the server that will log the CDR (Call Detail Record) and system messages i.e., the syslog server.
Log Facility	Press the [SPACE BAR] to toggle between the 7 different Local options. The log facility allows you to log the message to different files in the server. Please refer to your UNIX manual for more detail.
Types: CDR	Call Detail Record (CDR) logs all data phone line activity if set to Yes .
Packet triggered	The first 48 bytes or octets and protocol type of the triggering packet is sent to the UNIX syslog server when this field is set to Yes .
Filter log	No filters are logged when this field is set to No . Filters with the individual filter Log Filter field set to Yes (menu 21.x.x.) are logged when this field is set to Yes .
PPP log	PPP events are logged when this field is set to Yes .
When finished viewing, press [ESC] or [ENTER] to exit.	

Your Prestige sends five types of syslog messages. Some examples (not P314 PLUS specific) of these syslog messages with their message formats are shown next:

1. CDR

CDR Message Format
<pre>SdcmSyslogSend(SYSLOG_CDR, SYSLOG_INFO, String); String = board xx line xx channel xx, call xx, str board = the hardware board ID line = the WAN ID in a board Channel = channel ID within the WAN call = the call reference number which starts from 1 and increments by 1 for each new call str = C01 Outgoing Call dev xx ch xx (dev:device No. ch:channel No.) L02 Tunnel Connected(L2TP) C02 OutCall Connected xxxx (means connected speed) xxxxx (means Remote Call Number) L02 Call Terminated C02 Call Terminated Jul 19 11:19:27 192.168.102.2 ZyXEL: board 0 line 0 channel 0, call 1, C01 Outgoing Call dev=2 ch=0 40002 Jul 19 11:19:32 192.168.102.2 ZyXEL: board 0 line 0 channel 0, call 1, C02 OutCall Connected 64000 40002 Jul 19 11:20:06 192.168.102.2 ZyXEL: board 0 line 0 channel 0, call 1, C02 Call Terminated</pre>

2. Packet triggered

Packet triggered Message Format
<pre> sdcmdSyslogSend(SYSLOG_PKTTRI, SYSLOG_NOTICE, String); String = Packet trigger: Protocol=xx Data=xxxxxxxxx....x Protocol: (1:IP 2:IPX 3:IPXHC 4:BPDU 5:ATALK 6:IPNG) Data: We will send forty-eight Hex characters to the server Jul 19 11:28:39 192.168.102.2 ZyXEL: Packet Trigger: Protocol=1, Data=4500003c100100001f010004c0a86614ca849a7b08004a5c020001006162636465666768696a6b6c6d6e6f70 71727374 Jul 19 11:28:56 192.168.102.2 ZyXEL: Packet Trigger: Protocol=1, Data=4500002c1b0140001f06b50ec0a86614ca849a7b0427001700195b3e0000000600220008cd40000020405b 4 Jul 19 11:29:06 192.168.102.2 ZyXEL: Packet Trigger: Protocol=1, Data=45000028240140001f06ac12c0a86614ca849a7b0427001700195b451d1430135004000077600000 </pre>

3. Filter log

Filter log Message Format
<pre> SdcmdSyslogSend(SYSLOG_FILLOG, SYSLOG_NOTICE, String); String = IP[Src=xx.xx.xx.xx Dst=xx.xx.xx.xx prot spo=xxxx dpo=xxxx] S04>R01mD IP[...] is the packet header and S04>R01mD means filter set 4 (S) and rule 1 (R), match (m) drop (D). Src: Source Address Dst: Destination Address prot: Protocol ("TCP", "UDP", "ICMP") spo: Source port dpo: Destination port Mar 03 10:39:43 202.132.155.97 ZyXEL: GEN[fffffffffnordff0080] }S05>R01mF Mar 03 10:41:29 202.132.155.97 ZyXEL: GEN[00a0c5f502fnord010080] }S05>R01mF Mar 03 10:41:34 202.132.155.97 ZyXEL: IP[Src=192.168.2.33 Dst=202.132.155.93 ICMP]}S04>R01mF Mar 03 11:59:20 202.132.155.97 ZyXEL: GEN[00a0c5f502fnord010080] }S05>R01mF Mar 03 12:00:31 202.132.155.97 ZyXEL: GEN[fffffffffnordff0080] }S05>R01mF Mar 03 12:00:52 202.132.155.97 ZyXEL: GEN[fffffffff0080] }S05>R01mF Mar 03 12:00:57 202.132.155.97 ZyXEL: GEN[00a0c5f502010080] }S05>R01mF Mar 03 12:01:01 202.132.155.97 ZyXEL: IP[Src=192.168.2.33 Dst=202.132.155.93 TCP spo=01170 dpo=00021]}S04>R01mF Mar 03 12:01:06 202.132.155.97 ZyXEL: IP[Src=192.168.2.33 Dst=202.132.155.93 TCP spo=01170 dpo=00021]}S04>R01mF </pre>

4. PPP log

PPP Log Message Format

```
sdcmdSyslogSend( SYSLOG_PPLOG, SYSLOG_NOTICE, String );  
String = ppp:Proto Starting / ppp:Proto Opening / ppp:Proto Closing / ppp:Proto Shutdown  
Proto = LCP / ATCP / BACP / BCP / CBCP / CCP / CHAP/ PAP / IPCP /  
IPXCP  
Jul 19 11:42:44 192.168.102.2 ZyXEL: ppp:LCP Closing  
Jul 19 11:42:49 192.168.102.2 ZyXEL: ppp:IPCP Closing  
Jul 19 11:42:54 192.168.102.2 ZyXEL: ppp:CCP Closing
```

11.3.3 Call-Triggering Packet

Call-Triggering Packet displays information about the packet that triggered a dial-out call in an easy readable format. Equivalent information is available in menu 24.1 in hex format. An example is shown next.

Note: This feature is available for PPTP/PPPoE Encapsulation only

```

IP Frame: ENET0-RECV Size: 44/ 44   Time: 17:02:44.262
Frame Type:

IP Header:
IP Version      = 4
Header Length   = 20
Type of Service = 0x00 (0)
Total Length    = 0x002C (44)
Identification  = 0x0002 (2)
Flags           = 0x00
Fragment Offset = 0x00
Time to Live    = 0xFE (254)
Protocol        = 0x06 (TCP)
Header Checksum = 0xFB20 (64288)
Source IP       = 0xC0A80101 (192.168.1.1)
Destination IP  = 0x00000000 (0.0.0.0)

TCP Header:
Source Port     = 0x0401 (1025)
Destination Port = 0x000D (13)
Sequence Number = 0x05B8D000 (95997952)
Ack Number      = 0x00000000 (0)
Header Length   = 24
Flags           = 0x02 (...S.)
Window Size     = 0x2000 (8192)
Checksum        = 0xE06A (57450)
Urgent Ptr      = 0x0000 (0)
Options         =
    0000: 02 04 02 00

RAW DATA:
0000: 45 00 00 2C 00 02 00 00-FE 06 FB 20 C0 A8 01 01 E
0010: 00 00 00 00 00 04 01 00 0D-05 B8 D0 00 00 00 00.
0020: 60 02 20 00 E0 6A 00 00-02 04 02 00

Press any key to continue...

```

Figure 11-9 Call-Triggering Packet Example

11.4 Diagnostic

The diagnostic facility allows you to test the different aspects of your Prestige to determine if it is working properly. Menu 24.4 allows you to choose among various types of diagnostic tests to evaluate your system, as shown next.

```
Menu 24.4 - System Maintenance - Diagnostic

TCP/IP
 1. Ping Host
 2. WAN DHCP Release
 3. WAN DHCP Renewal
 4. Internet Setup Test

System
 11. Reboot System

Enter Menu Selection Number:

Host IP Address= N/A
```

Figure 11-10 Menu 24.4 — System Maintenance — Diagnostic

Follow the procedure below to get to **Menu 24.4 - System Maintenance – Diagnostic**.

Step 1. From the main menu, select option 24 to open **Menu 24 - System Maintenance**.

Step 2. From this menu, select option 4 (Diagnostic). This will open **Menu 24.4 - System Maintenance - Diagnostic**.

11.4.1 WAN DHCP

DHCP functionality can be enabled on the LAN or WAN as shown in *Figure 11-11*. The Prestige can act either as a WAN DHCP client (**IP Address Assignment** field in menu 4 or menu 11.3 is **Dynamic** and the **Encapsulation** field in menu 4 or menu 11 is **Ethernet**) or “none”, i.e., you have a static IP. The WAN Release and Renewal fields in menu 24.4 conveniently allow you to release and/or renew the assigned WAN IP address, subnet mask and default gateway in a fashion similar to winipcfg.

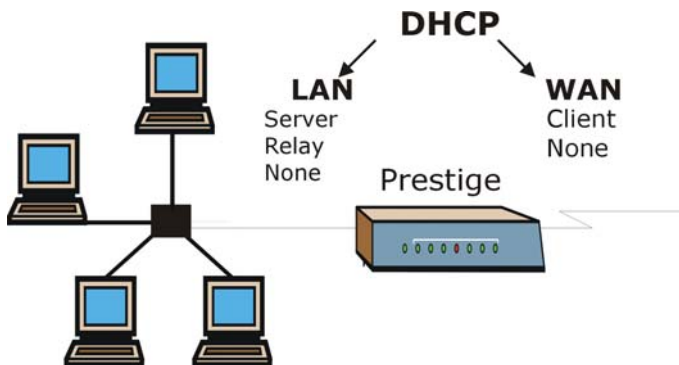


Figure 11-11 WAN & LAN DHCP

The following table describes the diagnostic tests available in menu 24.4 for your Prestige and the connections.

Table 11-4 System Maintenance Menu Diagnostic

NUMBER	FIELD	DESCRIPTION
1	Ping Host	Enter 1 to ping any machine (with an IP address) on your LAN or WAN. Enter its IP address in the Host IP Address field mentioned in the last row of this table.
2	WAN DHCP Release	Enter 2 to release your WAN DHCP settings.
3	WAN DHCP Renewal	Enter 3 to renew your WAN DHCP settings. The renewal timeout is 32 seconds.
4	Internet Setup Test	Enter 4 to test the Internet Setup. You can also test the Internet Setup in menu 4 - Internet Access. Please refer to the chapter- <i>Internet Access</i> for more details.
11	Reboot System	Enter 11 to reboot the Prestige.
	Host IP Address	If you entered 1 above, then enter the IP address of the machine you want to ping in this field.

Chapter 12

Firmware and Configuration File Maintenance

This chapter tells you how to back up and restore your configuration file as well as upload new firmware and a new configuration file.

12.1 Filename Conventions

The configuration file (often called the romfile or rom-0) contains the factory default settings in the menus such as password, DHCP Setup, TCP/IP Setup, etc. It arrives from ZyXEL with a rom filename extension. Once you have customized the Prestige's settings, they can be saved back to your computer under a filename of your choosing.

ZyNOS (ZyXEL Network Operating System sometimes referred to as the “ras” file) is the system firmware and has a “bin” filename extension. With many ftp and tftp clients, the filenames are similar to those seen next.

```
ftp> put firmware.bin ras
```

This is a sample ftp session showing the transfer of the computer file " firmware.bin" to the Prestige.

```
ftp> get rom-0 config.cfg
```

This is a sample ftp session saving the current configuration to the computer file config.cfg.

If your (t)ftp client does not allow you to have a destination filename different than the source, you will need to rename them as the Prestige only recognizes “rom-0” and “ras”. Be sure you keep unaltered copies of both files for later use.

The following table is a summary. Please note that the internal filename refers to the filename on the Prestige and the external filename refers to the filename not on the Prestige, that is, on your computer, local network or ftp site and so the name (but not the extension) will vary. After uploading new firmware see the **ZyNOS F/W Version** field in **Menu 24.2.1 - System Maintenance - Information** to confirm that you have uploaded the correct firmware version. The AT command is the command you enter after you press “y” when prompted in the SMT menu to go into debug mode.

Table 12-1 Filename Conventions

FILE TYPE	INTERNAL NAME	EXTERNAL NAME	DESCRIPTION
Configuration File	Rom-0	*.rom	This is the configuration filename on the Prestige. Uploading the rom-0 file replaces the entire ROM file system, including your Prestige configurations, system-related data (including the default password), the error log and the trace log.
Firmware	Ras	*.bin	This is the generic name for the ZyNOS firmware on the Prestige.

12.2 Backup Configuration

The Prestige displays different messages explaining different ways to backup, restore and upload files in menus 24.5, 24.6, 24. 7.1 and 24.7.2 when you use the serial/console port and when you telnet in.

Option 5 from **Menu 24 - System Maintenance** allows you to backup the current Prestige configuration to your computer. Backup is highly recommended once your Prestige is functioning properly. FTP and TFTP are the preferred methods for backing up your current configuration to your computer since FTP and TFTP are faster. You can also perform backup and restore using menu 24 through the console port. Any serial communications program should work fine; however, you must use Xmodem protocol to perform the download/upload and you don't have to rename the files (see *section 12.1*).

Please note that terms “download” and “upload” are relative to the computer. Download means to transfer from the Prestige to the computer, while upload means from your computer to the Prestige.

Follow the instructions as shown in the next screen.

```
Menu 24.5 - System Maintenance - Backup Configuration

To transfer the configuration file to your workstation, follow the procedure
below:

1. Launch the FTP client on your workstation.
2. Type "open" and the IP address of your router. Then type "root" and
   SMT password as requested.
3. Locate the 'rom-0' file.
4. Type 'get rom-0' to back up the current router configuration to
   your workstation.

For details on FTP commands, please consult the documentation of your FTP
client program. For details on backup using TFTP (note that you must remain
in this menu to back up using TFTP), please see your router manual.

Press ENTER to Exit:
```

Figure 12-1 Telnet in Menu 24.5

12.2.1 Using the FTP Command from the DOS Prompt

- Step 1.** Launch the FTP client on your computer.
- Step 2.** Enter “open”, followed by a space and the IP address of your Prestige.
- Step 3.** Press [ENTER] when prompted for a username.
- Step 4.** Enter your password as requested (the default is “1234”).
- Step 5.** Enter “bin” to set transfer mode to binary.
- Step 6.** Use “get” to transfer files from the Prestige to the computer, for example, “get rom-0 config.rom” transfers the configuration file on the Prestige to your computer and renames it “config.rom”. See earlier in this chapter for more information on filename conventions.
- Step 7.** Enter “quit” to exit the ftp prompt.

Example of FTP Commands from the DOS Prompt

```

331 Enter PASS command
Password:
230 Logged in
ftp> bin
200 Type I OK
ftp> get rom-0 zyxel.rom
200 Port command okay
150 Opening data connection for STOR ras
226 File received OK
ftp: 16384 bytes sent in 1.10Seconds 297.89Kbytes/sec.
ftp> quit
    
```

Figure 12-2 FTP Session Example

FTP GUI Clients

The following table describes some of the commands that you may see in FTP GUI clients.

Table 12-2 General Commands for GUI Clients

COMMAND	DESCRIPTION
Host Address	Enter the address of the host server.
Login Type	<p>Anonymous.</p> <p>This is when a user I.D. and password is automatically supplied to the server for anonymous access. Anonymous logins will work only if your ISP or service administrator has enabled this option.</p> <p>Normal.</p> <p>The server requires a unique User ID and Password to login.</p>
Transfer Type	Transfer files in either ASCII (plain text format) or in binary mode.
Initial Remote Directory	Specify the default remote directory (path).
Initial Local Directory	Specify the default local directory (path).

TFTP and FTP over WAN Will Not Work When

- Telnet service is disabled in menu 24.11.
- A filter in menu 3.1 (LAN) or in menu 11.5 (WAN) is applied to block Telnet service.

- The IP address in the **Secured Client IP** field (menu 24.11) does not match the client IP address. If it does not match, the Prestige will disconnect the Telnet session immediately.
- There is a SMT console session running.

12.2.2 Backup Configuration Using TFTP

The Prestige supports the up/downloading of the firmware and the configuration file using TFTP (Trivial File Transfer Protocol) over LAN. Although TFTP should work over WAN as well, it is not recommended.

To use TFTP, your computer must have both telnet and TFTP clients. To backup the configuration file, follow the procedure shown next.

- Step 1.** Use telnet from your computer to connect to the Prestige and log in. Because TFTP does not have any security checks, the Prestige records the IP address of the telnet client and accepts TFTP requests only from this address.
- Step 2.** Put the SMT in command interpreter (CI) mode by entering 8 in **Menu 24 – System Maintenance**.
- Step 3.** Enter command “sys stdio 0” to disable the SMT timeout, so the TFTP transfer will not be interrupted. Enter command “sys stdio 5” to restore the five-minute SMT timeout (default) when the file transfer is complete.
- Step 4.** Launch the TFTP client on your computer and connect to the Prestige. Set the transfer mode to binary before starting data transfer.
- Step 5.** Use the TFTP client (see the example below) to transfer files between the Prestige and the computer. The file name for the configuration file is “rom-0” (rom-zero, not capital o).

Note that the telnet connection must be active and the SMT in CI mode before and during the TFTP transfer. For details on TFTP commands (see following example), please consult the documentation of your TFTP client program. For UNIX, use “get” to transfer from the Prestige to the computer and “binary” to set binary transfer mode.

12.2.3 TFTP Command Example

The following is an example tftp command:

```
TFTP [-i] host get rom-0 config.rom
```

where “i” specifies binary image transfer mode (use this mode when transferring binary files), “host” is the Prestige IP address, “get” transfers the file source on the Prestige (rom-0 name of the configuration file on the Prestige) to the file destination on the computer and renames it config.rom.

TFTP GUI Clients

The following table describes some of the fields that you may see in some TFTP GUI clients.

Table 12-3 General Commands for TFTP GUI Clients

COMMAND	DESCRIPTION
Host	Enter the IP address of the Prestige. 192.168.1.1 is the Prestige's default IP address when shipped.
Send/Fetch	Use “Send” to upload the file to the Prestige and “Fetch” to back up the file on your computer.
Local File	Enter the path and name of the firmware file (*.bin extension) or configuration file (*.rom extension) on your computer.
Remote File	This is the filename on the Prestige. The filename for the firmware is “ras” and for the configuration file, is “rom-0”.
Binary	Transfer the file in binary mode.
Abort	Stop transfer of the file.

Refer to the *TFTP and FTP over WAN Will Not Work When* section to read about configurations that disallow TFTP and FTP to work over WAN.

12.2.4 Backup Via Console Port

Backup configuration via console port by following the HyperTerminal procedure shown next. Procedures using other serial communications programs should be similar.

Step 1. Display menu 24.5 and enter “y” at the following screen.

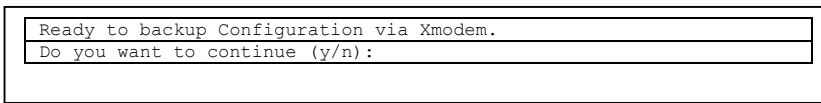


Figure 12-3 System Maintenance — Backup Configuration

Step 2. The following screen indicates that the Xmodem download has started.




Figure 12-4 System Maintenance — Starting Xmodem Download Screen

Step 3. Run the HyperTerminal program by clicking **Transfer**, then **Receive File** as shown in the following screen.

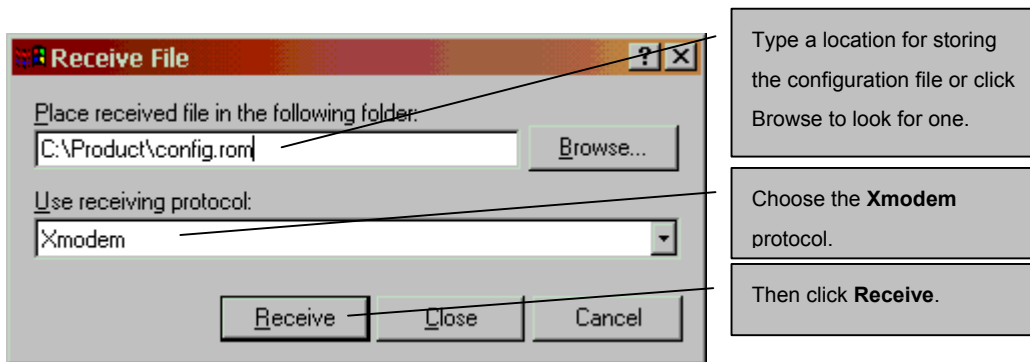


Figure 12-5 Backup Configuration Example

Step 4. After a successful backup you will see the following screen. Press any key to return to the SMT menu.

```
** Backup Configuration completed. OK.  
### Hit any key to continue.###
```

Figure 12-6 Successful Backup Confirmation Screen

12.3 Restore Configuration

This section shows you how to restore a previously saved configuration. Note that this function erases the current configuration before restoring a previous back up configuration; please do not attempt to restore unless you have a backup configuration file stored on disk.

FTP and TFTP are the preferred methods for restoring your current computer configuration to your Prestige since FTP and TFTP are faster. Please note that you must restart the system after the file transfer is complete.

WARNING!

DO NOT INTERRUPT THE FILE TRANSFER PROCESS AS THIS MAY PERMANENTLY DAMAGE YOUR PRESTIGE. WHEN THE RESTORE CONFIGURATION PROCESS IS COMPLETE, THE PRESTIGE WILL AUTOMATICALLY RESTART.

12.3.1 Restore Using FTP or TFTP

For details about backup using (T)FTP please refer to earlier sections on FTP and TFTP file upload in this chapter.

```
Menu 24.6 -- System Maintenance - Restore Configuration

To transfer the firmware and configuration file to your workstation, follow the
procedure below:

1. Launch the FTP client on your workstation.
2. Type "open" and the IP address of your router. Then type "root" and
   SMT password as requested.
3. Type "put backupfilename rom-0" where backupfilename is the name of
   your backup configuration file on your workstation and rom-spt is the
   remote file name on the router. This restores the configuration to
   your router.
4. The system reboots automatically after a successful file transfer

For details on FTP commands, please consult the documentation of your FTP
client program. For details on backup using TFTP (note that you must remain
in this menu to back up using TFTP), please see your router manual.

Press ENTER to Exit:
```

Figure 12-7 Telnet into Menu 24.6

- Step 1.** Launch the FTP client on your computer.
- Step 2.** Enter “open”, followed by a space and the IP address of your Prestige.
- Step 3.** Press [ENTER] when prompted for a username.
- Step 4.** Enter your password as requested (the default is “1234”).
- Step 5.** Enter “bin” to set transfer mode to binary.
- Step 6.** Find the “rom” file (on your computer) that you want to restore to your Prestige.
- Step 7.** Use “put” to transfer files from the Prestige to the computer, for example, “put config.rom rom-0” transfers the configuration file on the Prestige to your computer and renames it “config.rom”. See earlier in this chapter for more information on filename conventions.
- Step 8.** Enter “quit” to exit the ftp prompt. The Prestige will automatically restart after a successful restore process.

Restore Using FTP or TFTP Session Example

```
ftp> put config.rom rom-0
200 Port command okay
150 Opening data connection for STOR rom-0
226 File received OK
221 Goodbye for writing flash
ftp: 16384 bytes sent in 0.06Seconds 273.07Kbytes/sec.
ftp>quit
```

Figure 12-8 Restore Using FTP or TFTP Session Example

Refer to the *TFTP and FTP over WAN Will Not Work When* section to read about configurations that disallow TFTP and FTP to work over WAN.

12.3.2 Restore Via Console Port

Restore configuration via console port by following the HyperTerminal procedure shown next. Procedures using other serial communications programs should be similar.

Step 1. Display menu 24.6 and enter “y” at the following screen.

```
Ready to restore Configuration via Xmodem.
Do you want to continue (y/n):
```

Figure 12-9 System Maintenance — Restore Configuration

Step 2. The following screen indicates that the Xmodem download has started.

```
Starting XMODEM download (CRC mode) ...
CCCCCCCC
```

Figure 12-10 System Maintenance — Starting Xmodem Download Screen

Step 3. Run the HyperTerminal program by clicking **Transfer**, then **Receive File** as shown in the following screen.

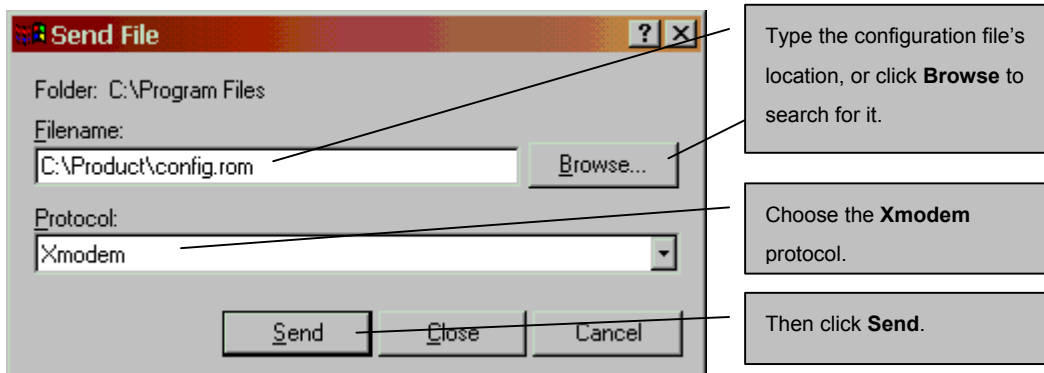


Figure 12-11 Restore Configuration Example

- Step 4.** After a successful restoration you will see the following screen. Press any key to restart the Prestige and return to the SMT menu.

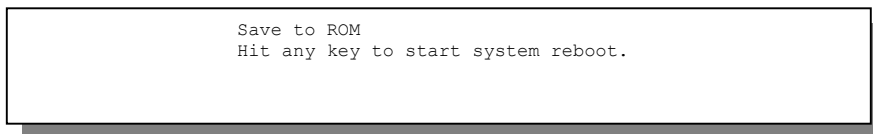


Figure 12-12 Successful Restoration Confirmation Screen

12.4 Uploading Firmware and Configuration Files

This section shows you how to upload firmware and configuration files. You can upload configuration files by following the procedure in the previous *Restore Configuration* section or by following the instructions in **Menu 24.7.2 - System Maintenance - Upload Router Configuration File** (for console port).

WARNING!

**DO NOT INTERRUPT THE FILE TRANSFER PROCESS AS THIS MAY PERMANENTLY
DAMAGE YOUR PRESTIGE.**

12.4.1 Firmware File Upload

FTP is the preferred method for uploading the firmware and configuration. To use this feature, your computer must have an FTP client.

When you telnet into the Prestige, you will see the following screens for uploading firmware and the configuration file using FTP.

```
Menu 24.7.1 - System Maintenance - Upload System Firmware

To upload the system firmware, follow the procedure below:

1. Launch the FTP client on your workstation.
2. Type "open" and the IP address of your system. Then type "root" and
   SMT password as requested.
3. Type "put firmwarefilename ras" where "firmwarefilename" is the name
   of your firmware upgrade file on your workstation and "ras" is the
   remote file name on the system.
4. The system reboots automatically after a successful firmware upload.

For details on FTP commands, please consult the documentation of your FTP
client program. For details on uploading system firmware using TFTP (note
that you must remain on this menu to upload system firmware using TFTP),
please see your manual.

Press ENTER to Exit:
```

Figure 12-13 Telnet Into Menu 24.7.1 — Upload System Firmware

12.4.2 Configuration File Upload

You see the following screen when you telnet into menu 24.7.2.

Menu 24.7.2 - System Maintenance - Upload System Configuration File

To upload the system configuration file, follow the procedure below:

1. Launch the FTP client on your workstation.
2. Type "open" and the IP address of your system. Then type "root" and SMT password as requested.
3. Type "put configurationfilename rom-0" where "configurationfilename" is the name of your system configuration file on your workstation, which will be transferred to the "rom-0" file on the system.
4. The system reboots automatically after the upload system configuration file process is complete.

For details on FTP commands, please consult the documentation of your FTP client program. For details on uploading system firmware using TFTP (note that you must remain on this menu to upload system firmware using TFTP), please see your manual.

Press ENTER to Exit:

Figure 12-14 Telnet Into Menu 24.7.2 — System Maintenance

To upload the firmware and the configuration file, follow these examples:

FTP File Upload Command from the DOS Prompt Example

- Step 1.** Launch the FTP client on your computer.
- Step 2.** Enter "open", followed by a space and the IP address of your Prestige.
- Step 3.** Press [ENTER] when prompted for a username.
- Step 4.** Enter your password as requested (the default is "1234").
- Step 5.** Enter "bin" to set transfer mode to binary.
- Step 6.** Use "put" to transfer files from the computer to the Prestige, for example, put firmware.bin ras transfers the firmware on your computer (firmware.bin) to the Prestige and renames it "ras". Similarly put config.rom rom-0 transfers the configuration file on your computer (config.rom) to the Prestige and renames it "rom-0". Likewise get rom-0 config.rom transfers the configuration file on the Prestige to your computer and renames it "config.rom." See earlier in this chapter for more information on filename conventions.
- Step 7.** Enter "quit" to exit the ftp prompt.

FTP Session Example of Firmware File Upload

```
331 Enter PASS command
Password:
230 Logged in
ftp> bin
200 Type I OK
ftp> put firmware.bin ras
200 Port command okay
150 Opening data connection for STOR ras
226 File received OK
ftp: 1103936 bytes sent in 1.10Seconds 297.89Kbytes/sec.
ftp> quit
```

Figure 12-15 FTP Session Example of Firmware File Upload

More commands (found in third party FTP clients), are listed earlier in this chapter.

Refer to the *TFTP and FTP over WAN Will Not Work When* section to read about configurations that disallow TFTP and FTP to work over WAN.

12.4.3 TFTP File Upload

The Prestige also supports the uploading of firmware files using TFTP (Trivial File Transfer Protocol) over LAN. Although TFTP should work over WAN as well, it is not recommended.

To use TFTP, your computer must have both telnet and TFTP clients. To transfer the firmware and the configuration file, follow the procedure shown next.

- Step 1.** Use telnet from your computer to connect to the Prestige and log in. Because TFTP does not have any security checks, the Prestige records the IP address of the telnet client and accepts TFTP requests only from this address.
- Step 2.** Put the SMT in command interpreter (CI) mode by entering 8 in **Menu 24 – System Maintenance**.
- Step 3.** Enter the command “sys stdio 0” to disable the console timeout, so the TFTP transfer will not be interrupted. Enter “command sys stdio 5” to restore the five-minute console timeout (default) when the file transfer is complete.
- Step 4.** Launch the TFTP client on your computer and connect to the Prestige. Set the transfer mode to binary before starting data transfer.

Step 5. Use the TFTP client (see the example below) to transfer files between the Prestige and the computer. The file name for the firmware is “ras”.

Note that the telnet connection must be active and the Prestige in CI mode before and during the TFTP transfer. For details on TFTP commands (see following example), please consult the documentation of your TFTP client program. For UNIX, use “get” to transfer from the Prestige to the computer, “put” the other way around, and “binary” to set binary transfer mode.

TFTP Upload Command Example

The following is an example tftp command:

```
TFTP [-i] host put firmware.bin ras
```

where “i” specifies binary image transfer mode (use this mode when transferring binary files), “host” is the Prestige’s IP address, “put” transfers the file source on the computer (firmware.bin – name of the firmware on the computer) to the file destination on the remote host (ras - name of the firmware on the Prestige).

Commands that you may see in third party TFTP clients are listed earlier in this chapter.

12.4.4 Uploading Via Console Port

FTP or TFTP are the preferred methods for uploading firmware to your Prestige. However in the event of your network being down, uploading files is only possible with a direct connection to your Prestige via the console port. Uploading files via the console port under normal conditions is not recommended since FTP or TFTP is faster. Any serial communications program should work fine; however, you must use the Xmodem protocol to perform the download/upload.

Uploading a Firmware File Via Console Port

Step 1. Select 1 from **Menu 24.7 – System Maintenance – Upload Firmware** to display **Menu 24.7.1 - System Maintenance - Upload Router Firmware**, and then follow the instructions as shown in the following screen.

```
Menu 24.7.1 - System Maintenance - Upload Router Firmware

To upload router firmware:

1. Enter "y" at the prompt below to go into debug mode.
2. Enter "atur" after "Enter Debug Mode" message.
3. Wait for "Starting XMODEM upload" message before activating
   Xmodem upload on your terminal.
4. After successful firmware upload, enter "atgo" to restart the
   router.

Warning: Proceeding with the upload will erase the current router
firmware.
Do You Wish To Proceed: (Y/N)
```

Figure 12-16 Menu 24.7.1 as seen using the Console Port

Step 2. After the "Starting Xmodem upload" message appears, activate the Xmodem protocol on your computer. Follow the procedure as shown previously for the HyperTerminal program. The procedure for other serial communications programs should be similar.

Example Xmodem Firmware Upload Using HyperTerminal

Click **Transfer**, then **Send File** to display the following screen.

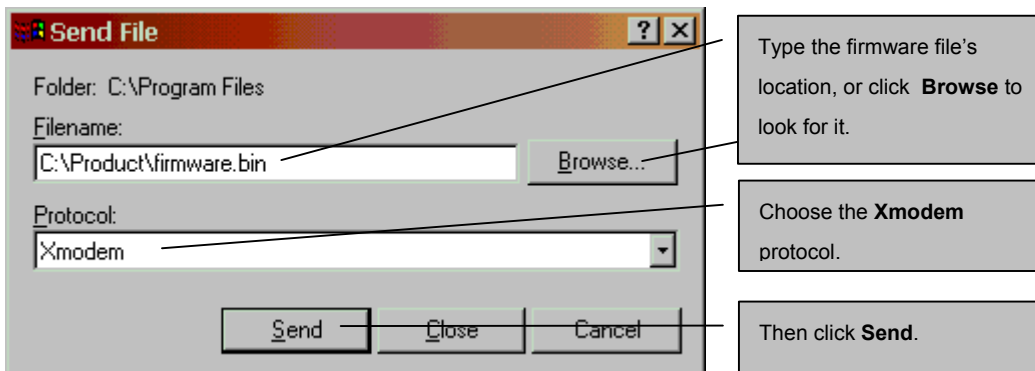


Figure 12-17 Example Xmodem Upload

After the firmware upload process has completed, the Prestige will automatically restart.

Uploading a Configuration File Via Console Port

- Step 1.** Select 2 from **Menu 24.7 – System Maintenance – Upload Firmware** to display **Menu 24.7.2 - System Maintenance - Upload Router Configuration File**. Follow the instructions as shown in the next screen.

```
Menu 24.7.2 - System Maintenance - Upload Router Configuration File

To upload router configuration file:

1. Enter "y" at the prompt below to go into debug mode.
2. Enter "atlc" after "Enter Debug Mode" message.
3. Wait for "Starting XMODEM upload" message before activating
   Xmodem upload on your terminal.
4. After successful firmware upload, enter "atgo" to restart the
   router.

Warning:
1. Proceeding with the upload will erase the current
   configuration file.
2. The router's console port speed (Menu 24.2.2) may change
   when it is restarted; please adjust your terminal's speed
   accordingly. The password may change (menu 23), also.
3. When uploading the DEFAULT configuration file, the console
   port speed will be reset to 9600 bps and the password to
   "1234".

Do You Wish To Proceed: (Y/N)
```

Figure 12-18 Menu 24.7.2 as seen using the Console Port

- Step 2.** After the "Starting Xmodem upload" message appears, activate the Xmodem protocol on your computer. Follow the procedure as shown previously for the HyperTerminal program. The procedure for other serial communications programs should be similar.

- Step 3.** Enter "atgo" to restart the Prestige.

Example Xmodem Configuration Upload Using HyperTerminal

Click **Transfer**, then **Send File** to display the following screen.

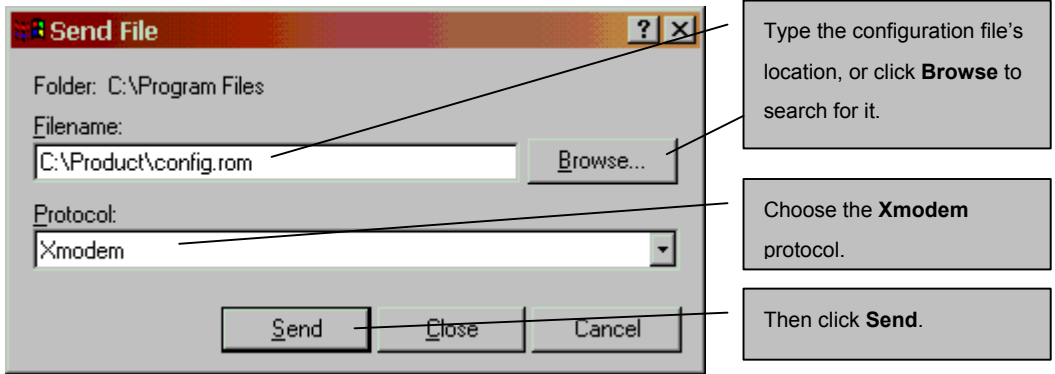


Figure 12-19 Example Xmodem Upload

After the configuration upload process has completed, restart the Prestige by entering “atgo”.

Chapter 13

System Maintenance & Information

This chapter leads you through SMT menus 24.8 to 24.11.

13.1 Command Interpreter Mode

The Command Interpreter (CI) is a part of the main router firmware. The CI provides much of the same functionality as the SMT, while adding some low-level setup and diagnostic functions. The CI can be entered from the SMT by selecting menu 24.8. Access can be either by Telnet or by a serial connection to the console port, although some commands are only available with a serial connection. See the included CD or the zyxel.com web site for more detailed information on CI commands. Enter 8 from **Menu 24 - System Maintenance**. A list of valid commands can be found by typing `help` or `?` at the command prompt. Type “exit” to return to the SMT main menu when finished.

```
Menu 24 - System Maintenance

1. System Status
2. System Information and Console Port Speed
3. Log and Trace
4. Diagnostic
5. Backup Configuration
6. Restore Configuration
7. Firmware Update
8. Command Interpreter Mode
9. Call Control
10. Time and Date Setting
11. Remote Management Setup

Enter Menu Selection Number:
```

Figure 13-1 Command Mode in Menu 24

```
Copyright (c) 1994 - 2002 ZyXEL Communications Corp.
ras> ?
Valid commands are:
sys      exit      device      ether
poe      pptp      ip          ppp
hdap
ras>
```

Figure 13-2 Valid Commands

13.2 Call Control Support

The Prestige provides two call control functions: budget management and call history. Please note that this menu is only applicable when **Encapsulation** is set to **PPPoE** or **PPTP** in menu 4 or menu 11.1.

The budget management function allows you to set a limit on the total outgoing call time of the Prestige within certain times. When the total outgoing call time exceeds the limit, the current call will be dropped and any future outgoing calls will be blocked.

Call history chronicles preceding incoming and outgoing calls.

To access the call control menu, select option 9 in menu 24 to go to **Menu 24.9 - System Maintenance - Call Control**, as shown in the next table.

```
Menu 24.9 - System Maintenance - Call Control

1. Budget Management
2. Call History

Enter Menu Selection Number:
```

Figure 13-3 Call Control

13.2.1 Budget Management

Menu 24.9.1 shows the budget management statistics for outgoing calls. Enter 1 from **Menu 24.9 - System Maintenance - Call Control** to bring up the following menu.

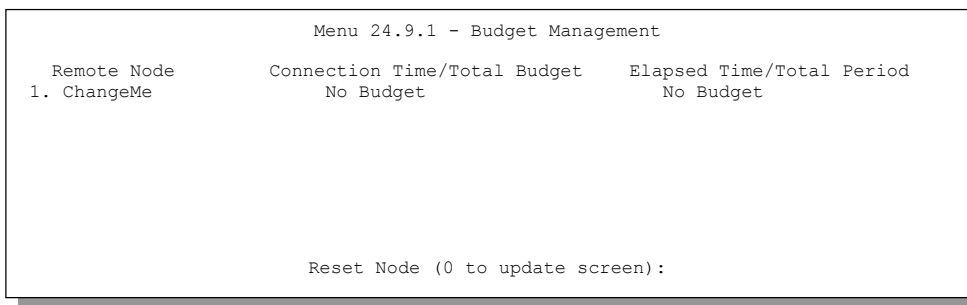


Figure 13-4 Budget Management

The total budget is the time limit on the accumulated time for outgoing calls to a remote node. When this limit is reached, the call will be dropped and further outgoing calls to that remote node will be blocked. After each period, the total budget is reset. The default for the total budget is 0 minutes and the period is 0 hours, meaning no budget control. You can reset the accumulated connection time in this menu by entering the index of a remote node. Enter 0 to update the screen. The budget and the reset period can be configured in menu 11.1 for the remote node.

Table 13-1 Budget Management

FIELD	DESCRIPTION	EXAMPLE
Remote Node	Enter the index number of the remote node you want to reset (just one in this case)	1
Connection Time/Total Budget	This is the total connection time that has gone by (within the allocated budget that you set in menu 11.1.	5/10 means that 5 minutes out of a total allocation of 10 minutes have lapsed.
Elapsed Time/Total Period	The period is the time cycle in hours that the allocation budget is reset (see menu 11.1.) The elapsed time is the time used up within this period.	0.5/1 means that 30 minutes out of the 1 hour time period has lapsed.
Enter "0" to update the screen or press [ESC] to return to the previous screen.		

13.2.2 Call History

This is the second option in **Menu 24.9 - System Maintenance - Call Control**. It displays information about past incoming and outgoing calls. Enter 2 from **Menu 24.9 - System Maintenance - Call Control** to bring up the following menu.

```

                                Menu 24.9.2 - Call History

    Phone Number      Dir      Rate      #call      Max      Min      Total
    1.
    2.
    3.
    4.
    5.
    6.
    7.
    8.
    9.
    10.

                                Enter Entry to Delete(0 to exit):
    
```

Figure 13-5 Call History

Table 13-2 Call History Fields

FIELD	DESCRIPTION
Phone Number	The PPPoE service names are shown here.
Dir	This shows whether the call was incoming or outgoing.
Rate	This is the transfer rate of the call.
#call	This is the number of calls made to or received from that telephone number.
Max	This is the length of time of the longest telephone call.
Min	This is the length of time of the shortest telephone call.
Total	This is the total length of time of all the telephone calls to/from that telephone number.
Enter "0" to update the screen or press [ESC] to return to the previous screen.	

13.3 Time and Date Setting

There is no Real Time Chip (RTC) in the Prestige, so there is a software mechanism to set the time manually or get the current time and date from an external server when you turn on your Prestige. Menu 24.10 allows you to update the time and date settings of your Prestige. The real time is then displayed in the Prestige error logs and firewall logs. If you do not choose a time service protocol that your timeserver will send when you turn on the Prestige, then you can enter the time manually but each time the system is booted, the time and date will be reset to 2000/01/01 00:00:00.

Select menu 24 in the main menu to open **Menu 24 - System Maintenance**, as shown next.

```
Menu 24 - System Maintenance

1. System Status
2. System Information and Console Port Speed
3. Log and Trace
4. Diagnostic
5. Backup Configuration
6. Restore Configuration
7. Upload Firmware
8. Command Interpreter Mode
9. Call Control
10. Time and Date Setting
11. Remote Management Setup

Enter Menu Selection Number:
```

Figure 13-6 Menu 24 — System Maintenance

Then enter 10 to go to **Menu 24.10 - System Maintenance - Time and Date Setting** to update the time and date settings of your Prestige as shown in the following screen.

```

Menu 24.10 - System Maintenance - Time and Date Setting

Use Time Server when Bootup= None
Time Server IP Address= N/A

Current Time:                00 : 00 : 00
New Time (hh:mm:ss):        11 : 23 : 16

Current Date:                2000 - 01 - 01
New Date (yyyy-mm-dd):      2000 - 01 - 01

Time Zone= GMT

Daylight Saving= No
Start Date (mm-dd):          01 - 01
End Date (mm_dd):           01 - 01

Press ENTER to Confirm or ESC to Cancel:
    
```

Figure 13-7 Menu 24.10 System Maintenance — Time and Date Setting

Table 13-3 Time and Date Setting Fields

FIELD	DESCRIPTION
Use Time Server when Bootup	<p>Enter the time service protocol that your time server sends when you turn on the Prestige. Not all time servers support all protocols, so you may have to check with your ISP/network administrator or use trial and error to find a protocol that works. The main differences between them are the format.</p> <p>Daytime (RFC 867) format is day/month/year/time zone of the server.</p> <p>Time (RFC-868) format displays a 4-byte integer giving the total number of seconds since 1970/1/1 at 0:0:0.</p> <p>NTP (RFC-1305) is similar to Time (RFC-868).</p> <p>None is the default value. Enter the time manually. Each time you turn on the Prestige, the time and date will be reset to 2000-1-1 0:0:0.</p>
Time Server IP Address	<p>Enter the IP address of your time server or its domain name (if your time server is using DNS). Check with your ISP/network administrator if you are unsure of this information.</p>
Current Time New Time	<p>This field displays an updated time only when you reenter this menu.</p> <p>Enter the new time in hour, minute and second format.</p>
Current Date New Date	<p>This field displays an updated date only when you reenter this menu.</p> <p>Enter the new date in year, month and day format.</p>

FIELD	DESCRIPTION
Time Zone	Press [SPACE BAR] to set the time difference between your time zone and Greenwich Mean Time (GMT).
Daylight Saving	Daylight Saving Time is a period from late spring to early fall when many countries set their clocks ahead of normal local time by one hour to give more daylight time in the evenings. If you use daylight savings time, then choose Yes .
Start Date	Enter the month and day that your daylight-savings time starts on if you selected Yes in the Daylight Saving field.
End Date	Enter the month and day that your daylight-savings time ends on if you selected Yes in the Daylight Saving field.
Once you have filled in this menu, press [ENTER] at the message "Press ENTER to Confirm or ESC to Cancel" to save your configuration, or press [ESC] to cancel.	

Time Update Frequency

The Prestige resets the time in three instances:

- i. On leaving menu 24.10 after making changes.
- ii. When the Prestige starts up and if there is a time server configured in menu 24.10.
- iii. 24-hour intervals after booting.

Chapter 14

Remote Management

This chapter covers remote management (SMT menu 24.11).

14.1 Telnet

The only way to configure your Prestige for remote management is through an SMT session using the console port. Once your Prestige is configured, you can use Telnet to configure it remotely as shown next.

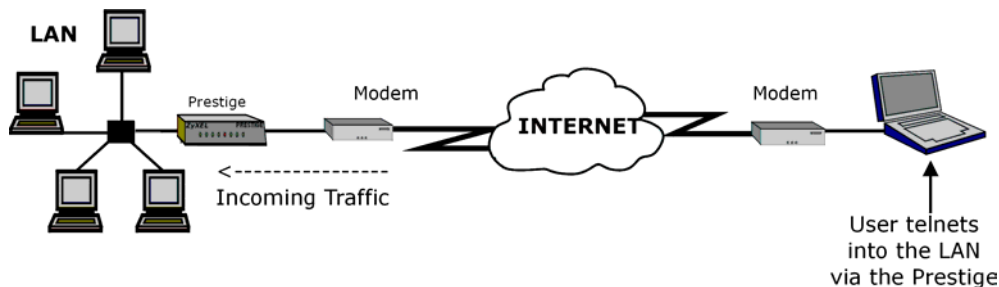


Figure 14-1 Telnet Configuration on a TCP/IP Network

14.2 FTP

You can upload and download Prestige firmware and configuration files using FTP. To use this feature, your computer must have an FTP client.

14.3 Web

You can use the Prestige's embedded web configurator for configuration and file management. See the *online help* for details.

14.4 DNS (Domain Name System)

DNS links names to IP addresses. When you access Web sites on the Internet, you can type the IP address of the site or the DNS name.

DNS servers on the Internet convert domain names to IP addresses. Your own Internet service provider may do this conversion or connect to a specific DNS server that does. When you type a domain name in a Web browser, a query is sent to the primary DNS server defined in your Web browser's configuration dialog box. The DNS server converts the name you specified to an IP address and returns this address to your system. From then on, the IP address is used in all subsequent communications.

DNS service port number (53) is not configurable on the Prestige.

14.5 SNMP (Simple Network Management Protocol)

Simple Network Management Protocol is a member of TCP/IP protocol suite that is used for exchanging management information between network devices. Your Prestige supports SNMP agent functionality, which allows a manager station to manage and monitor the Prestige through the network.

14.6 Remote Management Setup

Remote management setup is for managing Telnet, Web and FTP services. You can customize the service port, access interface, and the secured client IP address to enhance security and flexibility.


You may manage your Prestige from a remote location, via the Internet (**WAN only**), via the **LAN only**, **Both** (LAN & WAN) or neither (**Disable**).

If you enable remote management of a service, but have applied a filter to block the service, then you will not be able to remotely manage the service.

To disable remote management of a service, select **Disable** in the corresponding **Server Access** field.

Enter 11 from menu 24 to bring up **Menu 24.11 – Remote Management Control**.

If you just wish to block certain users from using these services, then use filtering

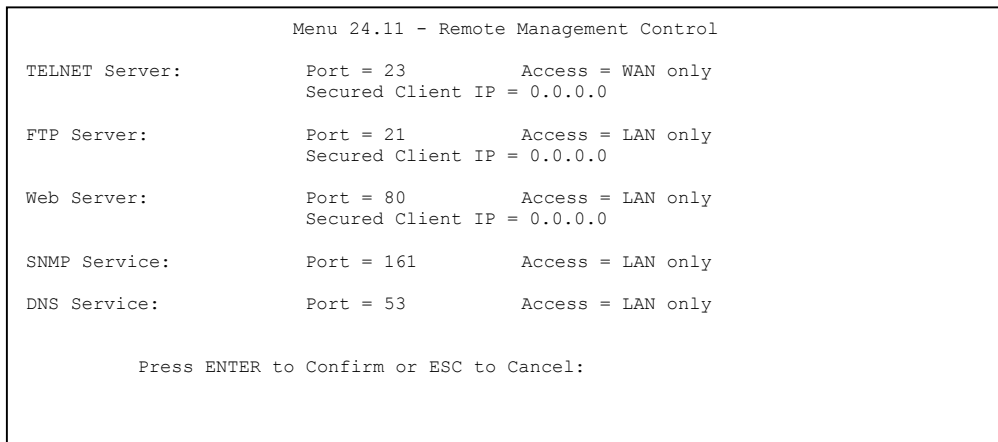

- please see menu 21.1.

Figure 14-2 Menu 24.11 – Remote Management Control

Table 14-1 Menu 24.11 – Remote Management Control

FIELD	DESCRIPTION	EXAMPLE
TELNET Server FTP Server Web Server SNMP Server DNS Server	Each of these read-only labels denotes a service that you may use to remotely manage the Prestige.	
Server Port	This field shows the port number for the remote management service. You may change the port number for a service if needed, but you must use the same port number to use that service for remote management.	53
Server Access	Select the access interface (if any) by pressing [SPACE BAR], then [ENTER] to choose from: LAN only , WAN only , ALL or Disable .	LAN only
Secured Client IP	The default 0.0.0.0 allows any client to use this service to remotely manage the Prestige. Enter an IP address to restrict access to a client with a matching IP address.	0.0.0.0

FIELD	DESCRIPTION	EXAMPLE
Once you have filled in this menu, press [ENTER] at the message "Press ENTER to Confirm or ESC to Cancel" to save your configuration, or press [ESC] to cancel.		

14.6.1 Remote Management Limitations

Remote management over LAN or WAN will not work when:

1. A filter in menu 3.1 (LAN) or in menu 11.5 (WAN) is applied to block a service.
2. You have disabled that service in menu 24.11.
3. The IP address in the **Secured Client IP** field (menu 24.11) does not match the client IP address. If it does not match, the Prestige will disconnect the session immediately.
4. There is an SMT console session running.
5. There is already another remote management session of the same type running. You may only have one remote management session of the same type running at one time.

14.7 Remote Management and NAT

When NAT is enabled:

- Use the Prestige's WAN IP address when configuring from the WAN.
- Use the Prestige's LAN IP address when configuring from the LAN.

14.8 System Timeout

There is a system timeout of five minutes (300 seconds) for Telnet/web/FTP connections. Your Prestige will automatically log you out if you do nothing in this timeout period, except when it is continuously updating the status in menu 24.1 or when `sys stdio` has been changed on the command line.

Chapter 15

Call Scheduling

This chapter shows you how to setup call time periods for remote nodes.

15.1 Introduction

The call scheduling feature allows the Prestige to manage a remote node and dictate when a remote node should be called and for how long. This feature is similar to the scheduler in a video-cassette recorder (you can record programs at times that you specify). You can apply up to four schedule sets in **Menu 11.1 - Remote Node Profile**.

15.2 Schedule Setup

From the main menu, enter 26 to access **Menu 26 - Schedule Setup** as shown next.

```

Menu 26 - Schedule Setup

Schedule          Schedule
Set #            Set #
-----          -----
1                7
2                8
3                9
4                10
5                11
6                12

Enter Schedule Set Number to Configure=

Edit Name=

Press ENTER to Confirm or ESC to Cancel:
    
```

Figure 15-1 Schedule Setup

Lower numbered sets take precedence over higher numbered sets thereby avoiding scheduling conflicts. For example, if sets 1, 2, 3 and 4 in are applied in the remote node then set 1 will take precedence over set 2, 3 and 4 as the Prestige, by default, applies the lowest numbered set first. Set 2 will take precedence over set 3 and 4, and so on.

You can design up to 12 schedule sets but you can only apply up to four schedule sets for a remote node.

To delete a schedule set, enter the set number and press the [SPACE BAR] in the Edit Name field.

15.3 Schedule Set Setup

To setup a schedule set, select the schedule set you want to setup from menu 26 (1-12), press [ENTER] and then type in a name for the set. Press [ENTER] to display **Menu 26.1 - Schedule Set Setup** as shown next.

```
Menu 26.1 - Schedule Set Setup

Active= Yes
Start Date(yyyy/mm/dd) = 2000 - 01 - 01
How Often= Once
Once:
  Date(yyyy/mm/dd)= 2000 - 01 - 01
Weekdays:
  Sunday= N/A
  Monday= N/A
  Tuesday= N/A
  Wednesday= N/A
  Thursday= N/A
  Friday= N/A
  Saturday= N/A
Start Time (hh:mm)= 00 : 00
Duration (hh:mm)= 00 : 00
Action= Forced On

Press ENTER to Confirm or ESC to Cancel:
```

Figure 15-2 Schedule Set Setup

If a connection has been already established, your Prestige will not drop it. Once the connection is dropped manually or it times out, then that remote node can't be triggered again until the time period configured in the **Duration** field expires.

Table 15-1 Schedule Set Setup Fields

FIELD	DESCRIPTION	EXAMPLE
Active	Choose Yes to activate and No to deactivate the schedule set.	Yes (default)
Start Date	Enter the start date that you wish the set to take effect in year - month-day format. Valid dates are from the present to February 5, 2036.	2000 – 07 – 01
How Often	Should this schedule set recur weekly or be used just once? Choose Once or Weekly . Both these options are mutually exclusive. If Once is selected, then all weekday settings are N/A . When Once is selected, the schedule rule deletes automatically after the scheduled time elapses.	Once (default)
Once: Date	If you select Once in the How Often field above, enter the date the set should activate in year-month-day format. If you select Weekly in the How Often field above, this field is N/A .	2001 – 01 – 01
Weekday: Day	If you select Weekly in the How Often field above, then choose the day(s) the set should activate (and recur). Individual Day parameters are active when their fields read Yes and inactive when their fields read No or N/A .	N/A (default)
Start Time	Enter the start time that you wish the schedule set to take effect in hour : minute format.	12 : 00
Duration	Enter the maximum duration allowed in hour : minute format for this scheduled connection.	10 : 00
Action	Choose an action. Choices are: Forced On means that the connection is maintained whether or not there is a demand call on the line and will persist for the time period specified in the Duration field. Forced Down means that the connection is blocked whether or not there is a demand call on the line. Enable Dial-On-Demand means that this schedule permits a demand call on the line. Disable Dial-On-Demand means that this schedule prevents a demand call on the line.	Forced On

15.4 Applying Schedule Sets to Remote Nodes

Once your schedule sets are configured, you must apply them to the desired remote node(s). Enter 11 from the main menu and, using the [SPACE BAR], select **PPPoE** or **PPTP** in the **Encapsulation** field. Enter your target remote node index number(s) in the **Schedules** field, as shown next.

```
Menu 11.1 - Remote Node Profile

Rem Node Name= ChangeMe           Route= IP
Active= Yes
Encapsulation= PPPoE             Edit IP= No
Service Type= Standard          Telco Option:
Service Name=                   Allocated Budget (min)= 0
Outgoing:                       Period (hr)= 0
  Rem Login=                     Schedules= 1,3,4
  Rem Password= *****         Nailed-Up Connection= No
  Authen= CHAP/PAP
PPTP:                            Session Options:
  My IP Addr=                   Edit Filter Sets= No
  Server IP Addr=              Idle Timeout(sec)= 300
  Connection ID/Name=

Press ENTER to Confirm or ESC to Cancel:
```

Figure 15-3 Applying Schedule Sets to a Remote Node Example (PPPoE Encapsulation)

You can apply up to four schedule sets, separated by commas, for one remote node. Enter the schedule set numbers for specific remote nodes in the **Schedules** field. In the examples, shown previously and next, schedule sets 1, 3 and 4 are applied.

```
Menu 11.1 - Remote Node Profile

Rem Node Name= ChangeMe          Route= IP
Active= Yes

Encapsulation= PPTP              Edit IP= No
Service Type= Standard          Telco Option:
Service Name=                   Allocated Budget(min)= 0
Outgoing:                       Period (hr)= 0
  Rem Login=                     Schedules= 1,3,4
  Rem Password= *****         Nailed-Up Connection= 0
  Athen= CHAP/PAP

PPTP:                            Session Options:
  My IP Addr=                   Edit Filter Sets= No
  Server IP Addr=              Idle Timeout(sec)= 100
  Connection ID/Name=
  Authen= CHAP/PAP

Press ENTER to Confirm or ESC to Cancel:
```

Figure 15-4 Applying Schedule Sets to a Remote Node Example (PPTP Encapsulation)

PART IV:

Troubleshooting and Additional Information

This section provides information about solving common problems, some Appendices, as well as a Glossary and Index.

Chapter 16

Troubleshooting

This chapter covers the potential problems and possible remedies. After each problem description, some instructions are provided to help you to diagnose and to solve the problem. See the included CD for further information.

16.1 Problems Starting Up the Prestige

Table 16-1 Troubleshooting the Start-Up of your Prestige

PROBLEM	CORRECTIVE ACTION	
None of the LEDs are on when you power on the Prestige	Check the connection between the AC adapter and the Prestige. If the error persists, you may have a hardware problem. In this case, you should contact your vendor.	
Cannot access the Prestige via the console port.	1. Check to see if the Prestige is connected to your computer's console port.	
	2. Check to see if the communications program is configured correctly. The communications software should be configured as follows:	VT100 terminal emulation
		9600 bps
	No parity, 8 data bits, 1 stop bit, data flow set to none.	

16.2 Problems with the LAN Interface

Table 16-2 Troubleshooting the LAN Interface

PROBLEM	CORRECTIVE ACTION
Cannot access the Prestige from the LAN.	Check your Ethernet cable type and connections. Refer to the <i>Rear Panel and Connections</i> section for LAN connection instructions.

PROBLEM	CORRECTIVE ACTION
Cannot ping any computer on the LAN.	Check the 10M/100M LEDs on the front panel. One of these LEDs should be on. If they are both off, check the cables between your Prestige and hub or the station.
	Verify that the IP addresses and subnet masks of the Prestige and the computers on the LAN are on the same subnet.

16.3 Problems with the WAN Interface

Table 16-3 Troubleshooting the WAN interface

PROBLEM	CORRECTIVE ACTION
Cannot get a WAN IP address from the ISP.	<p>The WAN IP address is provided when the ISP recognizes the user as an authorized user after verifying the MAC address or Host Name or User ID.</p> <p>Find out the verification method used by your ISP.</p>
	<p>If the ISP checks the LAN MAC address, tell the ISP the WAN MAC address of the Prestige. The WAN MAC can be obtained from menu 24.1.</p> <p>In case the ISP does not allow you to use a new MAC, you can clone the MAC from the LAN as the WAN MAC and send it to the ISP using Menu 2 - WAN Setup.</p>
	<p>If the ISP checks the Host Name, enter host name in the system field in Menu 1 - General Setup when you connect the Prestige to a cable/xDSL modem.</p>
	<p>If the ISP checks the User ID, make sure that you have entered the correct Service Type, User Name and Password in Menu 4 - Internet Access Setup.</p>
Cannot connect to a remote node or ISP.	Check menu 24.1 to verify the line status. Contact your service provider if your line remains down.

16.4 Problems with Internet Access

Table 16-4 Internet Access

PROBLEM	CORRECTIVE ACTION
Cannot access the Internet.	Make sure your cable/xDSL modem is properly connected to the Prestige. Check with the manufacturer of your Cable/xDSL modem about the cable requirement because some devices require a crossover cable and others a straight-through cable.
	Verify your settings in menu 3.2 and menu 4.

Appendix A

PPPoE

PPPoE in Action

An ADSL modem bridges a PPP session over Ethernet (PPP over Ethernet, RFC 2516) from your PC to an ATM PVC (Permanent Virtual Circuit) which connects to a xDSL Access Concentrator where the PPP session terminates (see the next figure). One PVC can support any number of PPP sessions from your LAN. PPPoE provides access control and billing functionality in a manner similar to dial-up services using PPP.

Benefits of PPPoE

PPPoE offers the following benefits:

1. It provides you with a familiar dial-up networking (DUN) user interface.
2. It lessens the burden on the carriers of provisioning virtual circuits all the way to the ISP on multiple switches for thousands of users. For GSTN (PSTN & ISDN), the switching fabric is already in place.
3. It allows the ISP to use the existing dial-up model to authenticate and (optionally) to provide differentiated services.

Traditional Dial-up Scenario

The following diagram depicts a typical hardware configuration where the PCs use traditional dial-up networking.

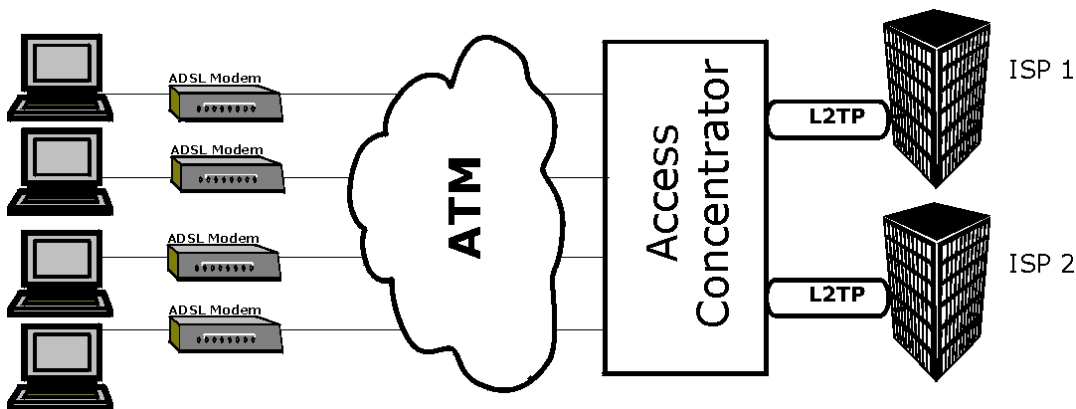


Diagram 1 Single-PC per Modem Hardware Configuration

How PPPoE Works

The PPPoE driver makes the Ethernet appear as a serial link to the PC and the PC runs PPP over it, while the modem bridges the Ethernet frames to the Access Concentrator (AC). Between the AC and an ISP, the AC is acting as a L2TP (Layer 2 Tunneling Protocol) LAC (L2TP Access Concentrator) and tunnels the PPP frames to the ISP. The L2TP tunnel is capable of carrying multiple PPP sessions.

With PPPoE, the VC (Virtual Circuit) is equivalent to the dial-up connection and is between the modem and the AC, as opposed to all the way to the ISP. However, the PPP negotiation is between the PC and the ISP.

The Prestige as a PPPoE Client

When using the Prestige as a PPPoE client, the PCs on the LAN see only Ethernet and are not aware of PPPoE. This alleviates the administrator from having to manage the PPPoE clients on the individual PCs.

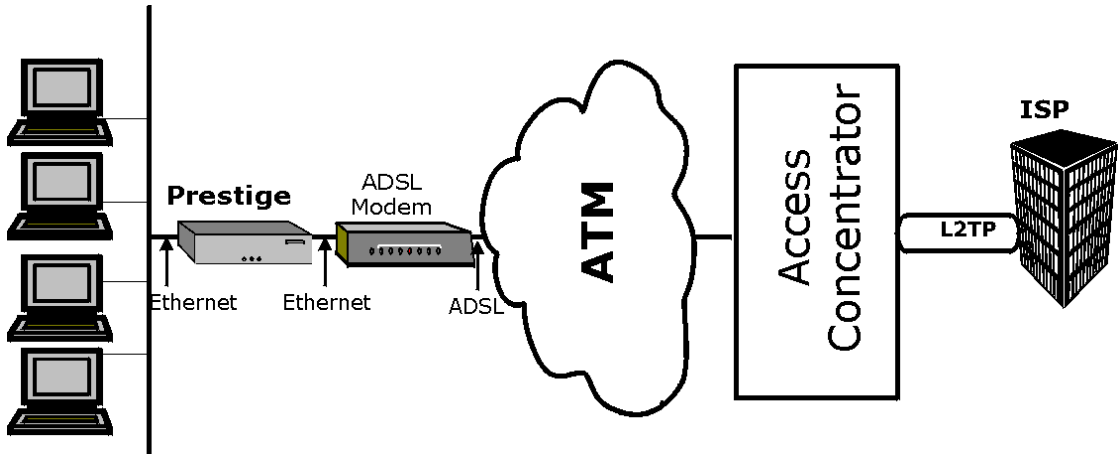


Diagram 2 Prestige as a PPPoE Client

Appendix B

PPTP

What is PPTP?

PPTP (Point-to-Point Tunneling Protocol) is a Microsoft proprietary protocol (RFC 2637 for PPTP is informational only) to tunnel PPP frames.

How can we transport PPP frames from a PC to a broadband modem over Ethernet?

A solution is to build PPTP into the ANT (ADSL Network Termination) where PPTP is used only over the short haul between the PC and the modem over Ethernet. For the rest of the connection, the PPP frames are transported with PPP over AAL5 (RFC 2364). The PPP connection, however, is still between the PC and the ISP. The various connections in this setup are depicted in the following diagram. The drawback of this solution is that it requires one separate ATM VC per destination.

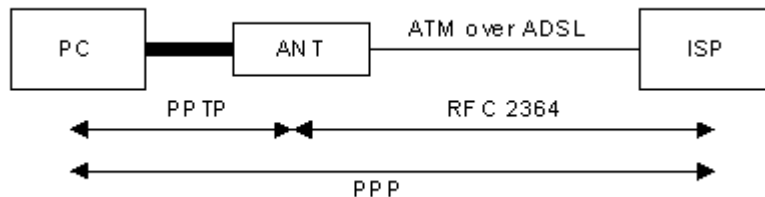


Diagram 3 Transport PPP frames over Ethernet

PPTP and the Prestige

When the Prestige is deployed in such a setup, it appears as a PC to the ANT (ADSL Network Termination). In Windows VPN or PPTP Pass-Through feature, the PPTP tunneling is created from Windows 95, 98 and NT clients to an NT server in a remote location. The pass-through feature allows users on the network to access a different remote server using the Prestige's Internet connection. In NAT mode, the Prestige is able to

pass the PPTP packets to the internal PPTP server (i.e. NT server) behind the NAT. Users need to forward PPTP packets to port 1723 by configuring the server in **Menu 15.2 - Server Set Setup**. In the case above as the PPTP connection is initialized by the remote PPTP Client, the user must configure the PPTP clients. The Prestige initializes the PPTP connection hence, there is no need to configure the remote PPTP clients.

PPTP Protocol Overview

PPTP is very similar to L2TP, since L2TP is based on both PPTP and L2F (Cisco's Layer 2 Forwarding). Conceptually, there are three parties in PPTP, namely the PNS (PPTP Network Server), the PAC (PPTP Access Concentrator) and the PPTP user. The PNS is the box that hosts both the PPP and the PPTP stacks and forms one end of the PPTP tunnel. The PAC is the box that dials/answers the phone calls and relays the PPP frames to the PNS. The PPTP user is not necessarily a PPP client (can be a PPP server too). Both the PNS and the PAC must have IP connectivity; however, the PAC must in addition have dial-up capability. The phone call is between the user and the PAC and the PAC tunnels the PPP frames to the PNS. The PPTP user is unaware of the tunnel between the PAC and the PNS.




Diagram 4 PPTP Protocol Overview

Microsoft includes PPTP as a part of the Windows OS. In Microsoft's implementation, the PC, and hence the Prestige, is the PNS that requests the PAC (the ANT) to place an outgoing call over AAL5 to an RFC 2364 server.

Control & PPP connections

Each PPTP session has distinct control connection and PPP data connection.

Call Connection

The control connection runs over TCP. Similar to L2TP, a tunnel control connection is first established before call control messages can be exchanged. Please note that a tunnel control connection supports multiple call sessions.

The following diagram depicts the message exchange of a successful call setup between a PC and an ANT.

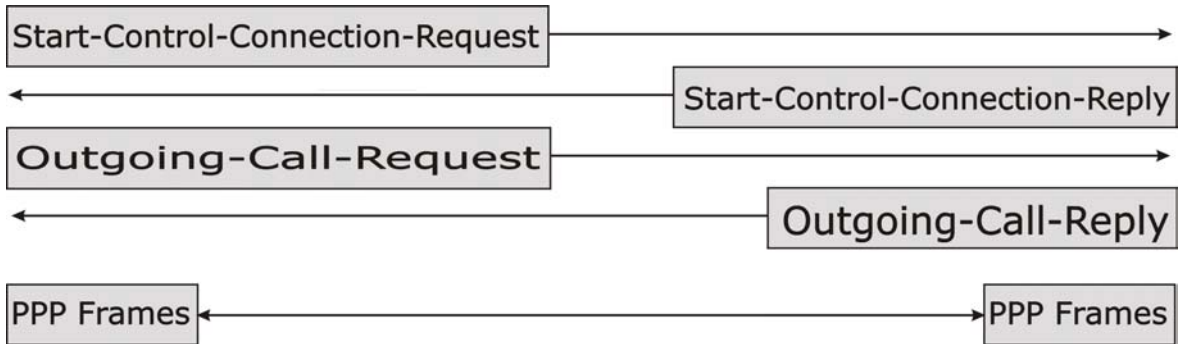


Diagram 5 Example Message Exchange between PC and an ANT

PPP Data Connection

The PPP frames are tunneled between the PNS and PAC over GRE (General Routing Encapsulation, RFC 1701, 1702). The individual calls within a tunnel are distinguished using the Call ID field in the GRE header.

Appendix D

Boot Commands

The BootModule AT commands execute from within the router's bootup software, when debug mode is selected before the main router firmware (ZyNOS) is started. When you start up your Prestige, you are given a choice to go into debug mode by pressing a key at the prompt shown in the following screen. In debug mode you have access to a series of boot module commands, for example ATUR (for uploading firmware) and ATLC (for uploading the configuration file). These are already discussed in the *Transferring Files* chapter.

```
Bootbase Version: V2.02 | 10/11/2000 13:58:03
RAM: Size = 8192 Kbytes
DRAM Post: Testing: 8192K OK
FLASH: Intel 16M

ZyNOS Version: V324\wa0b05 | 3/5/2001 18:00:34

Press any key to enter debug mode within 3 seconds.
.....
```

Diagram 6 Option to Enter Debug Mode

Enter ATHE to view all available Prestige boot module commands as shown in the next screen. ATBAx allows you to change the console port speed. The x denotes the number preceding the colon to give the console port speed following the colon in the list of numbers that follows; e.g., ATBA3 will give a console port speed of 9.6 Kbps. ATSE displays the seed that is used to generate a password to turn on the debug flag in the firmware. The ATSH command shows product related information such as boot module version, vendor name, product model, RAS code revision, etc. ATGO allows you to continue booting the system. Most other commands aid in advanced troubleshooting and should only be used by qualified engineers.

```
===== Debug Command Listing =====
AT      just answer OK
ATHE    print help
ATBAx   change baudrate. 1:38.4k, 2:19.2k, 3:9.6k 4:57.6k 5:115.2k
ATENx,(y) set BootExtension Debug Flag (y=password)
ATSE    show the seed of password generator
ATTI(h,m,s) change system time to hour:min:sec or show current time
ATDA(y,m,d) change system date to year/month/day or show current date
ATDS    dump RAS stack
ATDT    dump Boot Module Common Area
ATDUx,y dump memory contents from address x for length y
ATRBx   display the 8-bit value of address x
ATRWx   display the 16-bit value of address x
ATRLx   display the 32-bit value of address x
ATGO(x) run program at addr x or boot router
ATGR    boot router
ATGT    run Hardware Test Program
ATRTw,x,y,(z) RAM test level w, from address x to y (z iterations)
ATSH    dump manufacturer related data in ROM
ATTD    download router configuration to PC via XMODEM
ATUR    upload router firmware to flash ROM
ATLC    upload router configuration file to flash ROM
ATXSx   xmodem select: x=0: CRC mode(default); x=1: checksum mode
ATSR    system reboot
```

Diagram 7 Boot Module Commands

Appendix E

NetBIOS Filter Commands

The following describes the NetBIOS packet filter commands.

Introduction

NetBIOS (Network Basic Input/Output System) are TCP or UDP broadcast packets that enable a computer to connect to and communicate with a LAN.

For some dial-up services such as PPPoE or PPTP, NetBIOS packets cause unwanted calls.

You can configure NetBIOS filters to:

- Block or forward NetBIOS packets from being sent from the LAN to the WAN.
- Block or forward NetBIOS packets from being sent from the WAN to the LAN.
- Allow or deny NetBIOS packets to be sent through VPN connections.
- Block or forward NetBIOS packets from initiating calls.

Display NetBIOS Filter Settings

Syntax: `sys filter netbios disp`

This command displays the current NetBIOS filter settings.

```
===== NetBIOS Filter Status =====  
LAN to WAN:      Forward  
WAN to LAN:      Forward  
IPSec Packets:   Forward  
Trigger Dial:    Disabled
```

Diagram 8 NetBIOS Display Filter Settings Command

The filter types and their default settings are as follows.

NAME	DESCRIPTION	EXAMPLE
LAN to WAN	This field displays whether NetBIOS packets are blocked or forwarded from the LAN to the WAN.	Block
WAN to the LAN	This field displays whether NetBIOS packets are blocked or forwarded from the WAN to the LAN.	Block
IPSec Packets	This field displays whether NetBIOS packets sent through a VPN connection are blocked or forwarded.	Forward
Trigger dial	This field displays whether NetBIOS packets are allowed to initiate calls. Disabled means that NetBIOS packets are blocked from initiating calls.	Disabled

NetBIOS Filter Configuration

Syntax: `sys filter netbios config <type> <on|off>`

where

`<type>` = Identify which NetBIOS filter (numbered 0-3) to configure.

0 = LAN to WAN

1 = WAN to the LAN

2 = IPSec Packets

3 = Trigger dial

`<on|off>` = For types 0 and 1, use `on` to enable the filter and block NetBIOS packets. Use `off` to disable the filter and forward NetBIOS packets.

For type 2, use `on` to block NetBIOS packets from being sent through a VPN connection. Use `off` to allow NetBIOS packets to be sent through a VPN connection.

For type 3, use `on` to allow NetBIOS packets to initiate calls. Use `off` to block NetBIOS packets from initiating calls.

Example commands

Command: `sys filter netbios config 0 on`

This command blocks LAN to WAN NetBIOS packets

Command: `sys filter netbios config 1 off`

This command forwards WAN to the LAN NetBIOS packets

Command: `sys filter netbios config 2 on`

This command blocks IPSec NetBIOS packets

Command: `sys filter netbios config 3 off`

This command stops NetBIOS commands from initiating calls.

Appendix A

Log Descriptions

Configure centralized logs using the embedded web configurator; see the online help for details.

This appendix describes some of the log messages.

Chart 1 System Error Logs

LOG MESSAGE	DESCRIPTION
%s exceeds the max. number of session per host!	This attempt to create a NAT session exceeds the maximum number of NAT session table entries allowed to be created per host.

Chart 2 System Maintenance Logs

LOG MESSAGE	DESCRIPTION
Time calibration is successful	The router has adjusted its time based on information from the time server.
Time calibration failed	The router failed to get information from the time server.
DHCP client gets %s	A DHCP client got a new IP address from the DHCP server.
DHCP client IP expired	A DHCP client's IP address has expired.
DHCP server assigns %s	The DHCP server assigned an IP address to a client.
SMT Login Successfully	Someone has logged on to the router's SMT interface.
SMT Login Fail	Someone has failed to log on to the router's SMT interface.
WEB Login Successfully	Someone has logged on to the router's web configurator interface.
WEB Login Fail	Someone has failed to log on to the router's web configurator interface.

Chart 2 System Maintenance Logs

TELNET Login Successfully	Someone has logged on to the router via telnet.
TELNET Login Fail	Someone has failed to log on to the router via telnet.
FTP Login Successfully	Someone has logged on to the router via ftp.
FTP Login Fail	Someone has failed to log on to the router via ftp.
NAT Session Table is Full!	The maximum number of NAT session table entries has been exceeded and the table is full.
!! Phase 1 ID type mismatch	The ID type of an incoming packet does not match the local's peer ID type.
!! Phase 1 ID content mismatch	The ID content of an incoming packet does not match the local's peer ID content.
!! No known phase 1 ID type found	The ID type of an incoming packet does not match any known ID type.

Chart 3 UPnP Logs

LOG MESSAGE	DESCRIPTION
UPnP pass through Firewall	UPnP packets can pass through the firewall.

Chart 4 Content Filtering Logs

CATEGORY	LOG MESSAGE	DESCRIPTION
URLFOR	IP/Domain Name	The Prestige allows access to this IP address or domain name and forwarded traffic addressed to the IP address or domain name.
URLBLK	IP/Domain Name	The Prestige blocked access to this IP address or domain name due to a forbidden keyword. All web traffic is disabled except for trusted domains, untrusted domains, or the cybernot list.

Chart 4 Content Filtering Logs

JAVBLK	IP/Domain Name	The Prestige blocked access to this IP address or domain name because of a forbidden service such as: ActiveX, a Java applet, a cookie, or a proxy.
--------	----------------	---

Chart 5 ICMP Type and Code Explanations

TYPE	CODE	DESCRIPTION
0		Echo Reply
	0	Echo reply message
3		Destination Unreachable
	0	Net unreachable
	1	Host unreachable
	2	Protocol unreachable
	3	Port unreachable
	4	A packet that needed fragmentation was dropped because it was set to Don't Fragment (DF)
	5	Source route failed
4		Source Quench
	0	A gateway may discard internet datagrams if it does not have the buffer space needed to queue the datagrams for output to the next network on the route to the destination network.
5		Redirect
	0	Redirect datagrams for the Network
	1	Redirect datagrams for the Host
	2	Redirect datagrams for the Type of Service and Network
	3	Redirect datagrams for the Type of Service and Host
8		Echo
	0	Echo message

Chart 5 ICMP Type and Code Explanations

TYPE	CODE	DESCRIPTION
11		Time Exceeded
	0	Time to live exceeded in transit
	1	Fragment reassembly time exceeded
12		Parameter Problem
	0	Pointer indicates the error
13		Timestamp
	0	Timestamp request message
14		Timestamp Reply
	0	Timestamp reply message
15		Information Request
	0	Information request message
16		Information Reply
	0	Information reply message

Appendix F

Power Adapter Specifications

NORTH AMERICAN PLUG STANDARDS		
AC Power Adapter Model	MW48-1201200	AD48-1201200DUY
Input Power	AC120Volts/60Hz/22W	AC120Volts/60Hz/0.25A
Output Power	DC12Volts/1.2A	DC12Volts/1.2A
Power Consumption	9 W	9 W
Safety Standards	UL, CUL (UL1314, CSA C22.2 No. 233-M91)	
EUROPEAN PLUG STANDARDS		
AC Power Adapter Model	AD-1201200DV	JAD-121200E
Input Power	AC230Volts/50Hz/0.2A	AC230Volts/50Hz
Output Power	DC12Volts/1.2A	DC12Volts/1.2A
Power Consumption	9 W	9 W
Safety Standards	TUV, CE (EN 60950)	
	UNITED KINGDOM PLUG STANDARDS	JAPANESE PLUG STANDARDS
AC Power Adapter Model	AD-1201200DK	JOD-48-1124
Input Power	AC230Volts/50Hz/0.2A	AC100Volts/ 50/60Hz/ 27VA
Output Power	DC12Volts/1.2A	DC12Volts/1.2A
Power Consumption	9 W	9 W
Safety Standards	TUV, CE (EN 60950, BS7002)	T-Mark (Japan Dentori)
AUSTRALIAN AND NEW ZEALAND PLUG STANDARDS		
AC Power Adapter Model	AD-1201200DS or AD-121200DS	
Input Power	AC240Volts/50Hz/0.2A	
Output Power	DC12Volts/1.2A	
Power Consumption	9 W	
Safety Standards	NATA (AS 3260)	

Appendix F

Hardware Specifications

SPECIFICATIONS	
Power Specification	I/P AC 120V / 60Hz ; O/P DC 12V 1200 mA
MTBF	(Mean Time Between Failure) 100000 hrs
Operation Temperature	0° C ~ 40 degrees Celsius
Ethernet Specification for WAN	10Mbit Half / Full Manual Setting
Ethernet Specification for LAN	10/100 Mbit Half / Full Auto-negotiation

Cable Pin Assignments

In a serial communications connection, generally a computer is DTE (Data Terminal Equipment) and a modem is DCE (Data Circuit-terminating Equipment). The Prestige is DCE when you connect a computer to the console port.

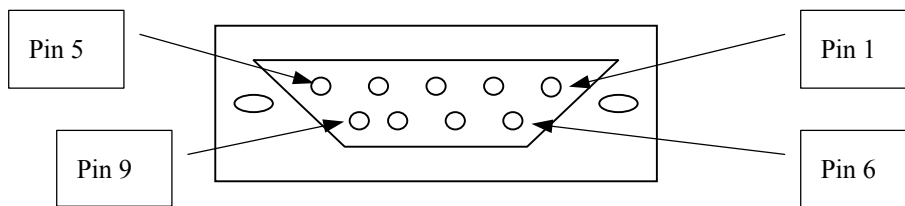


Diagram 9 Console Port Pin Layouts ¹

Chart 6 CONSOLE Port RS-232 (Female) DB-9F Pin Assignments

Pin 1 = NON	Pin 4 = DCE –DSR	Pin 7 = DCE –CTS
Pin 2 = DCE-TXD	Pin 5 = GND	Pin 8 = DCE –RTS
Pin 3 = DCE –RXD	Pin 6 = DCE –DTR	PIN 9 = NON

¹ Products without flow control only use pins 2,3 and 5.

Index

- 1
- 10/100 MB Auto-negotiation 1-1
- A
- Applying Schedule Sets to Remote Nodes..... 15-4
- AT command 12-2
- Authentication..... 5-6
- auto-negotiation 1-1
- B
- backup..... 12-2
- Boot commandsG
- Broadband Sharing Gateway..... xix, 1-1
- Budget Management 13-3
- C
- Cable Modem..... 2-3
- Call Control..... 13-2
- Call History..... 13-4
- Call Scheduling..... 15-1
- maximum number of schedule sets..... 15-1
- PPPoE 15-4
- precedence 15-2
- precedence example..... See precedence
- Call-Triggerring Packet..... 11-10
- CDR 11-8
- CHAP..... 5-6
- Command Interpreter Mode..... 13-1
- Community 9-3
- Conditions that prevent TFTP and FTP from
 working over WAN 12-4
- Console Port 2-3, 11-3, 11-4, 11-5, Q
- Copyright.....ii
- Customer Support.....vii
- D
- DDNS
- Configuration..... 2-11
- DDNS Type 2-12
- DHCP..... 1-2, 11-12
- DHCP (Dynamic Host Configuration Protocol) 1-
 2, 3-1
- Diagnostic..... 11-11
- DNS 3-2, 3-7
- Domain Name..... 3-2, 4-14, 11-3, 11-5
- Dynamic DNS..... 2-10, 2-11
- DYNDNS Wildcard..... 2-10
- E
- EMAIL..... 2-12
- E-mail Address 2-12
- Enable Wildcard 2-13
- Encapsulation
- PPP over Ethernet..... A
- Error Log 11-6
- Ethernet Encapsulation .. 3-10, 4-13, 5-1, 5-2, 5-4,
 5-7, 5-12
- F
- Factory Default 2-14
- Fail Tolerance 10-5
- FCC..... iii

Filename Conventions	12-1	Initial Screen.....	2-5
Filter	2-15, 5-11, 7-1	Installation Requirements	2-4
About	7-1	Internet access	3-1
Applying	7-18	Internet Access Setup	3-10, 3-11, 4-6, 16-2
Configuring	7-4	Internet Assigned Numbers Authority..	See IANA
Filter log	11-8	Internet Test Setup.....	3-14
Generic Filter Rule	7-12	IP address	3-3, 3-7
Structure	7-2	IP Address Assignment	5-8, 5-10
Filter Types and NAT	7-17	IP Alias	1-3, 3-5
Filters		IP Alias Setup.....	3-8
Executing a Filter Rule.....	7-2	IP Multicast	1-2, 3-4
Logic Flow of an IP Filter	7-10	Internet Group Management Protocol (IGMP)	
Flow Control.....	2-4	1-2
Front Panel LEDs	2-1	IP Network Number	3-2
FTP	14-4	IP Pool	3-2
Restrictions.....	14-4	IP Static Route.....	6-1, 6-2, 6-3
FTP File Transfer.....	12-12	L	
FTP Restrictions	12-4	LAN Setup.....	2-15, 3-6
FTP Server.....	1-3, 4-22	log.....	11-6
G		Log Facility	11-8
General Setup	2-9	M	
H		MAC Address.....	2-14, 16-2
Hidden Menus.....	2-6	Main Menu	2-7
Host.....	2-12	Management Information Base (MIB)	9-2
How PPPoE Works.....	B	Metric	5-8, 5-10, 6-3, 10-1
HTTP	4-14	My WAN Address.....	5-10
HyperTerminal program	12-6, 12-10	N	
I		nailed-up connection	5-5
IANA	3-3	NAT.....	5-8, 5-10, 7-17
idle timeout.....	5-5	Application.....	4-3
IGMP (Internet Group Multicast Protocol).....	3-4	Applying NAT in the SMT Menus.....	4-6

Configuring.....	4-8	R	
Definitions	4-1	Read Me First	xix
Examples	4-18	Rear Panel.....	2-2
How NAT Works.....	4-2	Related Documentation	xix
Mapping Types	4-4	Remote Management	14-1
Non NAT Friendly Application Programs 4-24, 4-25		Remote Management Limitations.....	14-4
Ordering Rules.....	4-11	Remote Management Setup	14-2
What NAT does	4-2	Remote Node	5-1
Network Address Translation (NAT).....	1-2, 4-1	Remote Node Setup.....	2-7
O		Remote Node Filter.....	5-11
Offline.....	2-13	Required fields.....	2-6
Online Registration	vi	Resetting the Prestige	2-9
P		Restore Configuration.....	12-8
Packet Triggered	11-8	RIP	3-4, 3-8, 5-8, 5-10
Packing List Card.....	xix	RoadRunner Support	1-3
PAP	5-6	RR-Manager	1-5, 3-11, 5-2
Password	2-5, 2-8, 9-3	RR-Telstra	3-11, 5-2
Ping	11-13	RR-Toshiba.....	1-5, 3-11, 5-2
Power Adapter	2-4	S	
Power Adapter Specifications	P	Schedule Set Setup	15-2
PPP log.....	11-8	Schedule Sets	
PPPoE Encapsulation. 3-10, 3-13, 5-1, 5-5, 5-6, 5- 11, 5-12		Duration.....	15-2
PPTP and the Prestige	D	Schedule Setup.....	15-1
PPTP Encapsulation.....	3-12, 5-1, 5-3, 5-9	Server3-2, 3-7, 3-11, 4-5, 4-8, 4-10, 4-13, 4-14, 4- 15, 4-20, 4-21, 5-2, 5-3, 13-6	
PPTP Protocol Overview	E	Service	vi
PPTP, What is it?	D	Service Type	3-11, 5-2, 16-2
Prestige as a PPPoE Client.....	C	setup a schedule	15-2
Private	3-3, 3-4, 5-8, 5-10, 6-3	SMT	2-6
Private IP Addresses	3-3	SNMP	
		Community.....	9-4

Configuration.....	9-3	Restrictions.....	14-4
Get.....	9-3	TFTP and FTP over WAN Will Not Work	
Manager.....	9-2	When.....	12-4
MIBs.....	9-3	TFTP File Transfer.....	12-14
Trap.....	9-3	TFTP Restrictions.....	12-4
Trusted Host.....	9-4	time and date setting.....	1-3
SNMP (Simple Network Management Protocol)		Time and Date Setting.....	13-5, 13-6
.....	1-2	Time Zone.....	13-7
Standard.....	3-11, 5-2	Timeout.....	3-13, 3-14, 5-7
SUA (Single User Account).....	See NAT	Trace.....	11-6
Subnet mask.....	3-7	Trigger Port Forwarding	
Subnet Mask.....	3-2, 3-3, 3-11, 5-8, 5-10, 6-3	Process.....	4-16
Supporting Disk.....	xix	Process Example.....	4-16
Syslog.....	See UNIX Syslog	Troubleshooting.....	16-1
Syslog IP Address.....	11-8	Internet Access.....	16-3
System Information.....	11-1, 11-3, 11-4	LAN Interface.....	16-1
System Maintenance.....	11-1, 11-2, 11-4, 11-5, 11-6,	WAN Interface.....	16-2
11-7, 11-8, 11-12, 11-13, 12-2, 12-5, 12-14,			
12-16, 13-1, 13-2, 13-3, 13-4, 13-6			
System Name.....	2-11	U	
System Status.....	11-1	Unicast.....	3-4
System Timeout.....	14-4	UNIX Syslog.....	11-7, 11-8
T		Upload Firmware.....	12-11
TCP/IP.....	3-1, 3-6, 3-7, 5-7, 5-11, 7-7, 7-8, 7-10, 7-	Use Server Detected IP.....	2-13
13, 7-17, 14-1		User Name.....	2-12
TCP/IP filter rule.....	7-7	User Specified IP Addr.....	2-13
Telnet.....	14-1	V	
Telnet Configuration.....	14-1	VT100.....	2-4
Telnet Under NAT.....	14-1	W	
TFTP		WAN DHCP.....	11-12, 11-13
And FTP Over WAN}.....	14-4	WAN Setup.....	2-14, 16-2
		What is PPTP?.....	D
		www.dyndns.org.....	2-13

www.zyxel.com vi

X

xDSL modem 2-3, 2-4, 3-13, 16-2, 16-3

XMODEM protocol 12-2

Z

ZyNOS 2-14, 11-3, 11-5, 12-2

ZyNOS F/W Version 11-3, 11-5, 12-2

ZyXEL Limited Warranty

 Note vi

ZyXEL website vi